



Installation, Operation, and Maintenance Manual

Model 3196 i-FRAME



ITT

ENGINEERED FOR LIFE

Table of Contents

| | |
|---|----|
| Introduction and Safety | 5 |
| Introduction | 5 |
| Safety | 6 |
| Safety terminology and symbols | 6 |
| Environmental safety | 7 |
| User safety | 8 |
| Ex-approved products | 9 |
| Product approval standards | 10 |
| Product warranty | 11 |
| Transportation and Storage | 12 |
| Inspect the delivery | 12 |
| Inspect the package | 12 |
| Inspect the unit | 12 |
| Transportation guidelines | 12 |
| Pump handling | 12 |
| Lifting methods | 12 |
| Storage guidelines | 15 |
| Pump storage requirements | 15 |
| Frostproofing | 15 |
| Product Description | 16 |
| General description 3196 | 16 |
| Part description 3196 | 17 |
| General description i-ALERT® Condition Monitor | 18 |
| Nameplate information | 20 |
| Installation | 23 |
| Preinstallation | 23 |
| Pump location guidelines | 23 |
| Foundation requirements | 24 |
| Baseplate-mounting procedures | 24 |
| Prepare the baseplate for mounting | 24 |
| Install the baseplate using shims or wedges | 25 |
| Install the baseplate using jackscrews | 26 |
| Install the baseplate using spring mounting | 28 |
| Install the baseplate using stilt mounting | 29 |
| Baseplate-leveling worksheet | 31 |
| Install the pump, driver, and coupling | 32 |
| Pump-to-driver alignment | 32 |
| Alignment checks | 32 |
| Permitted indicator values for alignment checks | 33 |
| Alignment measurement guidelines | 33 |
| Attach the dial indicators for alignment | 34 |
| Pump-to-driver alignment instructions | 34 |
| C-face adapter | 37 |
| Grout the baseplate | 37 |
| Piping checklists | 39 |
| General piping checklist | 39 |
| Suction-piping checklist | 40 |
| Discharge piping checklist | 42 |

| | |
|---|----|
| Commissioning, Startup, Operation, and Shutdown | 44 |
| Preparation for startup | 44 |
| Remove the coupling guard | 45 |
| Check the rotation - Frame Mounted | 47 |
| Impeller-clearance check | 47 |
| Impeller clearances (3196 and HT 3196) | 48 |
| Impeller-clearance setting | 48 |
| Set the impeller clearance - dial indicator method (all except CV 3196) | 48 |
| Set the impeller clearance - feeler gauge method (all except CV 3196) | 49 |
| Couple the pump and driver | 50 |
| Install the coupling guard | 51 |
| Bearing lubrication | 55 |
| Shaft-sealing options | 57 |
| Mechanical seal options | 57 |
| Connection of sealing liquid for mechanical seals | 57 |
| Packed stuffing box option | 58 |
| Connection of sealing liquid for a packed stuffing box | 58 |
| Dynamic-seal option | 58 |
| Set an elastomeric face seal | 59 |
| Prime the pump with the suction supply above the pump | 59 |
| Prime the pump with the suction supply below the pump | 60 |
| Other methods of priming the pump | 61 |
| Start the pump | 61 |
| Activate the i-ALERT® Condition Monitor | 62 |
| i-ALERT® Condition Monitor routine operation | 63 |
| Pump operation precautions | 63 |
| Shut down the pump | 64 |
| Deactivate the i-ALERT® Condition Monitor | 64 |
| Reset the i-ALERT® Condition Monitor | 65 |
| Make the final alignment of the pump and driver | 66 |
| Maintenance | 67 |
| Maintenance schedule | 67 |
| Bearing maintenance | 68 |
| Lubricating-oil requirements | 68 |
| Regrease the grease-lubricated bearings | 69 |
| Lubricate the bearings after a shutdown period | 70 |
| Mechanical-seal maintenance | 70 |
| Packed stuffing-box maintenance | 71 |
| Dynamic-seal maintenance | 72 |
| Disassembly precautions | 72 |
| Tools required | 73 |
| Drain the pump | 73 |
| Remove the coupling | 73 |
| Remove the back pull-out assembly | 74 |
| Remove the coupling hub | 76 |
| Impeller removal | 76 |
| Remove the impeller (STi, MTi, and LTi) | 76 |
| Remove the impeller (XLT-i, and i17) | 77 |
| Seal-chamber cover removal | 79 |
| Remove the seal-chamber cover (3196, CV 3196, HT 3196, LF 3196, 3796) | 79 |
| Remove the stuffing-box cover (3196, CV 3196, HT 3196, LF 3196, 3796) | 80 |
| Remove the dynamic seal | 81 |
| Remove the frame adapter (MTi, LTi, XLT-i, i17) | 82 |
| Remove the inboard labyrinth oil seal | 83 |
| Disassemble the power end (STi, MTi) | 83 |
| Disassemble the power end (STi and MTi with duplex bearings) | 85 |

| | |
|--|-----|
| Disassemble the power end (LTi) | 87 |
| Disassemble the power end (XLT-i and i17) | 89 |
| Disassemble the power end (XLT-i and i17 with duplex bearings) | 91 |
| Disassemble the bearing frame | 92 |
| Guidelines for i-ALERT® Condition Monitor disposal | 93 |
| Disassemble the C-face adapter | 93 |
| Pre-assembly inspections | 94 |
| Replacement guidelines | 94 |
| Shaft and sleeve replacement guidelines | 96 |
| Bearing-frame inspection | 97 |
| C-face adapter inspection | 98 |
| Seal chamber and stuffing box cover inspection | 98 |
| Bearings inspection | 100 |
| Bearing-housing inspection | 100 |
| Bearing fits and tolerances | 102 |
| Assemble the rotating element and the bearing frame (STi and MTi) | 102 |
| Assemble the rotating element and the bearing frame (STi and MTi with duplex bearings) | 105 |
| Assemble the rotating element and the bearing frame (LTi) | 108 |
| Assemble the rotating element and the bearing frame (XLT-i and i17) | 111 |
| Assemble the rotating element and the bearing frame (XLT-i and i17 with duplex bearings) | 114 |
| Assemble the frame | 118 |
| INPRO labyrinth oil seal description | 121 |
| Assemble the INPRO labyrinth oil seal | 122 |
| Assemble the C-face adapter | 122 |
| Shaft sealing | 123 |
| Seal the shaft with a dynamic seal | 123 |
| Seal the shaft with a packed stuffing box | 124 |
| Seal the shaft with a cartridge mechanical seal | 125 |
| Seal the shaft with a conventional inside-component mechanical seal | 126 |
| Seal the shaft with a conventional outside-component mechanical seal | 127 |
| Install the impeller | 130 |
| Attach the i-ALERT® Condition Monitor to the pump | 131 |
| Post-assembly checks | 132 |
| Install the back pull-out assembly (except HT 3196) | 132 |
| Bolt torque values | 135 |
| Shaft-end play | 136 |
| Bearing types | 136 |
| Spare parts | 136 |
| 3196 interchangeability | 137 |
| Frame lubrication conversion | 137 |
| Convert from greased-for-life or regreaseable to oil-lubricated bearings | 138 |
| Conversion from flood-oil to pure-oil mist | 139 |
| Convert from flood oil to regreaseable | 139 |
| Troubleshooting | 140 |
| Operation troubleshooting | 140 |
| Alignment troubleshooting | 141 |
| Assembly troubleshooting | 141 |
| i-ALERT® Condition Monitor troubleshooting | 141 |
| Parts Listings and Cross-Sectionals | 142 |
| Parts list | 142 |
| Certification: CE or CE ATEX | 151 |
| Certificates of conformance | 151 |

| | |
|--|-----|
| Other Relevant Documentation or Manuals | 157 |
| Local ITT Contacts | 158 |
| Regional offices | 158 |

Introduction and Safety

Introduction

Purpose of this manual

The purpose of this manual is to provide necessary information for:

- Installation
- Operation
- Maintenance



CAUTION:

Failure to observe the instructions contained in this manual could result in personal injury and property damage, and may void the warranty. Read this manual carefully before installing and using the product.

NOTICE:

Save this manual for future reference and keep it readily available.

Requesting other information

Special versions can be supplied with supplementary instruction leaflets. See the sales contract for any modifications or special version characteristics. For instructions, situations, or events that are not considered in this manual or in the sales documents, please contact the nearest ITT representative.

Always specify the exact product type and identification code when requesting technical information or spare parts.

Safety



WARNING:

- The operator must be aware of the pumpage and take appropriate safety precautions to prevent physical injury.
- Risk of serious injury or death. If any pressure-containing device is over-pressurized, it can explode, rupture, or discharge its contents. It is critical to take all necessary measures to avoid over-pressurization.
- Risk of death, serious personal injury, and property damage. Installing, operating, or maintaining the unit using any method not prescribed in this manual is prohibited. Prohibited methods include any modification to the equipment or use of parts not provided by ITT. If there is any uncertainty regarding the appropriate use of the equipment, please contact an ITT representative before proceeding.
- Risk of serious personal injury. Applying heat to impellers, propellers, or their retaining devices can cause trapped liquid to rapidly expand and result in a violent explosion. This manual clearly identifies accepted methods for disassembling units. These methods must be adhered to. Never apply heat to aid in their removal unless explicitly stated in this manual.
- If the pump or motor is damaged or leaking, electric shock, fire, explosion, liberation of toxic fumes, physical harm, or environmental damage may result. Do not operate the unit until the problem has been corrected or repaired.
- Risk of serious personal injury or property damage. Dry running may cause rotating parts within the pump to seize to non-moving parts. Do not run dry.
- Risk of death, serious personal injury, and property damage. Heat and pressure buildup can cause explosion, rupture, and discharge of pumpage. Never operate the pump with suction and/or discharge valves closed.
- Running a pump without safety devices exposes operators to risk of serious personal injury or death. Never operate a unit unless appropriate safety devices (guards, etc.) are properly installed. See specific information about safety devices in other sections of this manual.



CAUTION:

Risk of injury and/or property damage. Operating a pump in an inappropriate application can cause over pressurization, overheating, and/or unstable operation. Do not change the service application without the approval of an authorized ITT representative.


Safety terminology and symbols



About safety messages

It is extremely important that you read, understand, and follow the safety messages and regulations carefully before handling the product. They are published to help prevent these hazards:

- Personal accidents and health problems
- Damage to the product
- Product malfunction

Hazard levels

| Hazard level | Indication |
|---|--|
|  <p>DANGER:</p> | <p>A hazardous situation which, if not avoided, will result in death or serious injury</p> |

| Hazard level | Indication |
|---|--|
|  WARNING: | A hazardous situation which, if not avoided, could result in death or serious injury |
|  CAUTION: | A hazardous situation which, if not avoided, could result in minor or moderate injury |
| NOTICE: | <ul style="list-style-type: none"> • A potential situation which, if not avoided, could result in undesirable conditions • A practice not related to personal injury |

Hazard categories

Hazard categories can either fall under hazard levels or let specific symbols replace the ordinary hazard level symbols.

Electrical hazards are indicated by the following specific symbol:



Electrical Hazard:

These are examples of other categories that can occur. They fall under the ordinary hazard levels and may use complementing symbols:

- Crush hazard
- Cutting hazard
- Arc flash hazard

The Ex symbol

The Ex symbol indicates safety regulations for Ex-approved products when used in atmospheres that are potentially explosive or flammable.



Environmental safety

The work area

Always keep the station clean to avoid and/or discover emissions.

Waste and emissions regulations

Observe these safety regulations regarding waste and emissions:

- Appropriately dispose of all waste.
- Handle and dispose of the processed liquid in compliance with applicable environmental regulations.
- Clean up all spills in accordance with safety and environmental procedures.
- Report all environmental emissions to the appropriate authorities.



WARNING:

If the product has been contaminated in any way, such as from toxic chemicals or nuclear radiation, do NOT send the product to ITT unless it has been properly decontaminated.

Electrical installation

For electrical installation recycling requirements, consult your local electric utility.

Recycling guidelines

Always follow local laws and regulations regarding recycling.

User safety

General safety rules

These safety rules apply:

- Always keep the work area clean.
- Pay attention to the risks presented by gas and vapors in the work area.
- Avoid all electrical dangers. Pay attention to the risks of electric shock or arc flash hazards.
- Always bear in mind the risk of drowning, electrical accidents, and burn injuries.

Safety equipment

Use safety equipment according to the company regulations. Use this safety equipment within the work area:

- Helmet
- Safety goggles, preferably with side shields
- Protective shoes
- Protective gloves
- Gas mask
- Hearing protection
- First-aid kit
- Safety devices

Electrical connections

Electrical connections must be made by certified electricians in compliance with all international, national, state, and local regulations. For more information about requirements, see sections dealing specifically with electrical connections.

Precautions before work

Observe these safety precautions before you work with the product or are in connection with the product:

- Provide a suitable barrier around the work area, for example, a guard rail.
- Make sure that all safety guards are in place and secure.
- Make sure that you have a clear path of retreat.
- Make sure that the product cannot roll or fall over and injure people or damage property.
- Make sure that the lifting equipment is in good condition.
- Use a lifting harness, a safety line, and a breathing device as required.
- Allow all system and pump components to cool before you handle them.
- Make sure that the product has been thoroughly cleaned.
- Disconnect and lock out power before you service the pump.
- Check the explosion risk before you weld or use electric hand tools.


Precautions during work

Observe these safety precautions when you work with the product or are in connection with the product:



CAUTION:

Failure to observe the instructions contained in this manual could result in personal injury and property damage, and may void the warranty. Read this manual carefully before installing and using the product.

- Never work alone.
- Always wear protective clothing and hand protection.
- Stay clear of suspended loads.
- Always lift the product by its lifting device.
- Beware of the risk of a sudden start if the product is used with an automatic level control.
- Beware of the starting jerk, which can be powerful.
- Rinse the components in water after you disassemble the pump.
- Do not exceed the maximum working pressure of the pump.
- Do not open any vent or drain valve or remove any plugs while the system is pressurized. Make sure that the pump is isolated from the system and that pressure is relieved before you disassemble the pump, remove plugs, or disconnect piping.
- Never operate a pump without a properly installed coupling guard.
-  The coupling guard used in an ATEX classified environment must be constructed from a non-sparking material.

Hazardous liquids

The product is designed for use in liquids that can be hazardous to your health. Observe these rules when you work with the product:

- Make sure that all personnel who work with biologically hazardous liquids are vaccinated against diseases to which they may be exposed.
- Observe strict personal cleanliness.
- A small amount of liquid will be present in certain areas like the seal chamber.

Wash the skin and eyes

1. Follow these procedures for chemicals or hazardous fluids that have come into contact with your eyes or your skin:

| Condition | Action |
|---------------------------------------|--|
| Chemicals or hazardous fluids in eyes | <ol style="list-style-type: none"> 1. Hold your eyelids apart forcibly with your fingers. 2. Rinse the eyes with eyewash or running water for at least 15 minutes. 3. Seek medical attention. |
| Chemicals or hazardous fluids on skin | <ol style="list-style-type: none"> 1. Remove contaminated clothing. 2. Wash the skin with soap and water for at least 1 minute. 3. Seek medical attention, if necessary. |

Ex-approved products

Follow these special handling instructions if you have an Ex-approved unit.

Personnel requirements

These are the personnel requirements for Ex-approved products in potentially explosive atmospheres:

- All work on the product must be carried out by certified electricians and ITT-authorized mechanics. Special rules apply to installations in explosive atmospheres.
- All users must know about the risks of electric current and the chemical and physical characteristics of the gas, the vapor, or both present in hazardous areas.
- Any maintenance for Ex-approved products must conform to international and national standards (for example, IEC/EN 60079-17).

ITT disclaims all responsibility for work done by untrained and unauthorized personnel.

Product and product handling requirements

These are the product and product handling requirements for Ex-approved products in potentially explosive atmospheres:

- Only use the product in accordance with the approved motor data.

- The Ex-approved product must never run dry during normal operation. Dry running during service and inspection is only permitted outside the classified area.
- Before you start work on the product, make sure that the product and the control panel are isolated from the power supply and the control circuit, so they cannot be energized.
- Do not open the product while it is energized or in an explosive gas atmosphere.
- Make sure that thermal contacts are connected to a protection circuit according to the approval classification of the product, and that they are in use.
- Intrinsically safe circuits are normally required for the automatic level-control system by the level regulator if mounted in zone 0.
- The yield stress of fasteners must be in accordance with the approval drawing and the product specification.
- Do not modify the equipment without approval from an authorized ITT representative.
- Only use parts that are provided by an authorized ITT representative.

Product approval standards

Regular standards



WARNING:

Use of equipment unsuitable for the environment can pose risks of ignition and/or explosion. Ensure that the code classifications on the pump are compatible with the specific environment in which the equipment is to be installed. If they are not compatible, do not operate the equipment and contact an ITT representative before proceeding.

All standard products are approved according to CSA standards in Canada and UL standards in USA. The drive unit degree of protection follows IP68. See the nameplate for maximum submersion, according to standard IEC 60529.

All electrical ratings and performance of the motors comply with IEC 600341.


Explosion-proofing standards

All explosion-proof products for use in explosive atmospheres are designed in compliance with one or more of the following approvals:

- EN, ATEX Directive 94/9/EC
- FM According to NEC
 - Class 1 Div 1 Groups “C”, and “D”
 - Class 2 Div 1 Groups “E”, “F”, and “G”
 - Class 3 Div 1 Hazardous Locations

ATEX/IECEx:

- Group: IIC
- Category: Ex ia
- Temperature Class: T4 (for ambients up to 100°C)
- ATEX Marking: Ex II 1 G

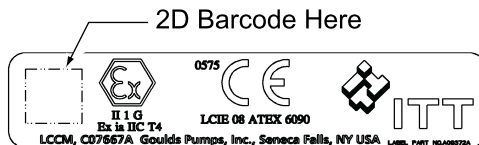

CSA certification

Intrinsically safe for:

- Class I, Div. 1, Groups A, B, C, D
- Class II, Div. 1, Groups E, F, G

- Class III
- Certified to Canadian and US requirements



SERIAL NO& YEAR OF
MANUFACTURE HERE.

Product warranty

Coverage

ITT undertakes to remedy faults in products from ITT under these conditions:

- The faults are due to defects in design, materials, or workmanship.
- The faults are reported to an ITT representative within the warranty period.
- The product is used only under the conditions described in this manual.
- The monitoring equipment incorporated in the product is correctly connected and in use.
- All service and repair work is done by ITT-authorized personnel.
- Genuine ITT parts are used.
- Only Ex-approved spare parts and accessories authorized by ITT are used in Ex-approved products.

Limitations

The warranty does not cover faults caused by these situations:

- Deficient maintenance
- Improper installation
- Modifications or changes to the product and installation made without consulting ITT
- Incorrectly executed repair work
- Normal wear and tear

ITT assumes no liability for these situations:

- Bodily injuries
- Material damages
- Economic losses

Warranty claim

ITT products are high-quality products with expected reliable operation and long life. However, should the need arise for a warranty claim, then contact your ITT representative.

Transportation and Storage

Inspect the delivery

Inspect the package

1. Inspect the package for damaged or missing items upon delivery.
2. Note any damaged or missing items on the receipt and freight bill.
3. File a claim with the shipping company if anything is out of order.
If the product has been picked up at a distributor, make a claim directly to the distributor.

Inspect the unit

1. Remove packing materials from the product.
Dispose of all packing materials in accordance with local regulations.
2. Inspect the product to determine if any parts have been damaged or are missing.
3. If applicable, unfasten the product by removing any screws, bolts, or straps.
For your personal safety, be careful when you handle nails and straps.
4. Contact your sales representative if anything is out of order.

Transportation guidelines

Pump handling



WARNING:
Dropping, rolling or tipping units, or applying other shock loads, can cause property damage and personal injury. Ensure that the unit is properly supported and secure during lifting and handling.



CAUTION:
Risk of injury or equipment damage from use of inadequate lifting devices. Ensure lifting devices (such as chains, straps, forklifts, cranes, etc.) are rated to sufficient capacity.

Lifting methods



- WARNING:**
- Risk of serious personal injury or equipment damage. Proper lifting practices are critical to safe transport of heavy equipment. Ensure that practices used are in compliance with all applicable regulations and standards.
 - Safe lifting points are specifically identified in this manual. It is critical to lift the equipment only at these points. Integral lifting eyes or eye bolts on pump and motor components are intended for use in lifting the individual components only.
 - Lifting and handling heavy equipment poses a crush hazard. Use caution during lifting and handling and wear appropriate Personal Protective Equipment (PPE, such as steel-toed shoes, gloves, etc.) at all times. Seek assistance if necessary.

Table 1: Methods

| Pump type | Lifting method |
|-------------------------------------|---|
| A bare pump without lifting handles | Use a suitable sling attached properly to solid points like the casing, the flanges, or the frames. |
| A bare pump with lifting handles | Lift the pump by the handles. |
| A base-mounted pump | Use slings under the pump casing and the drive unit, or under the base rails. |


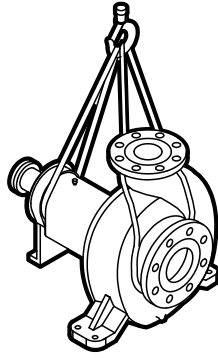
Examples


Figure 1: Example of a proper lifting method

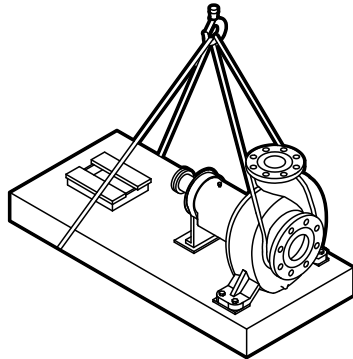

NOTICE:

Do not use this method to lift a Polyshield ANSI Combo with the pump and motor mounted. These items are not designed to handle the heavy weight of the Polyshield system. Doing so may result in equipment damage.

Figure 2: Example of a proper lifting method

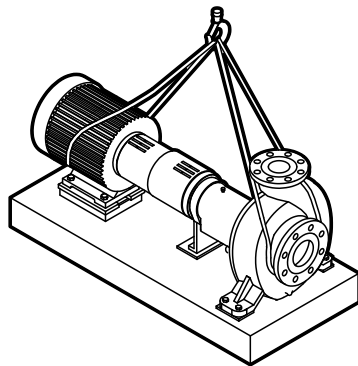

NOTICE:

Do not use this method to lift a Polyshield ANSI Combo with the pump and motor mounted. These items are not designed to handle the heavy weight of the Polyshield system. Doing so may result in equipment damage.

Figure 3: Example of a proper lifting method

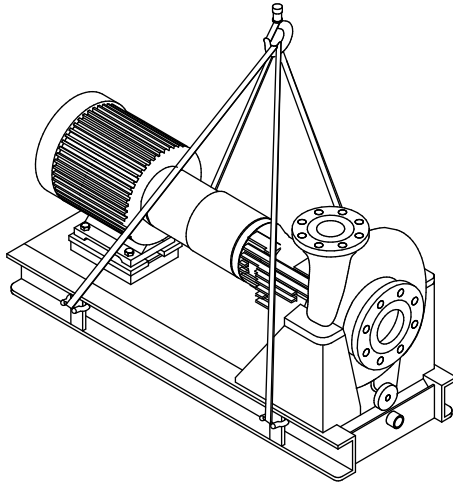


Figure 4: Example of a proper lifting method

NOTICE:

When lifting a unit for which a strap cannot be secured at the suction flange, secure the strap through the frame/frame adapter. Securing at the frame adapter will prevent slipping of the strap and possible equipment damage.

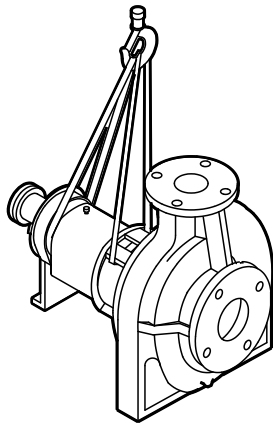


Figure 5: Example of a proper lifting method with a strap secured around the frame adapter

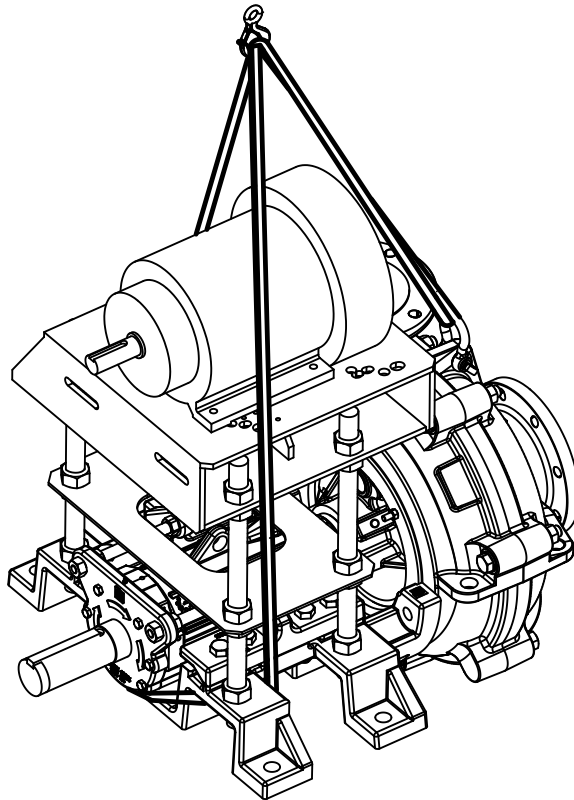


Figure 6: Example of offset overhead motor mount pump proper lifting method

Storage guidelines

Pump storage requirements

Storage requirements depend on the amount of time that you store the unit. The normal packaging is designed only to protect the unit during shipping.

| Length of time in storage | Storage requirements |
|--|---|
| Upon receipt/short-term (less than six months) | <ul style="list-style-type: none"> • Store in a covered and dry location. • Store the unit free from dirt and vibrations. |
| Long-term (more than six months) | <ul style="list-style-type: none"> • Store in a covered and dry location. • Store the unit free from heat, dirt, and vibrations. • Rotate the shaft by hand several times at least every three months. |

Treat bearing and machined surfaces so that they are well preserved. Refer to drive unit and coupling manufacturers for their long-term storage procedures.

You can purchase long-term storage treatment with the initial unit order or you can purchase it and apply it after the units are already in the field. Contact your local ITT sales representative.

Frostproofing

Table 2: Situations when the pump is or is not frostproof

| Situation | Condition |
|--|----------------------------|
| Operating | The pump is frostproof. |
| Immersed in a liquid | The pump is frostproof. |
| Lifted out of a liquid into a temperature below freezing | The impeller might freeze. |

Product Description

General description 3196

The 3196 is a horizontal overhung, open impeller, centrifugal pump. This pump is ANSI B73.1 compliant.

The model is based on 5 power ends and 29 hydraulic sizes.



Figure 7: 3196 pump

This table shows the number of hydraulic sizes available for each drive-unit size group.

| Drive-unit size group | Number of hydraulic sizes |
|-----------------------|---------------------------|
| STi | 5 |
| MTi | 15 |
| LTi | 15 |
| XLT-i | 5 |
| i-17 | 4 |



WARNING:

Use of equipment unsuitable for the environment can pose risks of ignition and/or explosion. Ensure that the code classifications on the pump are compatible with the specific environment in which the equipment is to be installed. If they are not compatible, do not operate the equipment and contact an ITT representative before proceeding.

Part description 3196

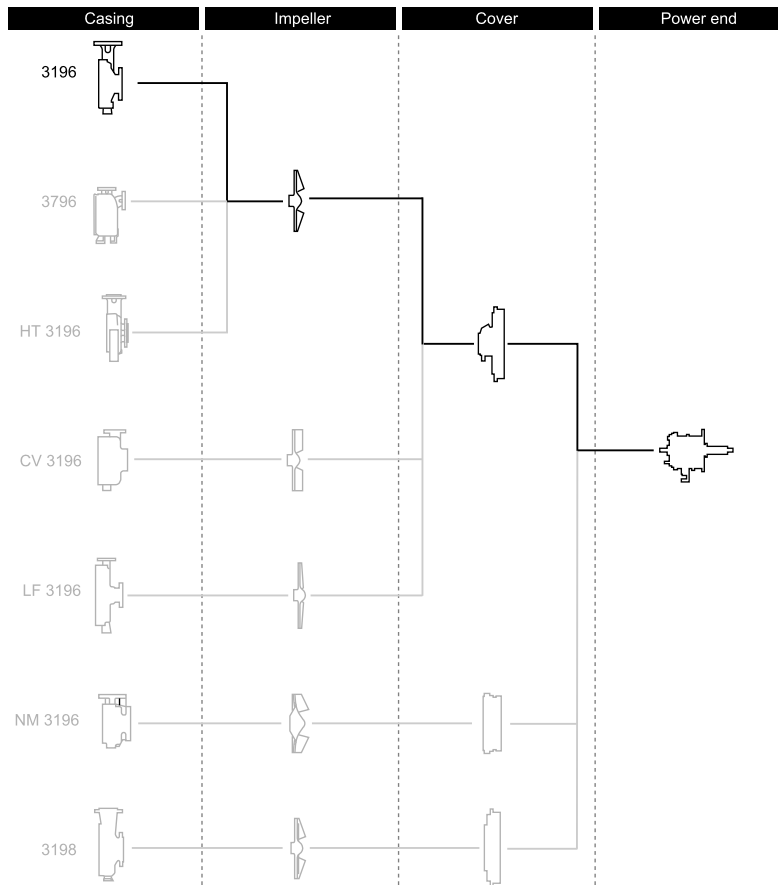


Figure 8: 3196 part description

Table 3: Casing

This table describes the pump casing parts.

| Part | Description |
|--------------------|--|
| Discharge | Top-centerline |
| Casing ventilation | Self venting |
| Gasket | Fully confined |
| Mounting method | Integral foot support for maximum resistance to misalignment due to piping loads. |
| Standard flange | ANSI flat-faced serrated flange |
| Optional flanges | One of the following flanges can be used: <ul style="list-style-type: none"> • ANSI class 150 raised-face serrated flange • ANSI class 300 flat-face serrated flange • ANSI class 300 raised-face serrated flange |

Impeller

The impeller is

- fully open
- threaded onto the shaft

The threads are sealed from the pumped liquid by a PTFE O-ring for the 3196.

Cover

Standard

- Stuffing Box cover designed for packing or a mechanical seal
- BigBore or TaperBore® PLUS seal chambers designed for improved performance of mechanical seals

Optional sealing design

- a dynamic seal is available which uses a repeller to pump liquid out of the stuffing box while the pump operates. A static seal prevents leakage when the pump is shut down.

Table 4: Power end

This table describes the main parts of the power end.

| Part | Description |
|---------------|---|
| Frame adapter | The ductile iron frame adapter has <ul style="list-style-type: none"> • a machined rabbet fit to the seal chamber/ stuffing box cover • a precision dowel pin fit to the bearing frame. |
| Power end | <ul style="list-style-type: none"> • Flood-oil lubrication is standard. • Oil-mist, regreasable and greased-for-life options are available. • The oil level is checked through a sight glass. • The power end is sealed with labyrinth seals. • The power end is made in the following sizes: <ul style="list-style-type: none"> • STi • MTi • LTi • XLT-i • i-17 |
| Shaft | The shaft is available with or without a sleeve. |
| Bearings | <p>The inboard bearing</p> <ul style="list-style-type: none"> • carries only radial loads. • is free to float axially in the frame. • is a single-row deep-groove ball bearing <p>The outboard bearing</p> <ul style="list-style-type: none"> • is shouldered and locked to the shaft and housing to enable it to carry radial and thrust loads. • is a double-row angular-contact bearing, except for the LTi which uses a pair of single-row angular-contact ball bearings mounted back-to-back. |

General description i-ALERT[®] Condition Monitor

Description

The i-ALERT[®]2 Condition Monitor is a compact, battery-operated monitoring device that continuously measures the vibration and temperature of the pump power end. The condition monitor uses blinking red LEDs to alert the pump operator when the pump exceeds pre-set vibration and temperature limits. This allows the pump operator to make changes to the process or the pump before a catastrophic failure occurs. The condition monitor is also equipped with a single green LED to indicate when it is operational and has sufficient battery life. (i-ALERT[®]2) Bluetooth Equipment Health Monitor option available. The i-ALERT[®]2 monitor allows customers to identify potential problems before they become costly failures. It tracks vibration, temperature and run-time hours and wirelessly syncs the data with a smart phone or tablet the i-ALERT[®]2 mobile app. More information available on <http://www.itproservices.com/aftermarket-products/monitoring/i-alert2/i-ALERT2.com>).

Software License Agreement

BY USING THE i-ALERT[®]2 CONDITION MONITOR, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

ITT Corporation and its subsidiaries, affiliates, either directly, or through its authorized sublicensees ("ITT") grants you a limited, non-exclusive license to use the software embedded in this device ("Software") in binary executable form in the normal operation of the i-ALERT[®]2 condition monitor for monitoring the condition of an Goulds Pump Inc. model. Title, ownership rights, and intellectual property rights in and to the Software remain in ITT or its third-party

providers. You agree that this license agreement does not need to be signed for it to take effect.

You acknowledge that this Software is the property of ITT and is protected under United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of ITT and/or its third-party providers and that the Software in source code form remains a valuable trade secret of ITT. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

Alarm mode

The condition monitor enters alarm mode when either vibration or temperature limits are exceeded over two consecutive readings within a ten minute period. Alarm mode is indicated with two red flashing LEDs within two second intervals.

Temperature and vibration limits

| Variable | Limit |
|-------------|---------------------------------------|
| Temperature | 91°C 195°F |
| Vibration | 100% increase over the baseline level |

Battery life

The i-ALERT[®]2 Condition Monitor battery is not replaceable. You must replace the entire unit once the battery runs out of power.

The battery life is not covered as part of the standard pump warranty.

This table shows the average condition monitor battery life under normal and alarm-mode operating conditions.

| Condition monitor operational state | Battery life |
|---|---------------------|
| Normal operating and environmental conditions | Three to five years |
| Alarm mode | One year |

Nameplate information

Important information for ordering

Every pump has nameplates that provide information about the pump. The nameplates are located on the casing and the bearing frame.

When you order spare parts, identify this pump information:

- Model
- Size
- Serial number
- Item numbers of the required parts

Refer to the nameplate on the pump casing for most of the information. See Parts List for item numbers.

Nameplate types

| Nameplate | Description |
|---------------------|--|
| Pump casing Pump | Provides information about the hydraulic characteristics of the pump. The formula for the pump size is: Discharge x Suction - Nominal Maximum Impeller Diameter in inches. (Example: 2x3-8) |
| Bearing frame | Provides information about the lubrication system used. |
| ATEX | If applicable, your pump unit might have an ATEX nameplate affixed to the pump, the baseplate, or the discharge head. The nameplate provides information about the ATEX specifications of this pump. |
| IECEX | If applicable, your pump unit might have the following IECEX nameplate affixed to the pump and/or baseplate. The nameplate provides information about the IECEX specifications of this pump. |

Nameplate on the pump casing using English units

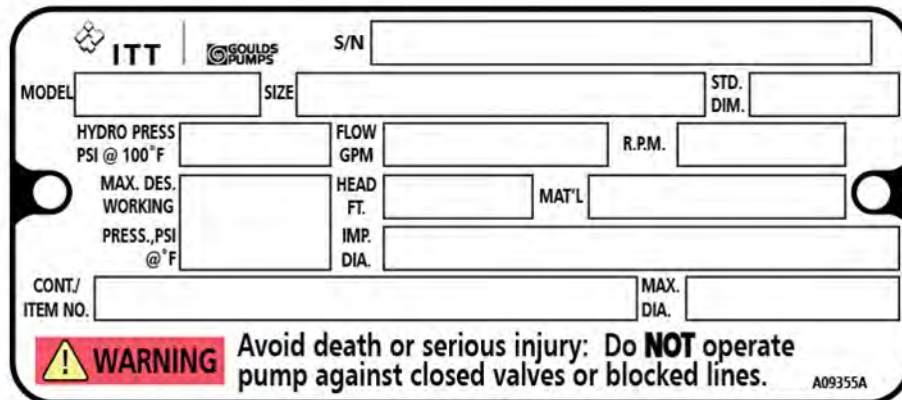


Figure 9: Nameplate on the pump casing using English units

Table 5: Explanation of nameplate on the pump casing

| Nameplate field | Explanation |
|----------------------|--|
| IMPLR. DIA. | Impeller diameter, in inches |
| MAX. DIA. | Maximum impeller diameter, in inches |
| GPM | Rated pump flow, in gallons per minute |
| FT HD | Rated pump head, in feet |
| RPM | Rated pump speed, revolutions per minute |
| MOD. | Pump model |
| SIZE | Size of the pump |
| STD. NO. | ANSI standard designation |
| MAT L. CONST. | Material of which the pump is constructed |
| SER. NO. | Serial number of the pump |
| MAX DSGN PSI @ 100°F | Maximum pressure at 100°F according to the pump design |

Nameplate on the pump casing using metric units

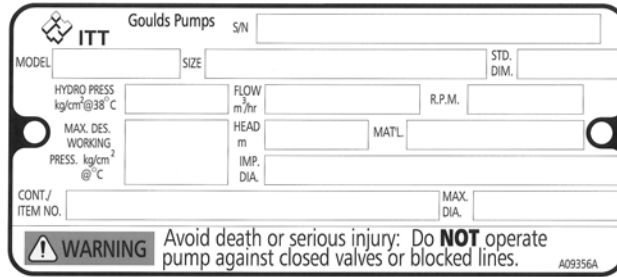


Figure 10: Metric units - nameplate on pump casing

Table 6: Explanation of the nameplate on the pump casing

| Nameplate field | Explanation |
|-------------------------------------|---|
| IMPLR. DIA. | Impeller diameter |
| MAX. DIA. | Maximum impeller diameter |
| M ³ /HR | Rated pump flow, in cubic meters per hour |
| M HD | Rated pump head, in meters |
| RPM | Rated pump speed, in revolutions per minute |
| MOD. | Pump model |
| SIZE | Size of the pump |
| STD. NO. | ANSI standard designation |
| MAT L. CONST | Material of which the pump is constructed |
| SER. NO. | Serial number of the pump |
| MAX. DSGN KG/CM ³ @ 20°C | Kilograms per cubic centimeter at 20°C |

Nameplate on the bearing frame

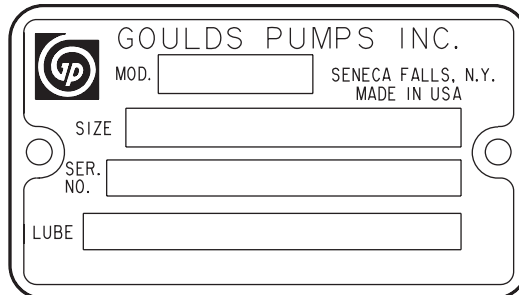


Figure 11: Nameplate on the bearing frame

Table 7: Explanation of the nameplate on the bearing frame

| Nameplate field | Explanation |
|-----------------|------------------------------|
| BRG. O. B. | Outboard bearing designation |
| BRG. I. B. | Inboard bearing designation |
| S/N | Serial number of the pump |
| LUBE | Lubricant, oil or grease |

ATEX nameplate



Figure 12: ATEX nameplate

| Nameplate field | Explanation |
|-----------------|-------------|
| II | Group 2 |
| 2 | Category 2 |

| Nameplate field | Explanation |
|-----------------|--|
| G/D | Pump can be used when gas and dust are present |
| T4 | Temperature class |



WARNING:

Use of equipment unsuitable for the environment can pose risks of ignition and/or explosion. Ensure that the code classifications on the pump are compatible with the specific environment in which the equipment is to be installed. If they are not compatible, do not operate the equipment and contact an ITT representative before proceeding.



Installation

Preinstallation

Precautions



WARNING:

-  When installing in a potentially explosive environment, ensure that the motor is properly certified.
-  All equipment being installed must be properly grounded to prevent unexpected discharge. Discharge can cause equipment damage, electric shock, and result in serious injury. Test the ground lead to verify it is connected correctly.

NOTICE:

- Electrical connections must be made by certified electricians in compliance with all international, national, state and local regulations.
- Supervision by an authorized ITT representative is recommended to ensure proper installation. Improper installation may result in equipment damage or decreased performance.

Pump location guidelines



WARNING:

Safe lifting points are specifically identified in this manual. It is critical to lift the equipment only at these points. Integral lifting eyes or eye bolts on pump and motor components are intended for use in lifting the individual components only.


| Guideline | Explanation/comment |
|---|--|
| Keep the pump as close to the liquid source as practically possible. | This minimizes the friction loss and keeps the suction piping as short as possible. |
| Make sure that the space around the pump is sufficient. | This facilitates ventilation, inspection, maintenance, and service. |
| If you require lifting equipment such as a hoist or tackle, make sure that there is enough space above the pump. | This makes it easier to properly use the lifting equipment and safely remove and relocate the components to a safe location. |
| Protect the unit from weather and water damage due to rain, flooding, and freezing temperatures. | This is applicable if nothing else is specified. |
| Do not install and operate the equipment in closed systems unless the system is constructed with properly-sized safety devices and control devices. | Acceptable devices: <ul style="list-style-type: none"> • Pressure relief valves • Compression tanks • Pressure controls • Temperature controls • Flow controls If the system does not include these devices, consult the engineer or architect in charge before you operate the pump. |
| Take into consideration the occurrence of unwanted noise and vibration. | The best pump location for noise and vibration absorption is on a concrete floor with subsoil underneath. |
| If the pump location is overhead, undertake special precautions to reduce possible noise transmission. | Consider a consultation with a noise specialist. |

Foundation requirements

Requirements

- The foundation must be able to absorb any type of vibration and form a permanent, rigid support for the unit.
- The location and size of the foundation bolt holes must match those shown on the assembly drawing provided with the pump data package.
- The foundation must weigh between two and three times the weight of the pump.
- Provide a flat, substantial concrete foundation in order to prevent strain and distortion when you tighten the foundation bolts.


Sleeve-type bolts

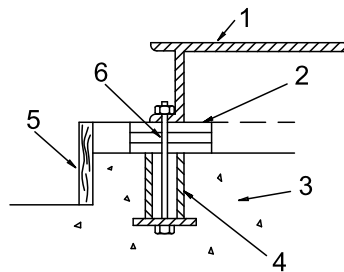

1. Baseplate
2. Shims or wedges
3. Foundation
4. Sleeve
5. Dam
6. Bolt

Figure 13: Sleeve type bolts

J-type bolts

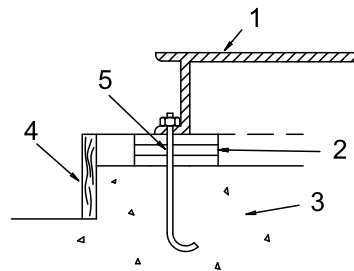

1. Baseplate
2. Shims or wedges
3. Foundation
4. Dam
5. Bolt

Figure 14: J-type bolts

Baseplate-mounting procedures

Prepare the baseplate for mounting

1. Remove all the attached equipment from the baseplate.
2. Clean the underside of the baseplate completely.
3. If applicable, coat the underside of the baseplate with an epoxy primer.

- Use an epoxy primer only if you used an epoxy-based grout.
- Remove the rust-proofing coat from the machined mounting pads using an appropriate solvent.
 - Remove water and debris from the foundation-bolt holes.


Install the baseplate using shims or wedges

Required tools:

- Two sets of shims or wedges for each foundation bolt
- Two machinist's levels
- Baseplate-leveling worksheet


This procedure is applicable to cast iron and fabricated steel baseplates.

- If you use sleeve-type bolts, fill the bolt sleeves with packing material or rags to prevent grout from entering the bolt holes.
- Put the sets of wedges or shims on each side of each foundation bolt. The sets of wedges should have a height of between 19 mm | 0.75 in. and 38 mm | 1.50 in.

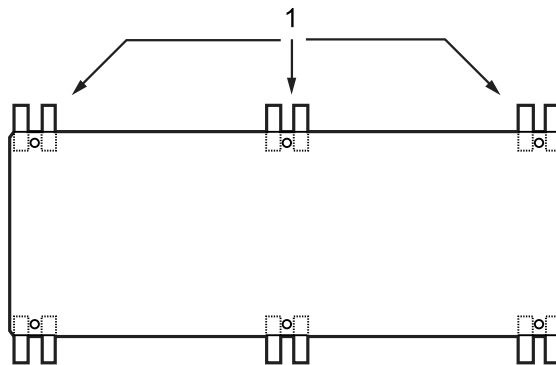

- Shims or wedges

Figure 15: Top view

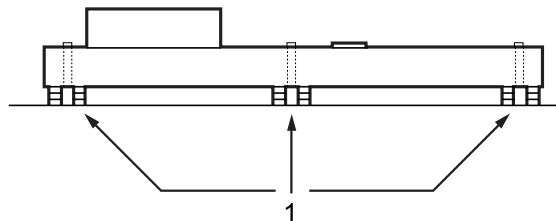

- Shims or wedges

Figure 16: Side view

- Lower the baseplate carefully onto the foundation bolts.
- Put the machinist's levels across the mounting pads of the driver and the mounting pads of the pump.

NOTICE:

Remove all dirt from the mounting pads in order to ensure that the correct leveling is achieved. Failure to do so can result in equipment damage or decreased performance.

- Level the baseplate both lengthwise and across by adding or removing shims or moving the wedges.

These are the leveling tolerances:

- A maximum difference of 3.2 mm | 0.125 in. lengthwise
- A maximum difference of 1.5 mm | 0.059 in. across

You can use the baseplate-leveling worksheet when you take the readings.

- Hand-tighten the nuts for the foundation.


Install the baseplate using jackscrews

Tools required:

- Anti-seize compound
- Jackscrews
- Bar stock
- Two machinist's levels
- Baseplate-leveling worksheet

This procedure is applicable to the feature-fabricated steel baseplate and the advantage base baseplate.

1. Apply an anti-seize compound on the jackscrews.
The compound makes it easier to remove the screws after you grout.
2. Lower the baseplate carefully onto the foundation bolts and perform these steps:
 - a) Cut the plates from the bar stock and chamfer the edges of the plates in order to reduce stress concentrations.
 - b) Put the plates between the jackscrews and the foundation surface.
 - c) Use the four jackscrews in the corners in order to raise the baseplate above the foundation.
Make sure that the distance between the baseplate and the foundation surface is between 19 mm | 0.75 in. and 38 mm | 1.50 in.
 - d) Make sure that the center jackscrews do not touch the foundation surface yet.

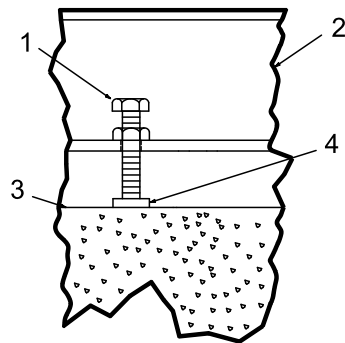

1. Jackscrew
2. Baseplate
3. Foundation
4. Plate

Figure 17: Jackscrews


3. Level the driver mounting pads:

NOTICE:

Remove all dirt from the mounting pads in order to ensure that the correct leveling is achieved. Failure to do so can result in equipment damage or decreased performance.

- a) Put one machinist's level lengthwise on one of the two pads.
- b) Put the other machinist's level across the ends of the two pads.

- c) Level the pads by adjusting the four jackscrews in the corners. Make sure that the machinist's level readings are as close to zero as possible, both lengthwise and across. Use the baseplate-leveling worksheet when you take the readings.

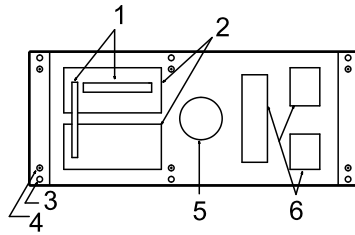

1. Machinist's levels
2. Driver's mounting pads
3. Foundation bolts
4. Jackscrews
5. Grout hole
6. Pump's mounting pads


Figure 18: Level driver mounting pads

4. Turn the center jackscrews down so that they rest on their plates on the foundation surface.
5. Level the pump mounting pads:

NOTICE:

Remove all dirt from the mounting pads in order to ensure that the correct leveling is achieved. Failure to do so can result in equipment damage or decreased performance.

- a) Put one machinist's level lengthwise on one of the two pads.
- b) Put the other level across the center of the two pads.
- c) Level the pads by adjusting the four jackscrews in the corners. Make sure that the machinist's level readings are as close to zero as possible, both lengthwise and across.

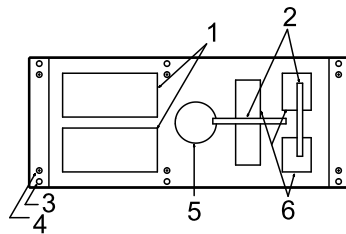

1. Driver's mounting pads
2. Machinist's levels
3. Foundation bolts
4. Jackscrews
5. Grout hole
6. Pump's mounting pads

Figure 19: Level pump mounting pads

6. Hand-tighten the nuts for the foundation bolts.
7. Check that the driver's mounting pads are level and adjust the jackscrews and the foundation bolts if necessary.

The correct level measurement is a maximum of 0.0167 mm/m | 0.002 in./ft .

Install the baseplate using spring mounting


NOTICE:

The spring-mounted baseplate is designed only to support piping loads from thermal expansion. Ensure that the suction and discharge piping are supported individually. Failure to do so may result in equipment damage.

The foundation pads are not provided with the baseplate. Make sure that the foundation pads are 316 stainless-steel plates, which have a 16-20 micro-inch surface finish.

Before you start this procedure, make sure that the foundation pads are correctly installed on the foundation/floor (see the manufacturer's instructions).

1. Put the baseplate on a support above the foundation/floor.
Make sure that there is enough space between the baseplate and the foundation/floor in order to install the spring assemblies.
2. Install the lower part of the spring assembly:
 - a) Screw the lower jam nut onto the spring stud.
 - b) Screw the lower adjusting nut onto the spring-stud, on top of the jam nut.
 - c) Set the lower adjusting nut to the correct height.
The correct height depends on the required distance between the foundation/floor and the baseplate.
 - d) Put a washer, a follower, a spring, and one more follower onto the lower adjusting nut.
3. Install the spring assembly on the baseplate:
 - a) Insert the spring assembly into the baseplate's anchorage hole from below.
 - b) Put a follower, a spring, another follower, and a washer onto the spring stud.
 - c) Fasten the spring assembly with the upper adjusting nut by hand.
4. Thread the upper jam nut onto the spring stud by hand.
5. Repeat steps 2 through 4 for all the spring assemblies.
6. Lower the baseplate so that the spring assemblies fit into the foundation pads.
7. Level the baseplate and make the final height adjustments:
 - a) Loosen the upper jam nuts and adjusting nuts.
 - b) Adjust the height and level the baseplate by moving the lower adjusting nuts.
 - c) When the baseplate is level, tighten the top adjusting nuts so that the top springs are not loose in their followers.
8. Fasten the lower and upper jam nuts on each spring assembly.

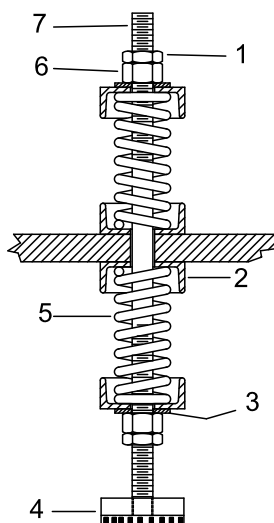

1. Upper jam nut
2. Follower
3. Washer
4. Foundation pads
5. Spring
6. Upper adjusting nut
7. Spring stud


Figure 20: Example of an installed spring assembly

Install the baseplate using stilt mounting

NOTICE:

The stilt-mounted baseplate is not designed to support static piping loads. Ensure that the suction and discharge piping are supported individually. Failure to do so may result in equipment damage.

1. Put the baseplate on a support above the foundation/floor.
Make sure that there is enough space between the baseplate and the foundation/floor to install the stilts.
2. Install the lower part of the stilt assembly:
 - a) Screw the lower jam nut and adjusting nut onto the stilt.
 - b) Set the lower adjusting nut to the correct height.
The correct height depends on the required distance between the foundation/floor and the baseplate.
 - c) Put a washer onto the lower adjusting- nut.
3. Install the stilt assembly on the baseplate:
 - a) Insert the stilt assembly into the baseplate's anchorage hole from below.
 - b) Put a washer onto the stilt.
 - c) Fasten the stilt assembly with the upper adjusting nut by hand.
4. Screw the upper jam nut onto the stilt by hand.
5. Repeat steps 2 through 4 for all the stilt assemblies.
6. Lower the baseplate so that the stilts fit into the foundation cups.
7. Level the baseplate and make the final height adjustments:
 - a) Loosen the upper jam nuts and adjusting nuts.
 - b) Adjust the height and level the baseplate by moving the lower adjusting nuts.
 - c) When the baseplate is level, tighten the top adjusting nuts.
8. Fasten the lower and upper jam nuts on each stilt.

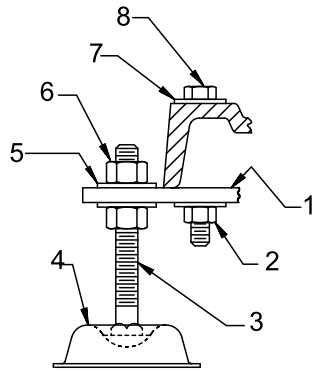


1. Mounting plate
2. Mounting nut
3. Stilt bolt
4. Foundation cups
5. Washer
6. Upper adjustment nut
7. Mounting washer
8. Mounting bolt

Figure 21: Example of an installed stilt assembly

Baseplate-leveling worksheet

Level measurements

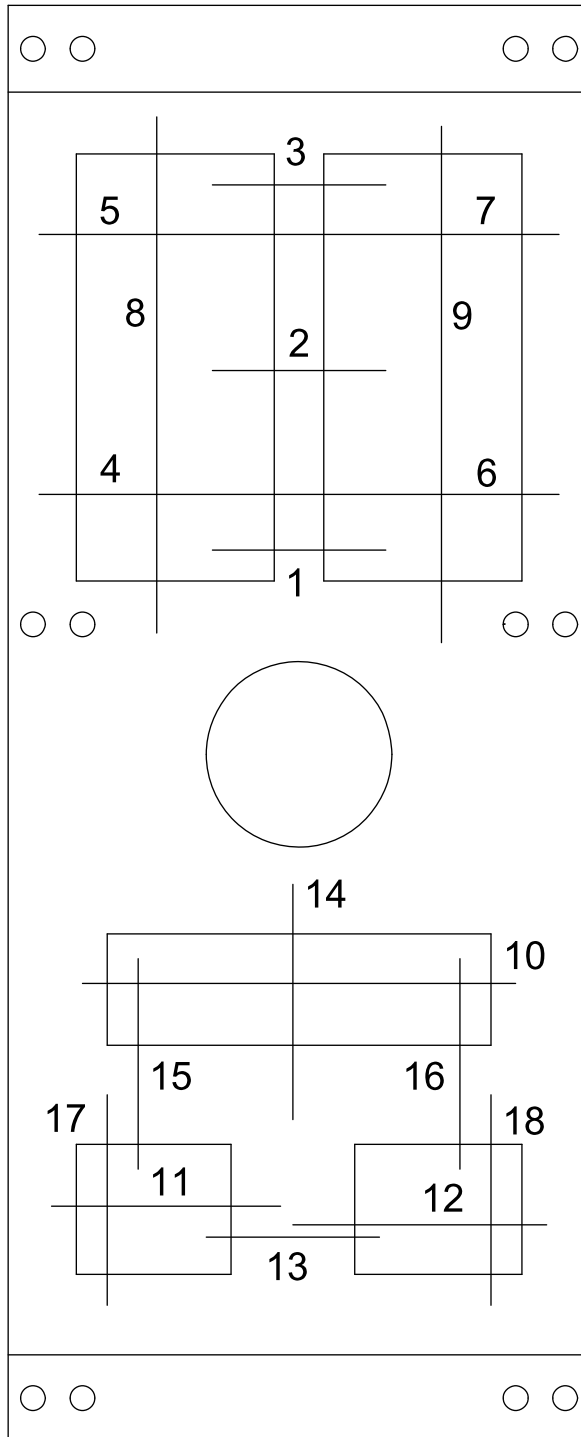

- 1) _____
- 2) _____
- 3) _____
- 4) _____
- 5) _____
- 6) _____
- 7) _____
- 8) _____
- 9) _____
- 10) _____
- 11) _____
- 12) _____
- 13) _____
- 14) _____
- 15) _____
- 16) _____
- 17) _____
- 18) _____

Install the pump, driver, and coupling

1. Mount and fasten the pump on the baseplate. Use applicable bolts.
2. Mount the driver on the baseplate . Use applicable bolts and hand tighten.
3. Install the coupling.
See the installation instructions from the coupling manufacturer.

Pump-to-driver alignment

Precautions



WARNING:

- Misalignment can cause decreased performance, equipment damage, and even catastrophic failure of frame-mounted units leading to serious injury. Proper alignment is the responsibility of the installer and the user of the unit. Check the alignment of all drive components prior to operating the unit.
 - Follow the coupling installation and operation procedures from the coupling manufacturer.
- Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.
- Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
- Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.

Alignment checks

When to perform alignment checks

You must perform alignment checks under these circumstances:

- The process temperature changes.
- The piping changes.
- The pump has been serviced.

Types of alignment checks

| Type of check | When it is used |
|--|---|
| Initial alignment (cold alignment) check | Prior to operation when the pump and the driver are at ambient temperature. |
| Final alignment (hot alignment) check | After operation when the pump and the driver are at operating temperature. |

Initial alignment (cold alignment) checks

| When | Why |
|--------------------------------|--|
| Before you grout the baseplate | This ensures that alignment can be accomplished. |
| After you grout the baseplate | This ensures that no changes have occurred during the grouting process. |
| After you connect the piping | This ensures that pipe strains have not altered the alignment. If changes have occurred, you must alter the piping to remove pipe strains on the pump flanges. |

Final alignment (hot alignment) checks

| When | Why |
|---------------------|--|
| After the first run | This ensures correct alignment when both the pump and the driver are at operating temperature. |
| Periodically | This follows the plant operating procedures. |

Permitted indicator values for alignment checks

NOTICE:

The specified permitted reading values are valid only at operating temperature. For cold settings, other values are permitted. The correct tolerances must be used. Failure to do so can result in misalignment.

When dial indicators are used to check the final alignment, the pump and drive unit are correctly aligned when these conditions are true:

- The Total Indicated Reading (T.I.R.) is at 0.05 mm | 0.002 in. or less at operating temperature.
- The tolerance of the indicator is 0.0127 mm per mm | 0.0005 in. per in. of indicator separation for the reverse dial indicator or laser method when the pump and driver are at operating temperature.

Cold settings for parallel vertical alignment

Introduction

This section shows the recommended preliminary (cold) settings for electric motor-driven pumps based on different temperatures of pumped fluid. Consult driver manufacturers for recommended cold settings for other types of drivers such as steam turbines and engines.

Recommended settings for models 3196, CV 3196, and LF 3196

| Pumpage temperature | Recommended setting |
|---------------------|---------------------------|
| 10°C 50°F | 0.05 mm 0.002 in., low |
| 65°C 150°F | 0.03 mm 0.001 in., high |
| 120°C 250°F | 0.12 mm 0.005 in., high |
| 175°C 350°F | 0.23 mm 0.009 in., high |
| 218°C 450°F | 0.33 mm 0.013 in., high |
| 228°C 550°F | 0.43 mm 0.017 in., high |
| 343°C 650°F | 0.53 mm 0.021 in., high |
| 371°C 700°F | 0.58 mm 0.023 in., high |

Alignment measurement guidelines

| Guideline | Explanation |
|---|--|
| Rotate the pump coupling half and the driver coupling half together so that the indicator rods have contact with the same points on the driver coupling half. | This prevents incorrect measurement. |
| Move or shim only the driver in order to make adjustments. | This prevents strain on the piping installations. |
| Make sure that the hold-down bolts for the driver feet are tight when you take indicator measurements. | This keeps the driver stationary since movement causes incorrect measurement. |
| Make sure that the hold-down bolts for the driver feet are loose before you make alignment corrections. | This makes it possible to move the driver when you make alignment corrections. |
| Check the alignment again after any mechanical adjustments. | This corrects any misalignments that an adjustment may have caused. |

Attach the dial indicators for alignment

You must have two dial indicators in order to complete this procedure.

1. Attach two dial indicators on the pump coupling half (X):
 - a) Attach one indicator (P) so that the indicator rod comes into contact with the perimeter of the driver coupling half (Y).
This indicator is used to measure parallel misalignment.
 - b) Attach the other indicator (A) so that the indicator rod comes into contact with the inner end of the driver coupling half.
This indicator is used to measure angular misalignment.

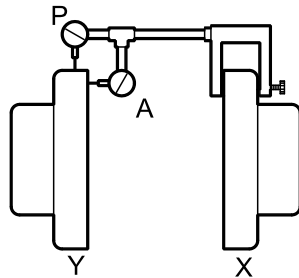


Figure 22: Dial indicator attachment

2. Rotate the pump coupling half (X) in order to check that the indicators are in contact with the driver coupling half (Y) but do not bottom out.
3. Adjust the indicators if necessary.

Pump-to-driver alignment instructions

Perform angular alignment for a vertical correction

1. Set the angular alignment indicator to zero at the top-center position (12 o'clock) of the driver coupling half (Y).
2. Rotate the indicator to the bottom-center position (6 o'clock).
3. Record the indicator reading.

| When the reading value is... | Then... |
|------------------------------|--|
| Negative | The coupling halves are farther apart at the bottom than at the top. Perform one of these steps: <ul style="list-style-type: none"> • Add shims in order to raise the feet of the driver at the shaft end. • Remove shims in order to lower the feet of the driver at the other end. |
| Positive | The coupling halves are closer at the bottom than at the top. Perform one of these steps: <ul style="list-style-type: none"> • Remove shims in order to lower the feet of the driver at the shaft end. • Add shims in order to raise the feet of the driver at the other end. |

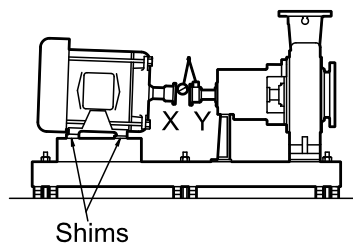


Figure 23: Side view of an incorrect vertical alignment

4. Repeat the previous steps until the permitted reading value is achieved.

Perform angular alignment for a horizontal correction

1. Set the angular alignment indicator (A) to zero on left side of the driver coupling half (Y), 90° from the top-center position (9 o'clock).
2. Rotate the indicator through the top-center position to the right side, 180° from the start position (3 o'clock).
3. Record the indicator reading.

| When the reading value is... | Then... |
|------------------------------|---|
| Negative | The coupling halves are farther apart on the right side than the left. Perform one of these steps: <ul style="list-style-type: none"> • Slide the shaft end of the driver to the left. • Slide the opposite end to the right. |
| Positive | The coupling halves are closer together on the right side than the left. Perform one of these steps: <ul style="list-style-type: none"> • Slide the shaft end of the driver to the right. • Slide the opposite end to the left. |

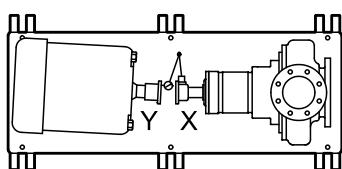


Figure 24: Top view of an incorrect horizontal alignment

4. Repeat the previous steps until the permitted reading value is achieved.

Perform parallel alignment for a vertical correction

Refer to the alignment table in "Permitted indicator values for alignment checks" (see Table of Contents for location of table) for the proper cold alignment value based on the motor temperature rise and the pump operating temperature.

Before you start this procedure, make sure that the dial indicators are correctly set up.

A unit is in parallel alignment when the parallel indicator (P) does not vary by more than 0.05 mm | 0.002 in. as measured at four points 90° apart at the operating temperature.

1. Set the parallel alignment indicator (P) to zero at the top-center position (12 o'clock) of the driver coupling half (Y).
2. Rotate the indicator to the bottom-center position (6 o'clock).
3. Record the indicator reading.

| When the reading value is... | Then... |
|------------------------------|---|
| Negative | The pump coupling half (X) is lower than the driver coupling half (Y). Remove shims of a thickness equal to half of the indicator reading value under each driver foot. |
| Positive | The pump coupling half (X) is higher than the driver coupling half (Y). Add shims of a thickness equal to half of the indicator reading value to each driver foot. |

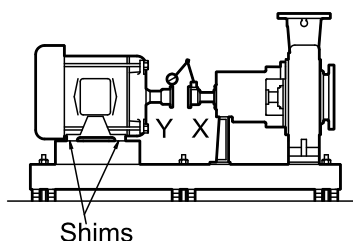


Figure 25: Side view of an incorrect vertical alignment

4. Repeat the previous steps until the permitted reading value is achieved.

NOTICE:

The specified permitted reading values are valid only at operating temperature. For cold settings, other values are permitted. The correct tolerances must be used. Failure to do so can result in misalignment.

Perform parallel alignment for a horizontal correction

NOTICE:

The specified permitted reading values are valid only at operating temperature. For cold settings, other values are permitted. The correct tolerances must be used. Failure to do so can result in misalignment.

A unit is in parallel alignment when the parallel indicator (P) does not vary by more than 0.05 mm | 0.002 in. as measured at four points 90° apart at the operating temperature.

1. Set the parallel alignment indicator (P) to zero on the left side of the driver coupling half (Y), 90° from the top-center position (9 o'clock).
2. Rotate the indicator through the top-center position to the right side, 180° from the start position (3 o'clock).
3. Record the indicator reading.

| When the reading value is... | Then... |
|------------------------------|---|
| Negative | The driver coupling half (Y) is to the left of the pump coupling half (X). |
| Positive | The driver coupling half (Y) is to the right of the pump coupling half (X). |

4. Slide the driver carefully in the appropriate direction. Make sure to slide the driver evenly. Failure to do so can negatively affect horizontal angular correction.

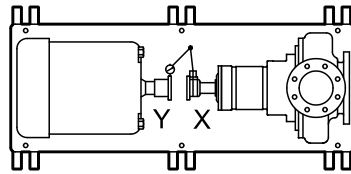


Figure 26: Top view of an incorrect horizontal alignment

5. Repeat the previous steps until the permitted reading value is achieved.

NOTICE:

The specified permitted reading values are valid only at operating temperature. For cold settings, other values are permitted. The correct tolerances must be used. Failure to do so can result in misalignment.

Perform complete alignment for a vertical correction

A unit is in complete alignment when both the angular indicator (A) and the parallel indicator (P) do not vary by more than 0.05 mm | 0.002 in. as measured at four points 90° apart.

1. Set the angular and parallel dial indicators to zero at the top-center position (12 o'clock) of the driver coupling half (Y).
2. Rotate the indicators to the bottom-center position (6 o'clock).
3. Record the indicator readings.
4. Make corrections according to the separate instructions for angular and parallel alignment until you obtain the permitted reading values.

Perform complete alignment for a horizontal correction

A unit is in complete alignment when both the angular indicator (A) and the parallel indicator (P) do not vary by more than 0.05 mm | 0.002 in. as measured at four points 90° apart.

1. Set the angular and parallel dial indicators to zero at the left side of the driver coupling half (Y), 90° from the top-center position (9 o'clock).
2. Rotate the indicators through the top-center position to the right side, 180° from the start position (3 o'clock).
3. Record the indicator readings.
4. Make corrections according to the separate instructions for angular and parallel alignment until you obtain the permitted reading values.

C-face adapter

Intended use

The C-face adapter is a device that attaches the pump to the drive unit to minimize the axial and radial play between the two coupling halves.

Illustration

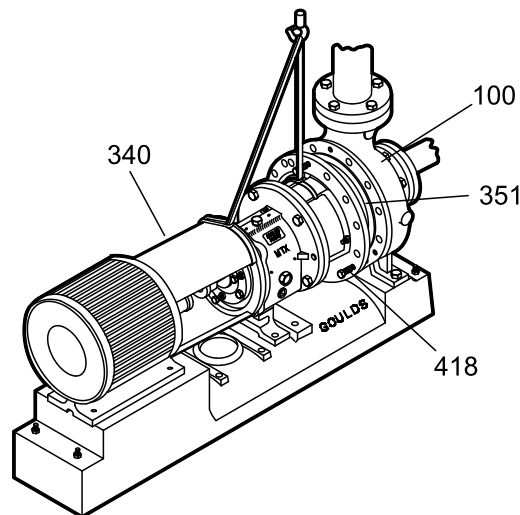


Figure 27: Example of the C-face adapter (340)

Alignment requirements

When you use a C-face adapter, you do not have to align the shaft. The rabbeted fit of the drive unit to the adapter and the adapter to the bearing housing automatically align the shafts to within the specified limits.

Specified limits


A C-face adapter can attain a nominal alignment of 0.18mm | 0.007 in. Total Indicated Runout (T.I.R.). However, because of the stack-up of the machining tolerances of the various parts, the alignment can be as high as 0.38mm | 0.015 inches TIR. Use of a flexible coupling with an elastomeric insert is required to maintain acceptable pump and motor life when using a c-face adapter.

If high reliability (with shaft alignments of less than 0.05mm | 0.002 in.) is required for the pump, use a foot-mounted drive unit on a precision-machined baseplate and perform a conventional alignment.

Grout the baseplate

Required equipment:


- Cleaners: Do not use an oil-based cleaner because the grout will not bond to it. See the instructions provided by the grout manufacturer.
 - Grout: Non-shrink grout is recommended.
1. Clean all the areas of the baseplate that will come into contact with the grout.
 2. Build a dam around the foundation.
 3. Thoroughly wet the foundation that will come into contact with the grout.
 4. Pour grout through the grout hole into the baseplate up to the level of the dam.
 - When you pour the grout, remove air bubbles from it by using one of these methods:
 - Puddle with a vibrator.
 - Pump the grout into place.
 5. Allow the grout to set.

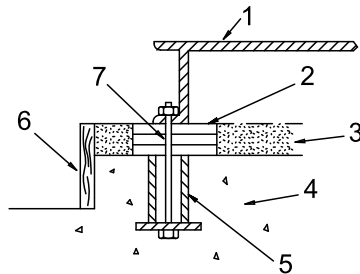

1. Baseplate
2. Shims or wedges
3. Grout
4. Foundation
5. Sleeve
6. Dam
7. Bolt

Figure 28: Pour grout into baseplate

6. Fill the remainder of the baseplate with grout, and allow the grout to set for at least 48 hours.

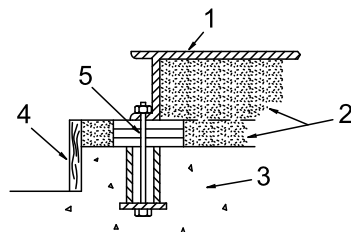

1. Baseplate
2. Grout
3. Foundation
4. Dam
5. Bolt

Figure 29: Fill remainder of baseplate with grout

7. Tighten the foundation bolts.

Piping checklists

General piping checklist

Precautions



WARNING:

Risk of premature failure. Casing deformation can result in misalignment and contact with rotating parts, causing excess heat generation and sparks. Flange loads from the piping system, including those from the thermal expansion of the piping, must not exceed the limits of the pump.

NOTICE:

Vary the capacity with the regulating valve in the discharge line. Never throttle the flow from the suction side. This action can result in decreased performance, unexpected heat generation, and equipment damage.



Piping guidelines

Guidelines for piping are given in the Hydraulic Institute Standards available from the Hydraulic Institute at 9 Sylvan Way, Parsippany, NJ 07054-3802. You must review this document before you install the pump.

Checklist

| Check | Explanation/comment | Checked |
|--|--|---------|
| Check that all piping is supported independently of, and lined up naturally with, the pump flange. | This helps to prevent: <ul style="list-style-type: none"> • Strain on the pump • Misalignment between the pump and the drive unit • Wear on the pump bearings and the coupling • Wear on the pump bearings, seal, and shafting | |
| Keep the piping as short as possible. | This helps to minimize friction losses. | |
| Check that only necessary fittings are used. | This helps to minimize friction losses. | |
| Do not connect the piping to the pump until: <ul style="list-style-type: none"> • The grout for the baseplate or sub-base becomes hard. • The hold-down bolts for the pump and the driver are tightened. | — | |
| If the pump handles liquids at elevated temperatures, make sure that the expansion loops and joints are properly installed. | This helps to prevent misalignment due to linear expansion of the piping. | |

Example: Installation for expansion
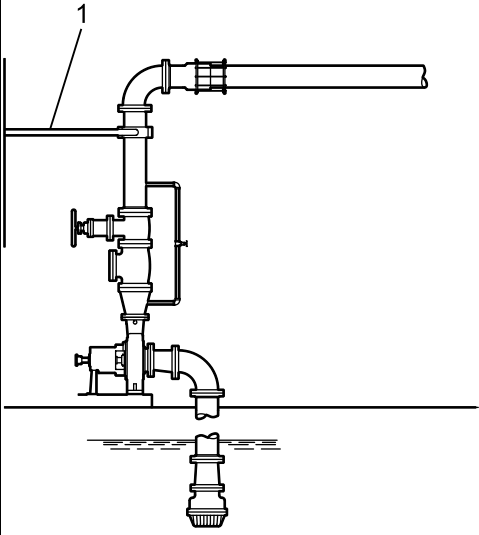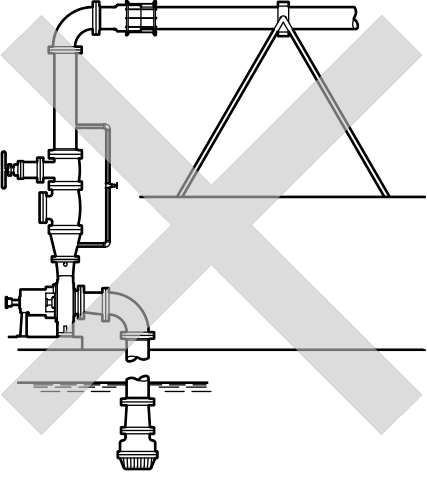
| Correct | Incorrect |
|---|--|
| <p>This illustration shows a correct installation for expansion:</p>  <p>1. Expansion loop/joint</p> | <p>This illustration shows an incorrect installation for expansion:</p>  |

Fastening



WARNING:

Risk of serious personal injury or property damage. Fasteners such as bolts and nuts are critical to the safe and reliable operation of the product. Ensure appropriate use of fasteners during installation or reassembly of the unit.

- Use fasteners of the proper size and material only.
- Replace all corroded fasteners.
- Ensure that all fasteners are properly tightened and that there are no missing fasteners.

Suction-piping checklist

Performance curve reference

Net positive suction head available (NPSH_A) must always exceed NPSH required (NPSH_R) as shown on the published performance curve of the pump.

Suction-piping checks

| Check | Explanation/comment | Checked |
|---|--|---------|
| <p>Check that the distance between the inlet flange of the pump and the closest elbow is at least two pipe diameters. Check that the distance between the inlet flange of the pump and the closest elbow is at least five pipe diameters.</p> | <p>This minimizes the risk of cavitation in the suction inlet of the pump due to turbulence. See the Example sections for illustrations.</p> | |
| <p>Check that elbows in general do not have sharp bends.</p> | <p>See the Example sections for illustrations. —</p> | |
| <p>Check that the suction piping is one or two sizes larger than the suction inlet of the pump. Install an eccentric reducer between the pump inlet and the suction piping.</p> | <p>The suction piping must never have a smaller diameter than the suction inlet of the pump. See the Example sections for illustrations.</p> | |

| Check | Explanation/comment | Checked |
|---|--|---------|
| Check that the eccentric reducer at the suction flange of the pump has the following properties: <ul style="list-style-type: none"> Sloping side down Horizontal side at the top | See the example illustrations. | |
| Suggested suction strainers are used. Check that they are at least three times the area of the suction piping. Monitor the pressure drop across the suction strainer. An increased pressure drop across the strainer of 5 psi (34.5 kPa) indicates that the strainer should be removed and cleaned. After a period of time (24 hours minimum) system flushing should be complete and the suction strainer can be removed. | Suction strainers help to prevent debris from entering the pump. Mesh holes with a minimum diameter of 1/16 in. (1.6 mm) are recommended. Liquids with specific gravity less than 0.60 a pressure drop across the suction strainer may be due to ice buildup. Ice buildup can cause turbulence, low pressure areas and pumpage vaporization. | |
| If more than one pump operates from the same liquid source, check that separate suction-piping lines are used for each pump. | This recommendation helps you to achieve a higher pump performance and prevent vapor locking especially with specific gravity of liquid less than 0.60. | |
| If necessary, make sure that the suction piping includes a drain valve and that it is correctly installed. | — | |
| Assure adequate insulation is applied for liquids with specific gravity less than 0.60. | To assure sufficient NPSHa. | |



Liquid source below the pump

| Check | Explanation/comment | Checked |
|---|---|---------|
| Make sure that the suction piping is free from air pockets. | This helps to prevent the occurrence of air and cavitation in the pump inlet. | |
| Check that the suction piping slopes upwards from the liquid source to the pump inlet. | — | |
| If the pump is not self-priming, check that a device for priming the pump is installed. | Use a foot valve with a diameter that is at least equivalent to the diameter of the suction piping. | |



Liquid source above the pump

| Check | Explanation/comment | Checked |
|--|--|---------|
| Check that an isolation valve is installed in the suction piping at a distance of at least two times the pipe diameter from the suction inlet. | This permits you to close the line during pump inspection and maintenance. Do not use the isolation valve to throttle the pump. Throttling can cause these problems: <ul style="list-style-type: none"> Loss of priming Excessive temperatures Damage to the pump Voiding the warranty | |
| Make sure that the suction piping is free from air pockets. | This helps to prevent the occurrence of air and cavitation in the pump inlet. | |
| Check that the piping is level or slopes downward from the liquid source. | — | |
| Make sure that no part of the suction piping extends below the suction flange of the pump. | — | |
| Make sure that the suction piping is adequately submerged below the surface of the liquid source. | This prevents air from entering the pump through a suction vortex. | |

Example: Elbow close to the pump suction inlet
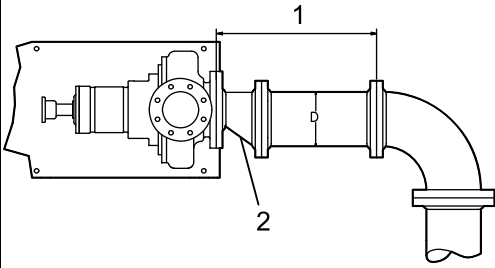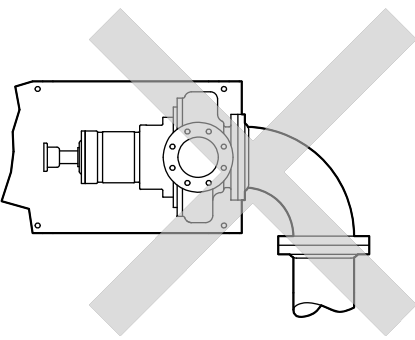
| Correct | Incorrect |
|--|--|
| <p>The correct distance between the inlet flange of the pump and the closest elbow must be at least five pipe diameters.</p>  <ol style="list-style-type: none"> 1. Enough distance to prevent cavitation 2. Eccentric reducer with a level top |  |

Example: Suction piping equipment
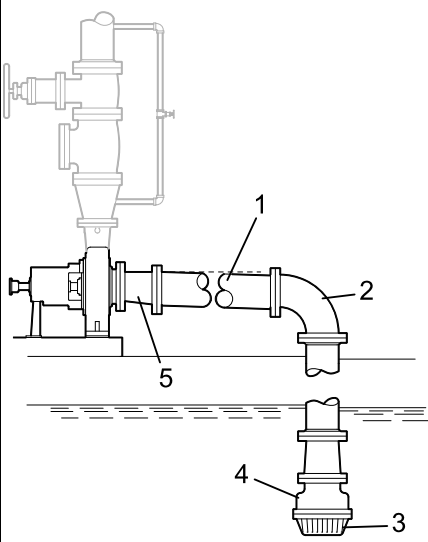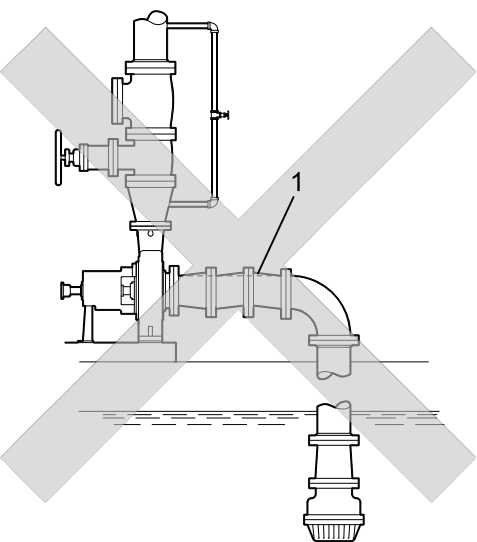
| Correct | Incorrect |
|--|--|
|  <ol style="list-style-type: none"> 1. Suction pipe sloping upwards from liquid source 2. Long-radius elbow 3. Strainer 4. Foot valve 5. Eccentric reducer with a level top |  <ol style="list-style-type: none"> 1. Air pocket, because the eccentric reducer is not used and because the suction piping does not slope gradually upward from the liquid source |


Discharge piping checklist

Checklist

| Check | Explanation/comment | Checked |
|--|--|---------|
| <p>Check that an isolation valve is installed in the discharge line. For specific gravity less than 0.60, minimize distance from pump discharge.</p> | <p>The isolation valve is required for:</p> <ul style="list-style-type: none"> • Priming • Regulation of flow • Inspection and maintenance of the pump • Reduce risk of pumpage vaporization and vapor locking at low flow rates for low specific gravity liquids. <p>See Example: Discharge piping equipment for illustrations.</p> | |

| Check | Explanation/comment | Checked |
|---|--|---------|
| Check that a check valve is installed in the discharge line, between the isolation valve and the pump discharge outlet. | The location between the isolation valve and the pump allows inspection of the check valve. The check valve prevents damage to the pump and seal due to the back flow through the pump, when the drive unit is shut off. It is also used to restrain the liquid flow. See Example: Discharge piping equipment for illustrations. | |
| If increasers are used, check that they are installed between the pump and the check valve. | See Example: Discharge piping equipment for illustrations. | |
| If quick-closing valves are installed in the system, check that cushioning devices are used. | This protects the pump from surges and water hammer. | |

Example: Discharge piping equipment

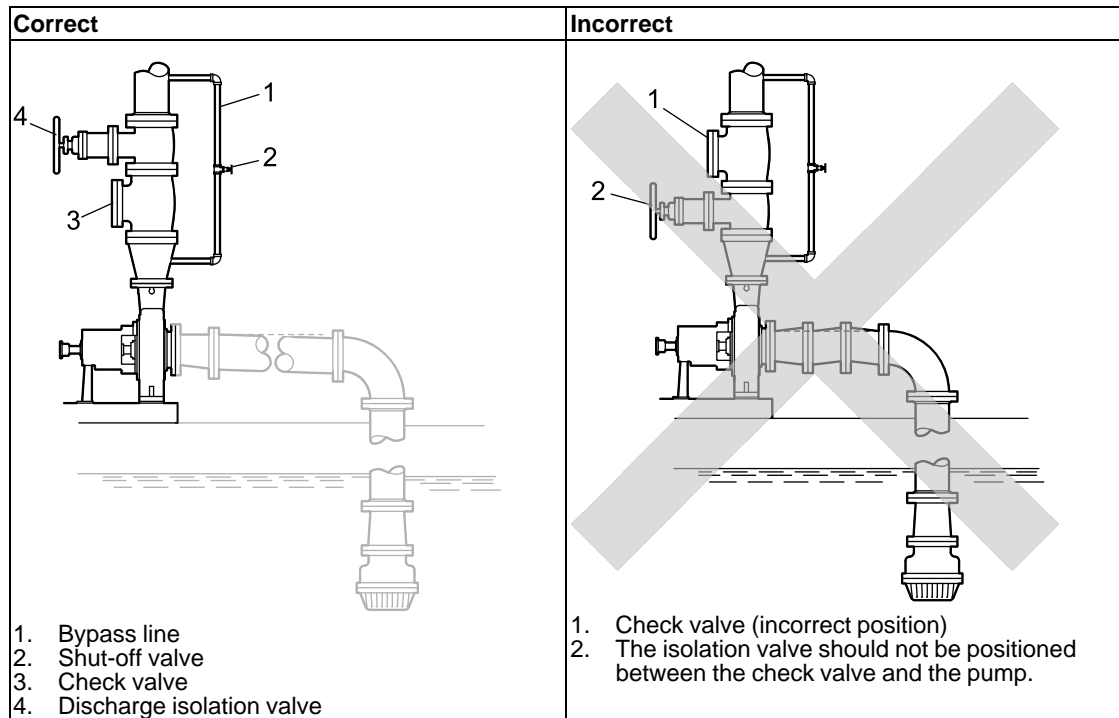

Commissioning, Startup, Operation, and Shutdown

Preparation for startup



WARNING:

- Breach of containment can cause fire, burns, and other serious injury. Failure to follow these precautions before starting the unit may lead to dangerous operating conditions, equipment failure, and breach of containment.
 - Risk of serious physical injury or death. Exceeding any of the pump operating limits (e.g. - pressure, temperature, power, etc.) could result in equipment failure, such as explosion, seizure, or breach of containment. Assure that the system operating conditions are within the capabilities of the pump.
 - Risk of explosion and serious physical injury. Do not operate pump with blocked system piping or with suction or discharge valves closed. This can result in rapid heating and vaporization of pumpage.
 - Risk of breach of containment and equipment damage. Ensure the pump operates only between minimum and maximum rated flows. Operation outside of these limits can cause high vibration, mechanical seal and/or shaft failure, and/or loss of prime.
 - Running a pump without safety devices exposes operators to risk of serious personal injury or death. Never operate a unit unless appropriate safety devices (guards, etc.) are properly installed.
 - Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.
 - Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
 - Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.
 - Starting the pump in reverse rotation can result in the contact of metal parts, heat generation, and breach of containment. Ensure correct driver settings prior to starting any pump.
 - Risk of death or serious injury. Leaking fluid can cause fire and/or burns. Ensure all openings are sealed prior to filling the pump.
-

Precautions

NOTICE:

- Excessive warm-up rates can cause equipment damage. Ensure the warm-up rate does not exceed 1.4°C | 2.5°F per minute.
 - When a cartridge mechanical seal is used, ensure that the set screws in the seal locking ring are tightened and that the centering clips have been removed prior to startup. This prevents seal or shaft sleeve damage by ensuring that the seal is properly installed and centered on the sleeve.
-

You must follow these precautions before you start the pump:


- Flush and clean the system thoroughly to remove dirt or debris in the pipe system in order to prevent premature failure at initial startup.
- Bring variable-speed drivers to the rated speed as quickly as possible.
- Run a new or rebuilt pump at a speed that provides enough flow to flush and cool the close-running surfaces of the stuffing-box bushing.

- If temperatures of the pumped fluid will exceed 93°C | 200°F, then warm up the pump prior to operation. Circulate a small amount of fluid through the pump until the casing temperature is within 38°C | 100°F of the fluid temperature. Accomplish this by flowing fluid from pump inlet to discharge drain (optionally, the casing vent can be included in warm-up circuit but not required). Soak for (2) hours at process fluid temperature.


At initial startup, do not adjust the variable-speed drivers or check for speed governor or over-speed trip settings while the variable-speed driver is coupled to the pump. If the settings have not been verified, then uncouple the unit and refer to instructions supplied by the driver manufacturer.

Remove the coupling guard

1. Remove the nut, bolt, and washers from the slotted hole in the center of the coupling guard.
2. Slide the driver half of the coupling guard toward the pump.

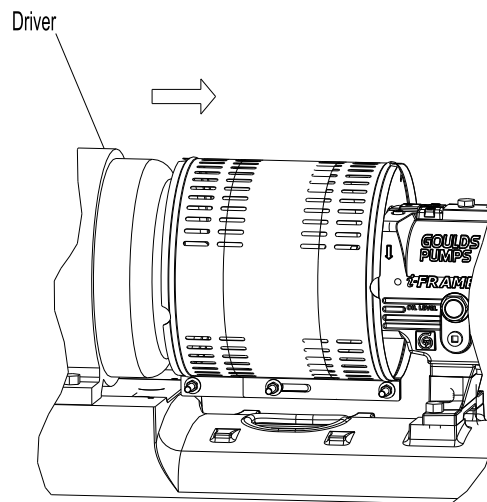


3. Remove the nut, bolt, and washers from the driver half of the coupling guard.
4. Remove the driver-side end plate.

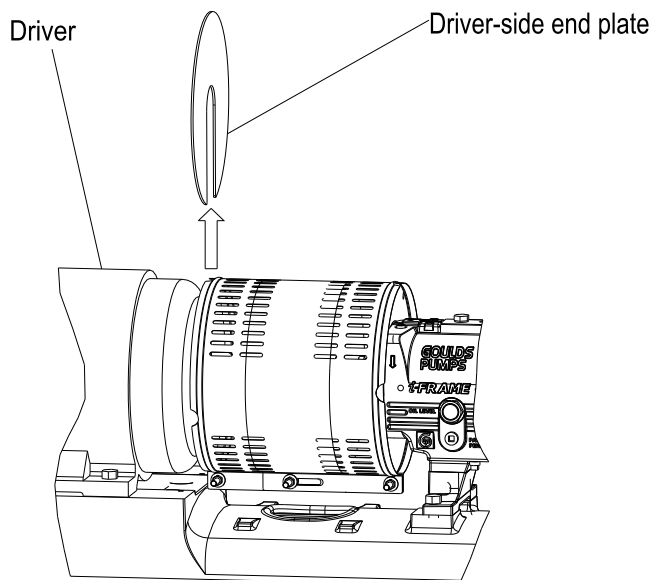


5. Remove the driver half of the coupling guard:
 - a) Slightly spread the bottom apart.

b) Lift upwards.

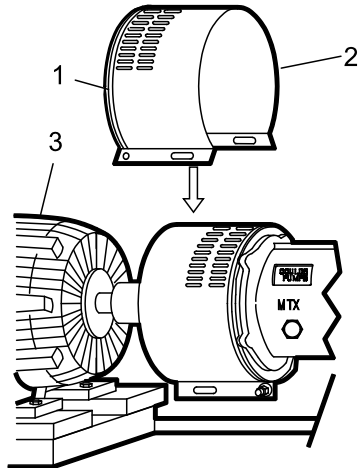


1. Annular groove
2. Driver half of the coupling guard
3. Driver

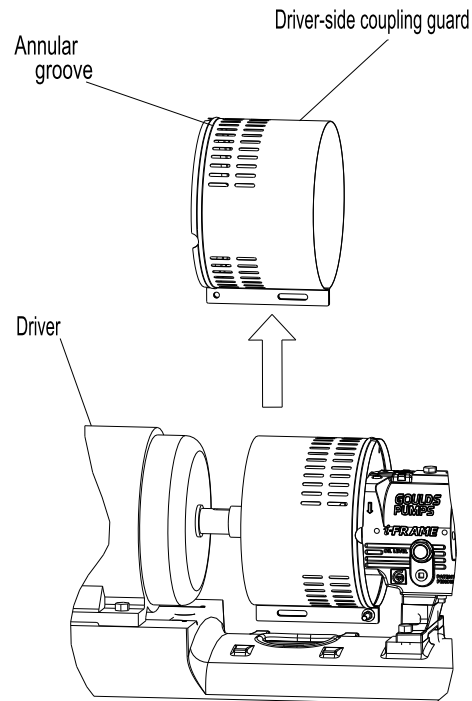

6. Remove the remaining nut, bolt, and washers from the pump half of the coupling guard. It is not necessary to remove the end plate from the pump side of the bearing housing. You can access the bearing-housing tap bolts without removing this end plate if maintenance of internal pump parts is necessary.
7. Remove the pump half of the coupling guard:
 - a) Slightly spread the bottom apart.

b) Lift upwards.

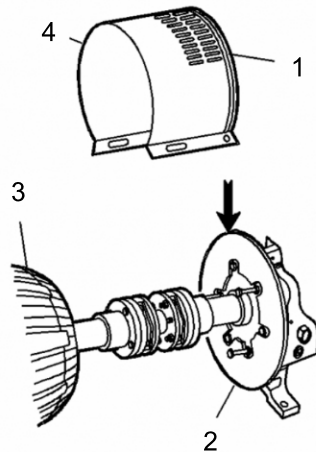

1. Annular groove
2. Pump-side end plate
3. Driver
4. Pump half of the coupling guard

Check the rotation - Frame Mounted



WARNING:

- Starting the pump in reverse rotation can result in the contact of metal parts, heat generation, and breach of containment. Ensure correct driver settings prior to starting any pump.
- Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.
 - Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
 - Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.

1. Lock out power to the driver.
2. Make sure that the coupling hubs are fastened securely to the shafts.
3. Make sure that the coupling spacer is removed.
The pump ships with the coupling spacer removed.
4. Unlock power to the driver.
5. Make sure that everyone is clear, and then jog the driver long enough to determine that the direction of rotation corresponds to the arrow on the bearing housing or close-coupled frame.
6. Lock out power to the driver.

Impeller-clearance check

The impeller-clearance check ensures the following:

- The pump turns freely.
- The pump operates at optimal efficiency for long equipment life and low energy consumption.

Impeller clearances (3196 and HT 3196)

NOTICE:

Set the cold (ambient) impeller clearance according to this table. Failure to do so may result in heat generation and equipment damage. Higher clearances are used above 93°C | 200°F to prevent the impeller from contacting the casing due to thermal expansion.

Table 8: Impeller clearances

This pump requires the impeller clearances in the following table.

| Service temperature | STi | MTi/LTi | XLT-i/i17 |
|----------------------------|--------------|--------------|--------------|
| | mm in. | mm in. | mm in. |
| -29 to 93°C -20 to 200°F | 0.13 0.005 | 0.20 0.008 | 0.38 0.015 |
| Up to 121°C 250°F | 0.15 0.006 | 0.22 0.009 | 0.41 0.016 |
| Up to 149°C 300°F | 0.18 0.007 | 0.25 0.010 | 0.43 0.017 |
| Up to 177°C 350°F | 0.22 0.009 | 0.30 0.012 | 0.48 0.019 |
| Up to 204°C 400°F | 0.25 0.010 | 0.33 0.013 | 0.50 0.020 |
| Up to 232°C 450°F | 0.28 0.011 | 0.35 0.014 | 0.53 0.021 |
| Up to 260°C 500°F | 0.30 0.012 | 0.38 0.015 | 0.56 0.022 |
| Up to 288°C 550°F | 0.33 0.013 | 0.41 0.016 | 0.58 0.023 |
| Up to 316°C 600°F | 0.36 0.014 | 0.43 0.017 | 0.61 0.024 |
| Up to 343°C 650°F | 0.40 0.016 | 0.48 0.019 | 0.66 0.026 |
| Up to 371°C 700°F | 0.43 0.017 | 0.50 0.020 | 0.69 0.027 |

Impeller-clearance setting

Importance of a proper impeller clearance



A proper impeller clearance ensures that the pump runs at high performance.

WARNING:

- Risk of mechanical seal damage leading to breach of containment. If a cartridge mechanical seal is used, ensure that the set screws in the seal locking ring are loosened and that the centering clips have been installed prior to clearance adjustment.

Impeller clearance methods

You can set the impeller clearance with either of these methods:

- Dial indicator method
- Feeler gauge method

Set the impeller clearance - dial indicator method (all except CV 3196)



WARNING:

Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.

- Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
- Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.

1. Remove the coupling guard.

- Set the indicator so that the button contacts either the shaft end or the face of the coupling.

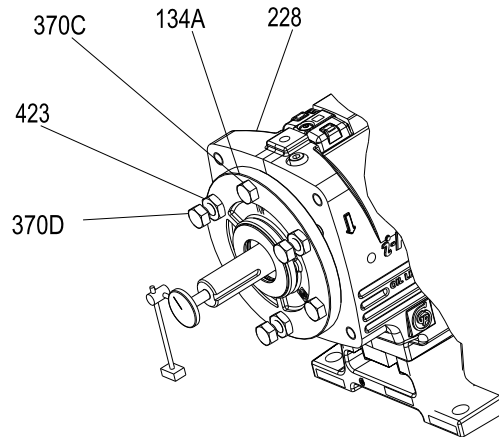


Figure 30: Dial indicator setting

- Loosen the jam nuts (423) on the jack bolts (370D), and then back the bolts out about two turns.
- Tighten the locking bolts evenly (370C), bringing the bearing housing (134A) towards the frame (228) until the impeller contacts the casing.
- Turn the shaft to ensure that there is contact between the impeller and the casing.
- Set the indicator to zero and loosen the locking bolt (370C) about one turn.
- Thread in the jack bolts (370D) until the jack bolts evenly contact the bearing frame.
- Tighten the jack bolts evenly about one flat at a time, moving the bearing housing (134A) away from the bearing frame until the indicator shows the correct clearance.
Refer to the impeller clearance table to determine the correct clearance.
- Tighten the bolts evenly in this order:
 - Tighten the locking bolts (370C).
 - Tighten the jack bolts (370D).
 Make sure to keep the indicator reading at the proper setting.
- Make sure the shaft turns freely.

Set the impeller clearance - feeler gauge method (all except CV 3196)



WARNING:

Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.

- Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
- Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.

- Lock out the driver power and remove the coupling guard.

2. Loosen the jam nuts (423B) on the jack bolts (371A), and then back the bolts out about two turns.

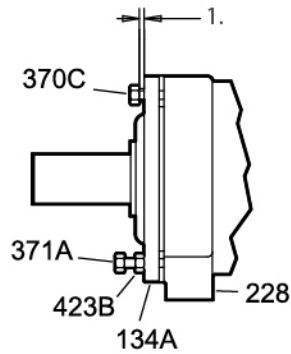


Figure 31: Loosen jam nuts

1. See impeller clearance table for distance
3. Evenly tighten the locking bolts (370C), bringing the bearing housing (134A) towards the frame (228) until the impeller contacts the casing.
4. Turn the shaft to ensure that there is contact between the impeller and the casing.
5. Use a feeler gauge to set the gap between the three locking bolts (370C) and the bearing housing (134A) to the correct impeller clearance.
Refer to the impeller clearance table to determine the correct clearance.
6. Use the three jack bolts (370D) to evenly loosen the bearing housing (134A) until it contacts the locking bolts (370C).
7. Evenly tighten the jam nuts (423B).
8. Make sure the shaft turns freely.

Couple the pump and driver



WARNING:

Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.

- Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
- Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.


Couplings must have proper certification to be used in an ATEX classified environment. Use the instructions from the coupling manufacturer in order to lubricate and install the coupling. Refer to driver/coupling/gear manufacturers IOM for specific instructions and recommendations.

Install the coupling guard




WARNING:

- Running a pump without safety devices exposes operators to risk of serious personal injury or death. Never operate a unit unless appropriate safety devices (guards, etc.) are properly installed.
- Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.
- Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
- Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.

 The coupling used in an Ex-classified environment must be properly certified and must be constructed from a spark resistant material.

Required parts:

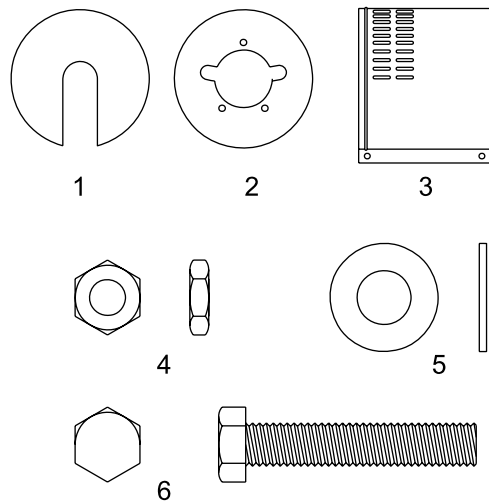


1. End plate, drive end
2. End plate, pump end
3. Guard half, 2 required
4. 3/8-16 nut, 3 required
5. 3/8 in. washer
6. 3/8-16 x 2 in. hex head bolt, 3 required

Figure 32: Required parts

1. De-energize the motor, place the motor in a locked-out position, and place a caution tag at the starter that indicates the disconnect.
2. Put the pump-side end plate in place.
If the pump-side end plate is already in place, make any necessary coupling adjustments and then proceed to the next step.

| If the pump size is... | Then... |
|------------------------|---|
| STi, MTi, LTi | Align the pump-side end plate to the bearing frame. You do not need to adjust the impeller. |


| If the pump size is... | Then... |
|------------------------|---|
| XLT-i | <ol style="list-style-type: none"> 1. Align the end plate on the pump side to the bearing housing so that you meet these conditions: <ol style="list-style-type: none"> 1. The large slots on the end plate do not touch the bearing housing tap bolts. 2. The small slots align with the impeller adjusting bolts. 2. Fasten the end plate to the bearing housing using the jam nuts on the impeller adjusting bolts. 3. Check the impeller clearance. Refer to the impeller clearance table for the correct impeller clearance. |

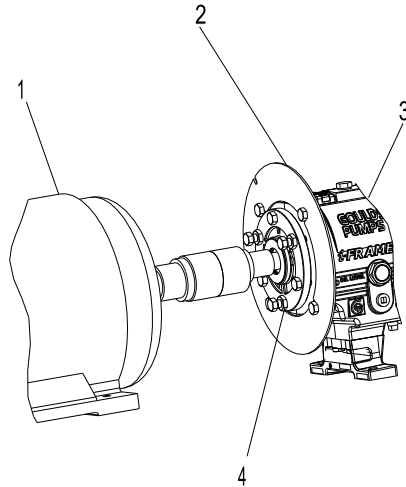

1. Driver
2. Pump end plate
3. Bearing housing
4. Jam nut

Figure 33: Pump-side end plate placement


3. Put the pump-half of the coupling guard in place:
 - a) Slightly spread the bottom apart.
 - b) Place the coupling guard half over the pump-side end plate.

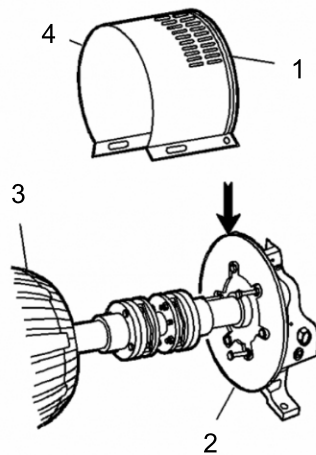

1. Annular groove
2. Pump-side end plate
3. Driver
4. Pump half of the coupling guard

Figure 34: Guard half installation



The annular groove in the coupling guard half must fit around the end plate.

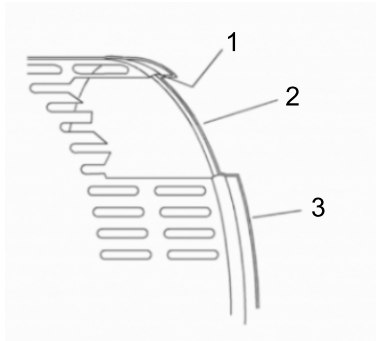

1. Annular groove
2. End plate (pump end)
3. Guard half

Figure 35: Annular groove in coupling guard

4. Use a bolt, a nut, and two washers to secure the coupling guard half to the end plate. Tighten securely.

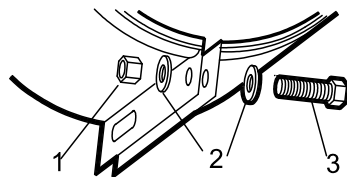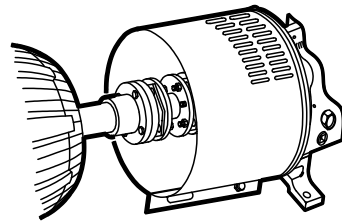

1. Nut
2. Washer
3. Bolt

Figure 36: Secure coupling guard half to end plate

5. Put the driver half of the coupling guard in place:
 - a) Slightly spread the bottom apart.

- b) Place the driver half of the coupling guard over the pump half of the coupling guard. The annular groove in the coupling guard half must face the motor.

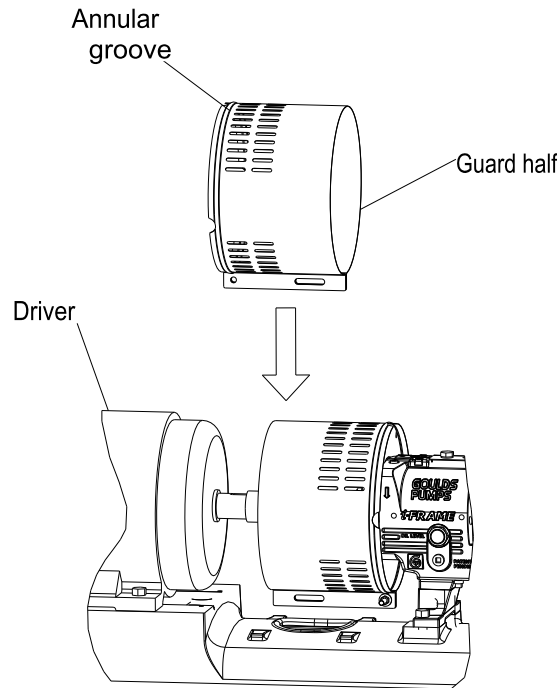


Figure 37: Placement of driver half of coupling guard

6. Place the driver-side end plate over the motor shaft.

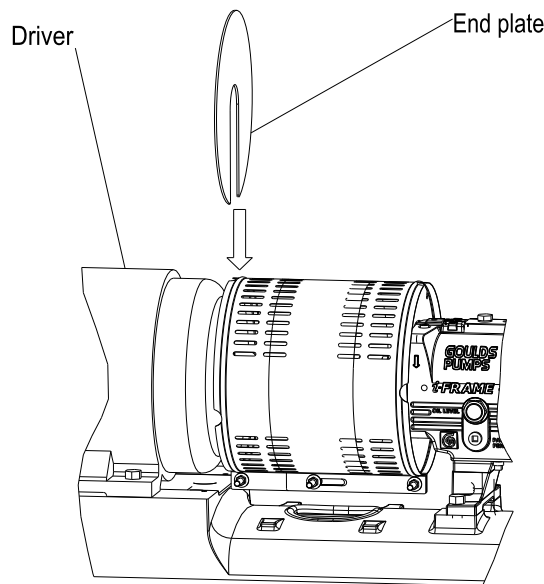


Figure 38: Placement of driver half of coupling guard

7. Place the driver-side end plate in the annular groove of the driver-half of the coupling guard.
8. Use a bolt, a nut, and two washers to secure the coupling guard half to the end plate. Hand-tighten only. The hole is located on the driver-side of the coupling guard half.

- Slide the driver-half of the coupling guard towards the motor so that the coupling guard completely covers the shafts and coupling.

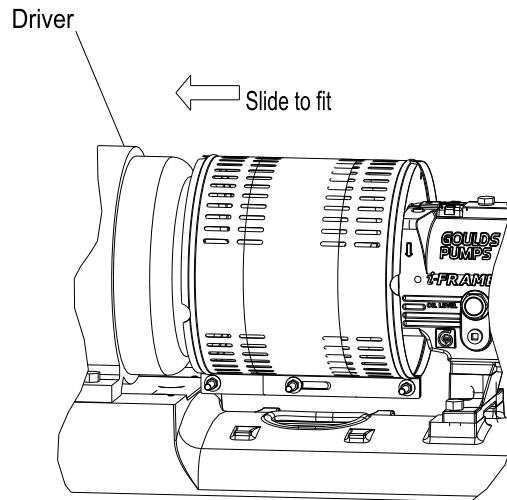



Figure 39: Slide driver-half of coupling guard towards motor

- Use a nut, a bolt, and two washers to secure the coupling guard halves together.
- Tighten all nuts on the guard assembly.

Bearing lubrication



WARNING:

 Risk of explosive hazard and premature failure from sparks and heat generation. Ensure bearings are properly lubricated prior to startup.

NOTICE:

Grease can settle in equipment left idle leaving bearings improperly lubricated. Check the greasing on a pump that has been out of service for a long period of time and re-grease if necessary.

Pumps are shipped without oil. You must lubricate oil-lubricated bearings at the job site.

Grease-lubricated bearings are lubricated at the factory.

The bearing manufacturer fills greased-for-life bearings with grease and seals them at the factory. You do not need to lubricate or seal these bearings.

Oil volumes

Oil volume requirements

This table shows the required amount of oil for oil-lubricated bearings.

| Frame | ml | Qts. | Oz. |
|---------------|------|------|-----|
| STi | 400 | 0.5 | 16 |
| MTi | 1400 | 1.5 | 47 |
| LTi | 1400 | 1.5 | 48 |
| XLT-i and i17 | 3000 | 3 | 96 |

Lubricating-oil requirements

Oil requirements based on temperature

For the majority of operating conditions, bearing temperatures run between 49°C | 120°F and 82°C | 180°F, and you can use an oil of ISO viscosity grade 68 at 38°C | 100°F. If temperatures exceed 82°C | 180°F, refer to the table for temperature requirements.

| Temperature | Oil requirement |
|--|--|
| Bearing temperatures exceed 82°C 180°F | Use ISO viscosity grade 100 with bearing-frame cooling or finned-tube oil cooler. The finned-tube oil cooler is standard with the HT 3196 model and optional for all other models. |
| Pumped-fluid temperatures exceed 177°C 350°F | Use synthetic lubrication. |

Acceptable oil for lubricating bearings

Acceptable lubricants


Examples of acceptable high quality turbine oils with rust and oxidation inhibitors.

| Brand | Lubricant type |
|--------------|---------------------------------|
| Chevron | GST Oil 68 |
| Exxon | Teresstic EP 68 |
| Mobil | DTE 68 Heavy Medium |
| Phillips 66 | Turbine Oil VG68 |
| Shell | Turbo T 68 |
| Sunoco | Sunvis 968 |
| Royal Purple | SYNFILM ISO VG 68 Synthetic Oil |

Lubricate the bearings with oil



WARNING:

 Risk of explosive hazard and premature failure from sparks and heat generation. Ensure bearings are properly lubricated prior to startup.

Use a high-quality turbine oil with rust and oxidation inhibitors.

1. Remove the fill plug.
2. Fill the bearing frame with oil through the filler connection, which is located on top of the bearing frame.
Fill the bearing frame with oil until the oil level reaches the middle of the sight glass (319).
The correct volume of oil required for each size of bearing frame can be found in the 'Oil

Volume Requirements' section in the 'Bearing Maintenance' / 'Maintenance' portion of the IOM.

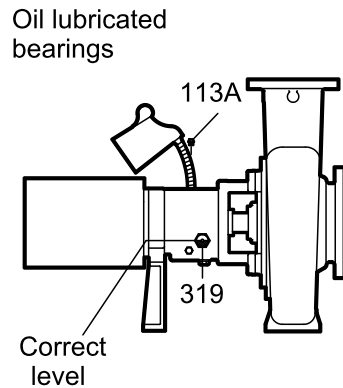


Figure 40: Oil filler connection

3. Replace the fill plug.

Lubricate the bearings with pure oil mist

Oil mist is an optional feature for this pump.

- To lubricate bearings with pure oil mist, follow the instructions provided by the manufacturer of the oil-mist generator.
The inlet connections are on the top of the bearing frame.

Greased-for-life bearing lubrication

The bearing manufacturer fills greased-for-life bearings with grease and seals them at the factory. You do not need to lubricate or seal these bearings. Refer to the Maintenance chapter for re-greasing and maintenance procedures for these bearings.

Shaft-sealing options

In most cases, the manufacturer seals the shaft before shipping the pump. If your pump does not have a sealed shaft, see the Shaft-seal maintenance section in the Maintenance chapter.

This model uses these types of shaft seals:

- Cartridge mechanical seal
- Conventional inside-component mechanical seal
- Conventional outside-component mechanical seal
- Dynamic seal
- Packed-stuffing-box option

Mechanical seal options

Pumps are usually shipped with mechanical seals installed. If they are not, then refer to the mechanical seal manufacturer's installation instructions.

These are the mechanical seal options for this pump:

- Cartridge mechanical seal
- Conventional inside component mechanical seal
- Conventional outside component mechanical seal

Connection of sealing liquid for mechanical seals

Seal lubrication is required

Seal faces must have liquid film between them for proper lubrication. Locate the taps using the illustrations shipped with the seal.

Seal flushing methods

You can use these methods in order to flush or cool the seal:

| Method | Description |
|----------------|--|
| Product flush | Run the piping so that the pump pushes the pumped fluid from the casing and injects it into the seal gland. If necessary, an external heat exchanger cools the pumped fluid before it enters the seal gland. |
| External flush | Run the piping so that the pump injects a clean, cool, compatible liquid directly into the seal gland. The pressure of the flushing liquid must be 0.35 to 1.01 kg/cm ² 5 to 15 psi greater than the seal chamber pressure. The injection rate must be 2 to 8 lpm 0.5 to 2 gpm. |
| Other | You can use other methods that employ multiple gland or seal chamber connections. Refer to the mechanical seal reference drawing and piping diagrams. |

Packed stuffing box option



WARNING:

 Packed stuffing boxes are not allowed in an ATEX-classified environment.

The factory does not install the packing, lantern ring, or split gland.

These parts are included with the pump in the box of fittings. Before you start the pump, you must install the packing, lantern ring, and split gland according to the Packed stuffing box maintenance section in the Maintenance chapter.

Connection of sealing liquid for a packed stuffing box

NOTICE:

Make sure to lubricate the packing. Failure to do so may result in shortening the life of the packing and the pump.

You must use an external sealing liquid under these conditions:

- The pumped fluid includes abrasive particles.
- The stuffing-box pressure is below atmospheric pressure when the pump is running with a suction lift or when the suction source is in a vacuum. Under these conditions, packing is not cooled and lubricated and air is drawn into pump.


Conditions for application of an external liquid

| Condition | Action |
|---|---|
| The stuffing box pressure is above atmospheric pressure and the pumped fluid is clean. | Normal gland leaks of 40 to 60 drops per minute is usually sufficient to lubricate and cool the packing. You do not need sealing liquid. |
| The stuffing box pressure is below atmospheric pressure or the pumped fluid is not clean. | An outside source of clean compatible liquid is required. |
| An outside source of clean compatible liquid is required. | You must connect the piping to the lantern ring connection with a 40 to 60 drops-per-minute leak rate. The pressure must be 1.01 kg/cm ² 15 psi above the stuffing box pressure. |

Dynamic-seal option



WARNING:

 Dynamic seals are not allowed in an ATEX-classified environment.

The dynamic seal consists of two parts:

- Repeller seal
- Secondary seal (one of the following):
 - Graphite packing
 - Elastomeric face seal

Table 9: Dynamic seal part function

| Part | Function |
|-----------------------------------|--|
| Repeller seal | A repeller seal prevents liquid from entering the stuffing box during operation. The repeller normally does not require a flush. However, for services that allow a build-up of solids on the repeller, you must install a flush connection. If a danger of freezing exists, then you must install a drain connection to drain the repeller chamber. |
| Secondary seal (graphite packing) | This secondary seal prevents leaks during pump shutdown and is comprised of the following: <ul style="list-style-type: none"> • Graphite packing – Graphite packing provides adequate life running dry but can provide longer performance if lubricated with clean water or grease. • If you lubricate with clean water, then the repeller reduces both the quantity and pressure of seal water that is necessary. If the suction head is less than the repeller capability, then the stuffing box pressure is the same as the atmospheric pressure. Water pressure for the seal must be high enough to overcome static head when the pump is not operating to keep pumped fluid out of the packing. There must be enough flow to cool the packing. • If you lubricate with grease, then you must use spring-loaded grease lubricators to maintain a constant supply. • Elastomeric face seal – The elastomeric face seal consists of an elastomer rotary fitted to the shaft and a ceramic stationary seat fitted in the gland. To set an elastomeric face seal, refer to Set an elastomeric face seal. This seal is designed to run dry, so no flush is necessary. |


Set an elastomeric face seal

This procedure ensures that the elastomeric seal attains proper contact. No other adjustments are necessary.

1. Remove the gland nuts.
2. Slide the gland back on the sleeve.
3. Pull the rotary back on the sleeve until the rotary is about 25 mm | 1 in. beyond the stuffing box face.
4. Push the gland back onto the studs, pushing the rotary back along the sleeve.
5. Tighten the gland nuts.

Prime the pump with the suction supply above the pump

1. Slowly open the suction isolation valve.
2. Open the air vents on the suction and discharge piping until the pumped fluid flows out.
3. Close the air vents.

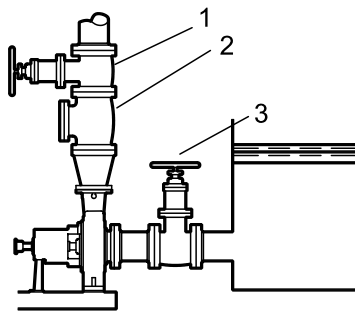

1. Discharge isolation valve
2. Check valve
3. Suction isolation valve


Figure 41: Suction supply above pump

Prime the pump with the suction supply below the pump

Use a foot valve and an outside source of liquid in order to prime the pump. The liquid can come from one of these sources:

- A priming pump
 - A pressurized discharge line
 - Another outside supply
1. Close the discharge isolation valve.
 2. Open the air vent valves in the casing.
 3. Open the valve in the outside supply line until only liquid escapes from the vent valves.
 4. Close the vent valves.
 5. Close the outside supply line.


This illustration is an example of priming the pump with a foot valve and an outside supply:

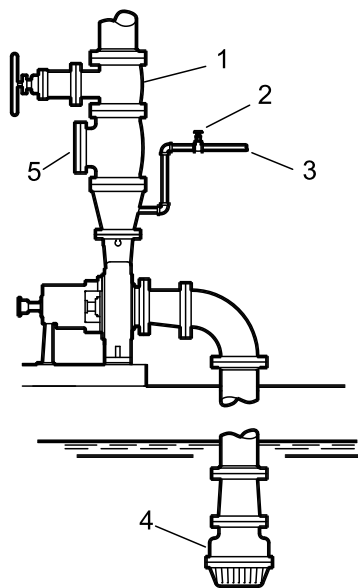

1. Discharge isolation valve
2. Shutoff valve
3. From outside supply
4. Foot valve
5. Check valve

Figure 42: Pump priming with suction supply below pump

This illustration is an example of priming the pump with a foot valve using a bypass around the check valve:

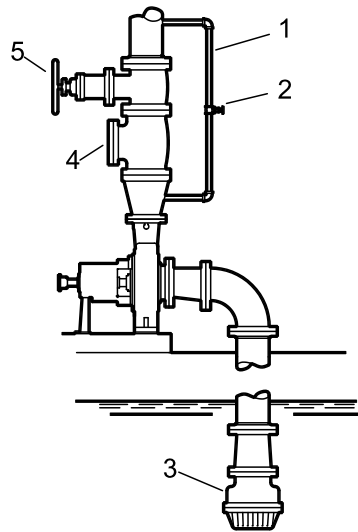

1. By-pass line
2. Shutoff valve
3. Foot valve
4. Check valve
5. Discharge isolation valve

Figure 43: Pump priming with suction supply below pump with foot valve using bypass around check valve

Other methods of priming the pump

You can also use these methods in order to prime the pump:

- Prime by ejector
- Prime by automatic priming pump

Start the pump



WARNING:

Risk of equipment damage, seal failure and breach of containment. Ensure all flush and cooling systems are operating correctly prior to starting pump.

NOTICE:

NOTICE:

Risk of equipment damage on pure or purge-oil mist-lubricated units. Remove the viewing port plugs to verify that oil mist is flowing properly. Reinstall the plugs after confirming.

Before you start the pump, you must perform these tasks:

- Open the suction valve.
 - Open any recirculation or cooling lines.
1. Fully close or partially open the discharge valve, depending on system conditions.
 2. Start the driver.

3. Slowly open the discharge valve until the pump reaches the desired flow.
4. Immediately check the pressure gauge to ensure that the pump quickly reaches the correct discharge pressure.
5. If the pump fails to reach the correct pressure, perform these steps:
 - a) Stop the driver.
 - b) Prime the pump again.
 - c) Restart the driver.
6. Monitor the pump while it is operating:
 - a) Check the pump for bearing temperature, excessive vibration, and noise.
 - b) If the pump exceeds normal levels, then shut down the pump immediately and correct the problem.

A pump can exceed normal levels for several reasons. See Troubleshooting for information about possible solutions to this problem.
7. Repeat steps 5 and 6 until the pump runs properly.

Activate the i-ALERT[®] Condition Monitor



WARNING:

Explosive hazard and risk of personal injury. Heating to high temperatures could cause combustion of the condition monitor. Never heat the condition monitor to temperatures in excess of 149°C | 300°F or dispose of in a fire.

By using the i-ALERT[®] Condition monitor or the i-ALERT[®]2 Bluetooth Equipment Health Monitor, you agree to be bound by the Terms and Conditions of the [Software License Agreement](#) (page 18)

The condition monitor is ready for activation when the pump is running and has reached a steady flow, pressure, and temperature. This process only takes a few minutes.

1. Place a small magnet on the condition monitor over the ITT logo and then remove it, as this example shows.

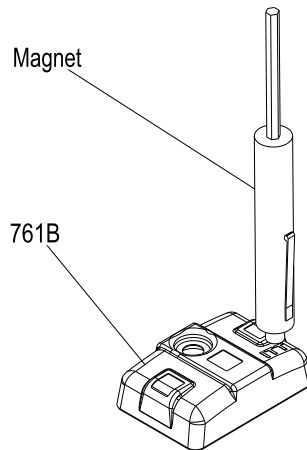


Figure 44: i-ALERT[®] condition monitor

When the condition monitor is activated it:

1. Displays a series of red LEDs followed by a solid green LED.
2. Collects eight samples that are spaced one second apart.
3. Averages these readings to establish the baseline vibration level.
4. Flashes a green LED after approximately twelve seconds.

For the first ten minutes, the green LED flashes every second for five consecutive flashes and then pauses to take a vibration reading. More frequent measurements (every six seconds) are taken in this startup period so that an alarm can be immediately detected.

i-ALERT[®] Condition Monitor routine operation

To install and/or activate the i-ALERT[®]2 monitor, please refer to the i-ALERT[®]2 IOM or <http://www.itproservices.com/aftermarket-products/monitoring/i-alert2/> (i-ALERT2.com). Routine operation instructions are also included in the i-ALERT[®]2 IOM.

Measurement interval

This table shows the measurement intervals for the condition monitor during normal operation and when the monitor is in alarm mode.

| Mode | Measurement interval |
|-----------------------|----------------------|
| Normal operating mode | Five minutes |
| Alarm mode | Two minutes |

When the condition monitor measures a reading beyond the specified temperature and vibration limits, the appropriate red LED flashes. After the process or pump condition that causes the alarm is corrected, the condition monitor returns to normal mode after one normal-level measurement.

Alarm mode

When the condition monitor is in alarm mode, you should investigate the cause of the condition and make necessary corrections in a timely manner.

Magnetic device considerations

Be careful when you use magnetic devices in close proximity of the condition monitor, such as magnetic vibration-monitoring probes or dial indicators. These magnetic devices can accidentally activate or deactivate the condition monitor resulting in improper alarm levels or loss of monitoring.

Pump operation precautions

General considerations

NOTICE:

- Vary the capacity with the regulating valve in the discharge line. Never throttle the flow from the suction side. This action can result in decreased performance, unexpected heat generation, and equipment damage.
 - Risk of equipment damage from unexpected heat generation. Do not overload the driver. Ensure that the pump operating conditions are suitable for the driver. The driver can overload in these circumstances:
 - The specific gravity or viscosity of the fluid is greater than expected
 - The pumped fluid exceeds the rated flow rate.
 - Make sure to operate the pump at or near the rated conditions. Failure to do so can result in pump damage from cavitation or recirculation.
-

Operation at reduced capacity



WARNING:

- Risk of breach of containment and equipment damage. Excessive vibration levels can cause damage to bearings, stuffing box, seal chamber, and/or mechanical seal. Observe pump for vibration levels, bearing temperature, and excessive noise. If normal levels are exceeded, shut down and resolve.
 - Risk of explosion and serious physical injury. Do not operate pump with blocked system piping or with suction or discharge valves closed. This can result in rapid heating and vaporization of pumpage.
 - Risk of equipment damage and serious physical injury. Heat build-up can cause rotating parts to score or seize. Observe pump for excessive heat build-up. If normal levels are exceeded, shut down and resolve.
-

NOTICE:

Cavitation can cause damage to the internal surfaces of the pump. Ensure net positive suction head available (NPSH_A) always exceeds NPSH required (NPSH₃) as shown on the published performance curve of the pump.

Operation under freezing conditions

NOTICE:

Do not expose an idle pump to freezing conditions. Drain all liquid that is inside the pump and any auxiliary equipment. Failure to do so can cause liquid to freeze and damage the pump.

Shut down the pump



WARNING:

Precautions must be taken to prevent physical injury. The pump may handle hazardous and/or toxic fluids. Proper personal protective equipment should be worn. Pumpage must be handled and disposed of in conformance with applicable environmental regulations.

1. Slowly close the discharge valve.
 2. Shut down and lock out the driver to prevent accidental rotation.
-

Deactivate the i-ALERT[®] Condition Monitor

NOTICE:

Always deactivate the condition monitor when the pump is going to be shut down for an extended period of time. Failure to do so will result in reduced battery life.

1. Touch and hold a small magnet to the condition monitor over the ITT logo until the red LEDs blink three times.
This should take 10-15 seconds if the condition monitor is in normal operating mode and approximately five seconds if the condition monitor is in alarm mode.
2. Remove the magnet.

If the deactivation is successful, solid red LEDs will be displayed.

Reset the i-ALERT[®] Condition Monitor

To deactivate or reset the i-ALERT[®]2 monitor, please refer to the i-ALERT[®]2 IOM or i-ALERT2.com, <http://www.ittproservices.com/aftermarket-products/monitoring/i-alert2/> Always reset the condition monitor when the pump is started after maintenance, system change, or being shut down for an extended period of time. Failure to do so may result in false baseline levels that could cause the condition monitor to alert in error.

1. Touch a magnet to the condition monitor over the ITT logo to turn the power on. The condition monitor begins to establish a new baseline vibration level.

Make the final alignment of the pump and driver



WARNING:

- Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.
- Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
- Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.
- Misalignment can cause decreased performance, equipment damage, and even catastrophic failure of frame-mounted units leading to serious injury. Proper alignment is the responsibility of the installer and the user of the unit. Check the alignment of all drive components prior to operating the unit.
- Follow the coupling installation and operation procedures from the coupling manufacturer.

You must check the final alignment after the pump and driver are at operating temperature. For initial alignment instructions, see the Installation chapter.

1. Run the unit under actual operating conditions for enough time to bring the pump, driver, and associated system to operating temperature.
2. Shut down the pump and the driver.
3. Remove the coupling guard.
See Remove the coupling guard in the Maintenance chapter.
4. Check the alignment while the unit is still hot.
See Pump-to-driver alignment in the Installation chapter.
5. Reinstall the coupling guard.
6. Restart the pump and driver.

Maintenance

Maintenance schedule

Maintenance inspections

A maintenance schedule includes these types of inspections:

- Routine maintenance
- Routine inspections
- Three-month inspections
- Annual inspections

Shorten the inspection intervals appropriately if the pumped fluid is abrasive or corrosive or if the environment is classified as potentially explosive.

Routine maintenance

Perform these tasks whenever you perform routine maintenance:

- Lubricate the bearings.
- Inspect the seal.

Routine inspections

Perform these tasks whenever you check the pump during routine inspections:

- Check the level and condition of the oil through the sight glass on the bearing frame.
- Check for unusual noise, vibration, and bearing temperatures.
- Check the pump and piping for leaks.
- Analyze the vibration.
- Inspect the discharge pressure.
- Inspect the temperature.
- Check the seal chamber and stuffing box for leaks.
 - Ensure that there are no leaks from the mechanical seal.
 - Adjust or replace the packing in the stuffing box if you notice excessive leaking.

Three-month inspections

Perform these tasks every three months:

- Check that the foundation and the hold-down bolts are tight.
- Check the packing if the pump has been left idle, and replace as required.
- Change the oil every three months (2000 operating hours) at minimum.
 - Change the oil more often if there are adverse atmospheric or other conditions that might contaminate or break down the oil.
- Check the shaft alignment, and realign as required.

Annual inspections

Perform these inspections one time each year:


- Check the pump capacity.
- Check the pump pressure.
- Check the pump power.

If the pump performance does not satisfy your process requirements, and the process requirements have not changed, then perform these steps:

1. Disassemble the pump.
2. Inspect it.

3. Replace worn parts.

Bearing maintenance

 These bearing lubrication sections list different temperatures of the pumped fluid. If the pump is ATEX-certified and the temperature of the pumped fluid exceeds the permitted temperature values, then consult your ITT representative.

Bearing lubrication schedule

| Type of bearing | First lubrication | Lubrication intervals |
|----------------------------|---|---|
| Oil-lubricated bearings | Add oil before you install and start the pump. Change the oil after 200 hours for new bearings. | After the first 200 hours, change the oil every 2000 operating hours or every three months. |
| Grease-lubricated bearings | Grease-lubricated bearings are initially lubricated at the factory. | Regrease bearings every 2000 operating hours or every three months. |

Lubricating-oil requirements

Oil requirements based on temperature

For the majority of operating conditions, bearing temperatures run between 49°C | 120°F and 82°C | 180°F, and you can use an oil of ISO viscosity grade 68 at 38°C | 100°F. If temperatures exceed 82°C | 180°F, refer to the table for temperature requirements.

| Temperature | Oil requirement |
|--|--|
| Bearing temperatures exceed 82°C 180°F | Use ISO viscosity grade 100 with bearing-frame cooling or finned-tube oil cooler. The finned-tube oil cooler is standard with the HT 3196 model and optional for all other models. |
| Pumped-fluid temperatures exceed 177°C 350°F | Use synthetic lubrication. |

Oil volumes

Oil volume requirements

This table shows the required amount of oil for oil-lubricated bearings.

| Frame | ml | Qts. | Oz. |
|---------------|------|------|-----|
| STi | 400 | 0.5 | 16 |
| MTi | 1400 | 1.5 | 47 |
| LTi | 1400 | 1.5 | 48 |
| XLT-i and i17 | 3000 | 3 | 96 |

Acceptable oil for lubricating bearings

Acceptable lubricants

Examples of acceptable high quality turbine oils with rust and oxidation inhibitors.

| Brand | Lubricant type |
|--------------|---------------------------------|
| Chevron | GST Oil 68 |
| Exxon | Teresstic EP 68 |
| Mobil | DTE 68 Heavy Medium |
| Phillips 66 | Turbine Oil VG68 |
| Shell | Turbo T 68 |
| Sunoco | Sunvis 968 |
| Royal Purple | SYNFILM ISO VG 68 Synthetic Oil |

Regrease the grease-lubricated bearings

NOTICE:

Risk of equipment damage. Ensure that the grease container, the greasing device, and the fittings are clean. Failure to do so can result in impurities entering the bearing housing while regreasing the bearings.

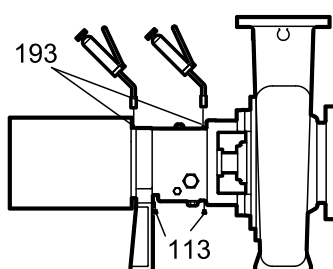


Figure 45: Bearing lubrication

1. Wipe dirt from the grease fittings.
2. Remove the two grease-relief plugs from the bottom of the frame.
3. Fill both of the grease cavities through the fittings with a recommended grease until the fresh grease comes out of the relief holes.
4. Make sure that the frame seals are seated in the bearing housing.
If they are not, press them in place with the drains located at the bottom.
5. Reinstall the grease-relief plugs.
6. Wipe off any excess grease.
7. Recheck the alignment.

The bearing temperature usually rises after you regrease due to an excess supply of grease. Temperatures return to normal in about two to four operating hours as the pump runs and purges the excess grease from the bearings.

Lubricating-grease requirements

Precautions

NOTICE:

- Avoid equipment damage or decreased performance. Never mix greases of different consistencies (NLGI 1 or 3 with NLGI 2) or with different thickeners. For example, never mix a lithium-based grease with a polyurea based grease. If it is necessary to change the grease type or consistency, remove the rotor and old grease from the housing before regreasing.

Bearing temperature

Bearing temperatures are generally about 18°C | 20°F greater than bearing-housing outer surface temperatures.

This table shows the type of grease required for the operating temperature of the pump.

| Bearing temperature | Type of grease |
|-------------------------------|---|
| -15°C to 110°C 5°F to 230°F | Use a lithium-based mineral-oil grease with a consistency of NLGI 2. |
| Exceed 177°C 350°F | Use a high-temperature grease. Mineral-oil greases should have oxidation stabilizers and a consistency of NGLI 3. |

Grease recommendations based on temperature

Most pumps use Sunoco 2EP grease. High temperature units that can pump fluids with a temperature greater than 177°C | 350°F use Mobil SCH32.

This table shows which brand of grease to use when lubricating the pump.

| Brand | When temperature of pumped fluid is less than 177°C 350°F NLGI consistency 2 | When temperature of pumped fluid is greater than 177°C 350°F NLGI consistency 3 |
|--------|--|---|
| Mobil | Mobilux EP2 | SCH32 |
| Exxon | Unirex N2 | Unirex N3 |
| Sunoco | Multipurpose 2EP | N/A |
| SKF | LGMT 2 | LGMT 3 |

Lubricate the bearings after a shutdown period

1. Flush out the bearings and bearing frame with a light oil to remove contaminants. During flushing, make sure to rotate the shaft slowly by hand.
2. Flush the bearing housing with the proper lubricating oil to ensure oil quality after cleaning.
3. Refer to "Reassembly" section for proper bearing greasing procedure.

Mechanical-seal maintenance



WARNING:

 The mechanical seal used in an Ex-classified environment must be properly certified.



CAUTION:

Running a mechanical seal dry, even for a few seconds, can cause seal failure and physical injury. Never operate the pump without liquid supplied to the mechanical seal.

Cartridge-type mechanical seals

Cartridge-type mechanical seals are commonly used. Cartridge seals are preset by the seal manufacturer and require no field settings. Cartridge seals installed by the user require disengagement of the holding clips prior to operation, allowing the seal to slide into place. If the seal has been installed in the pump by ITT, these clips have already been disengaged.

Other mechanical seal types

For other types of mechanical seals, refer to the instructions provided by the seal manufacturer for installation and setting.

Reference drawing

The manufacturer supplies a reference drawing with the data package. Keep this drawing for future use when you perform maintenance and seal adjustments. The seal drawing specifies the required flush fluid and attachment points.

Before you start the pump

Check the seal and all flush piping.


Mechanical seal life

The life of a mechanical seal depends on the cleanliness of the pumped fluid. Due to the diversity of operating conditions, it is not possible to give definite indications as to the life of a mechanical seal.

Packed stuffing-box maintenance



WARNING:

-  Packed stuffing boxes are not allowed in an ATEX-classified environment.
 - Failure to disconnect and lock out driver power may result in serious physical injury. Never attempt to replace the packing until the driver is properly locked out.
-

Accepted leakage rate

It is not necessary to shut down or disassemble the pump to inspect the packing operation. During normal operation, the packing should leak approximately one drop per second.

Adjustment of gland

Adjust the gland if the leakage rate is greater than or less than the specified rate. Evenly adjust each of the two gland bolts with a one-quarter (1/4) turn until the desired leakage rate is obtained. Tighten the bolts to decrease the rate. Loosen the bolts to increase the rate.

Tightening of packing


NOTICE: Never over-tighten packing to the point where less than one drop per second is observed. Over-tightening can cause excessive wear and power consumption during operation.

If you cannot tighten the packing to obtain less than the specified leakage rate, then replace the packing.

Dynamic-seal maintenance



WARNING:

 Dynamic seals are not allowed in an ATEX-classified environment.

About the dynamic seal

Dynamic seal parts do not wear substantially to affect operation and do not require maintenance unless the service is particularly abrasive or corrosive.

Repeller

The dynamic repeller prevents pumpage leaks through the stuffing box when the pump operates under published acceptable conditions.

Static seal

A static seal prevents leakage when the pump is shut down. A static seal is either of the following:

- a lip seal
- an elastomeric-face seal
- graphite packing

The only maintenance that the lip seal and the elastomeric-face seal require is replacement when leakage becomes excessive.

The graphite packing should be installed as stuffing-box packing and is designed to run dry.

Disassembly precautions



WARNING:

- Risk of serious physical injury or death from rapid depressurization. Ensure pump is isolated from system and pressure is relieved before disassembling pump, removing plugs, opening vent or drain valves, or disconnecting piping.
 - Risk of serious personal injury. Applying heat to impellers, propellers, or their retaining devices can cause trapped liquid to rapidly expand and result in a violent explosion. This manual clearly identifies accepted methods for disassembling units. These methods must be adhered to. Never apply heat to aid in their removal unless explicitly stated in this manual.
 - Failure to disconnect and lock out driver power may result in serious physical injury or death. Always disconnect and lock out power to the driver before performing any installation or maintenance tasks.
 - Electrical connections must be made by certified electricians in compliance with all international, national, state, and local rules.
 - Refer to driver/coupling/gear manufacturer's installation and operation manuals (IOM) for specific instructions and recommendations.
 - Handling heavy equipment poses a crush hazard. Use caution during handling and wear appropriate Personal Protective Equipment (PPE, such as steel-toed shoes, gloves, etc.) at all times.
 - Precautions must be taken to prevent physical injury. The pump may handle hazardous and/or toxic fluids. Proper personal protective equipment should be worn. Pumpage must be handled and disposed of in conformance with applicable environmental regulations.
 - Risk of serious personal injury from exposure to hazardous or toxic liquids. A small amount of liquid will be present in certain areas like the seal chamber upon disassembly.
-

**CAUTION:**

- Avoid injury. Worn pump components can have sharp edges. Wear appropriate gloves while handling these parts.
-

Tools required

In order to disassemble the pump, you need these tools:

- Bearing puller
- Brass drift punch
- Cleaning agents and solvents
- Dial indicators
- Feeler gauges
- Hex wrenches
- Hydraulic press
- Induction heater
- Leveling blocks and shims
- Lifting sling
- Micrometer
- Rubber mallet
- Screwdriver
- Snap-ring pliers
- Torque wrench with sockets
- Wrenches
- Lifting eyebolt (dependent on pump size)

Drain the pump

**CAUTION:**

- Risk of physical injury. Allow all system and pump components to cool before handling.
-

1. Leave the drain valve open and remove the drain plug located on the bottom of the pump housing.
Do not reinstall the plug or close the drain valve until the reassembly is complete.
2. Remove the coupling guard.

Remove the coupling

1. Disconnect the coupling.
2. Remove the C-face adapter.
3. Remove the coupling-guard pump end-plate.

Remove the back pull-out assembly

**WARNING:**

Lifting and handling heavy equipment poses a crush hazard. Use caution during lifting and handling and wear appropriate Personal Protective Equipment (PPE, such as steel-toed shoes, gloves, etc.) at all times. Seek assistance if necessary.

1. Is your bearing frame oil lubricated?
 - If No: Proceed to step 2.
 - If Yes:
 1. Remove the bearing-frame drain plug (408A) in order to drain oil from the bearing frame.
 2. Replace the plug after the oil is drained.
 3. Remove the oil reservoir, if equipped.

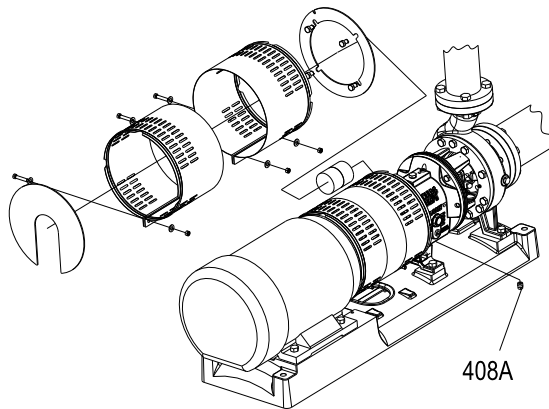


Figure 46: Back pull-out assembly removal (oil lubricated bearing frame)

Oil analysis should be part of a preventive maintenance program that determines the cause of a failure. Save the oil in a clean container for inspection.

2. Does your pump use a C-face adapter?
 - If Yes: Place one sling from the hoist through the frame adapter (108) or frame (228A) for the STi and a second sling from the hoist through the C-face adapter.

- If No: Place a sling from the hoist through the frame adapter (108) or the frame (228A) for the STi.

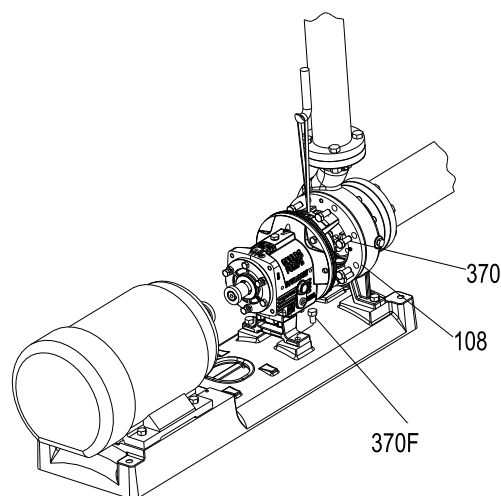


Figure 47: Back pull-out assembly removal (with C-face adapter)

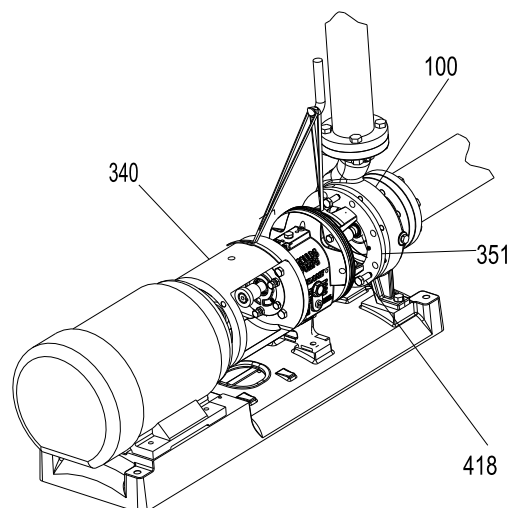


Figure 48: Back pull-out assembly removal (without C-face adapter)

3. Remove the hold-down bolts of the bearing frame foot.
4. Remove the casing bolts.



WARNING:

- Risk of severe physical injury or death from explosion of trapped liquid. Never use heat to remove parts unless explicitly stated in this manual.
5. Tighten the jackscrews evenly, using an alternating pattern, in order to remove the back pull-out assembly.
You can use penetrating oil if the adapter to the casing joint is corroded.
 6. Remove the back pull-out assembly from the casing (100).
 7. Mark and remove the shims from under the frame foot and save them for reassembly.
 8. Remove and discard the casing gasket.
You will insert a new casing gasket during reassembly.
 9. Remove the jackscrews.
 10. Clean all gasket surfaces.

Clean surfaces prevent the casing gasket from partially adhering to the casing due to binders and adhesives in the gasket material.

Remove the coupling hub

1. Clamp the frame adapter securely to the workbench.
2. Remove the coupling hub.
Mark the shaft for relocation of the coupling hub during reassembly.

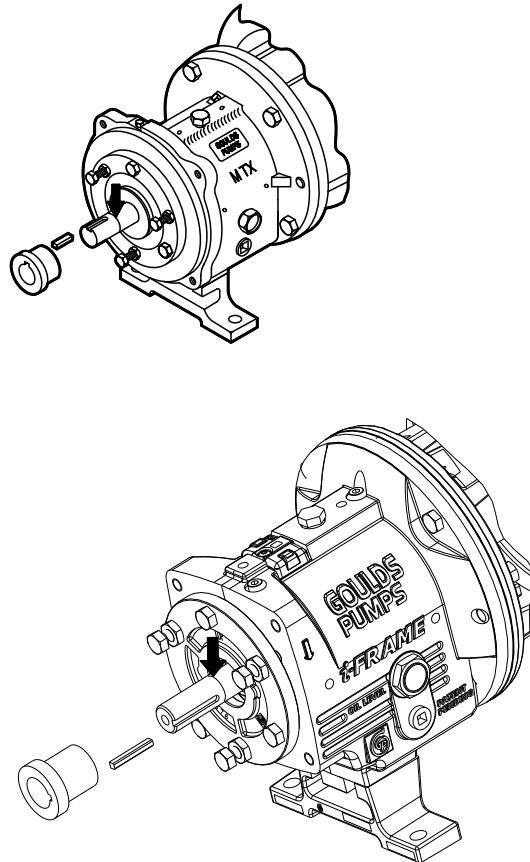


Figure 49: Coupling hub removal

Impeller removal

Remove the impeller (STi, MTi, and LTi)



WARNING:

Risk of severe physical injury or death from explosion of trapped liquid. Never use heat to remove parts unless explicitly stated in this manual.



CAUTION:

Risk of physical injury from sharp edges. Wear heavy work gloves when handling impellers.

1. Slide the shaft wrench (A05107A or A01676A) over the shaft (122) and key.
2. Rotate the impeller (101) clockwise (viewed from the impeller end of the shaft) and raise the wrench off of the work surface.

- To loosen the impeller, quickly turn it counter-clockwise (viewed from the impeller end of the shaft) while impacting the wrench handle on the workbench or a solid block.

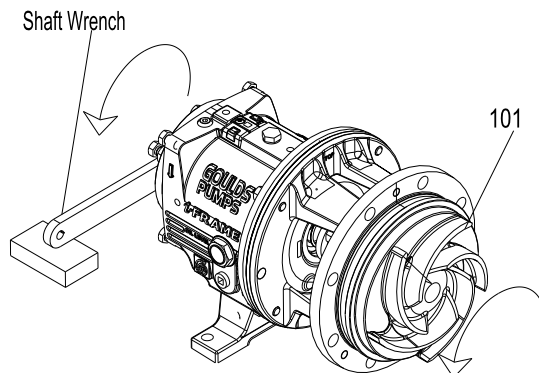


Figure 50: Loosen impeller

- Repeat step 3 until the impeller becomes loose.
- Remove and discard the impeller O-ring (412A). You will insert a new O-ring during reassembly.

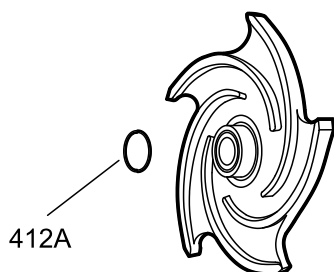


Figure 51: O-ring for models 3196, HT 3196, NM 3196, 3198, and 3796

If the impeller cannot be removed by the previous methods, cut the shaft between the gland and the frame, remove the impeller, stuffing-box cover, gland, sleeve, and shaft end as a unit. Do not apply heat.

Remove the impeller (XLT-i, and i17)



WARNING:

Risk of severe physical injury or death from explosion of trapped liquid. Never use heat to remove parts unless explicitly stated in this manual.




CAUTION:

Risk of physical injury from sharp edges. Wear heavy work gloves when handling impellers.

Clamp the frame foot (241) to the workbench when you use this method to remove the impeller.

1. Remove the impeller plug (458Y) from the front of the impeller (101) and discard the PTFE gasket (428D).

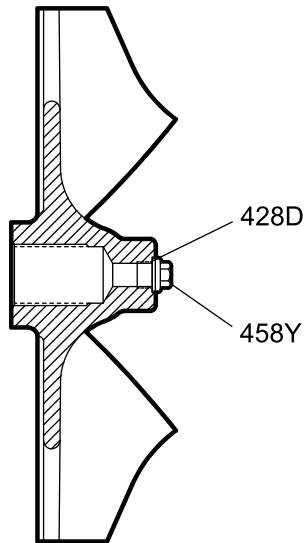

2. Spray penetrating oil through the plug hole into the cavity at the end of the shaft and let it penetrate for 15 minutes.
3. While waiting, rotate the shaft several times to distribute the oil.
4. Slide the shaft wrench (A05107A) over the shaft (122) and key.
5. Rotate the impeller clockwise (viewed from the impeller end of the shaft) and raise the wrench off of the work surface.
6. To loosen the impeller, quickly turn the impeller counter-clockwise (viewed from the impeller end of the shaft) while impacting the wrench handle on the workbench or a solid block.
7. Repeat step 6 until the impeller becomes loose.
8. If step 6 and 7 do not work then do this:
 - a) Place a socket wrench over the cast nut on the impeller hub.
 - b) Turn the impeller counter-clockwise (viewed from the impeller end of the shaft).
Be sure that the impeller wrench rests on the workbench or a solid block and that the power end is secure on the work surface.
9. Remove and discard the impeller O-ring (412A).
You will insert a new O-ring during reassembly.

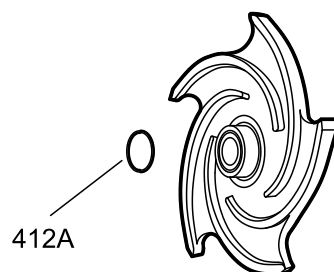


Figure 52: O-ring for models 3196 and HT 3196

If the impeller cannot be removed by the previous methods, cut the shaft between the gland and the frame, remove the impeller, stuffing-box cover, gland, sleeve, and shaft end as a unit. Do not apply heat.

Seal-chamber cover removal

Seal-chamber removal procedures

Choose from one of these procedures to remove the seal-chamber cover.

Table 10: Procedures for seal-chamber cover removal by model

| Model | Procedure |
|---------------------------------------|---|
| 3196, CV 3196, HT 3196, LF 3196, 3796 | Remove the seal-chamber cover. |
| NM 3196, 3198 | Remove the seal-chamber cover and/or backplate. |

Remove the seal-chamber cover (3196, CV 3196, HT 3196, LF 3196, 3796)

1. Remove the gland stud nuts (355).
2. Remove the seal-chamber stud nuts (370H).
3. Remove the seal chamber (184).

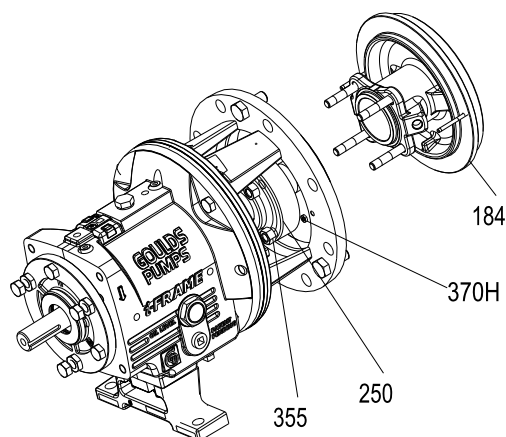


Figure 53: Seal chamber cover removal

4. Remove the shaft sleeve (126) if it is used.
The mechanical seal is attached to the sleeve.

NOTICE:

Be careful with the mechanical seal. Carbon or ceramic components are brittle and easily broken.

5. Remove the rotary portion of the seal from the sleeve by loosening the setscrews and sliding it off the sleeve.
Refer to the mechanical-seal instructions for more information.

6. Remove the gland (250), the stationary portion of the seal, and the O-ring (360Q).

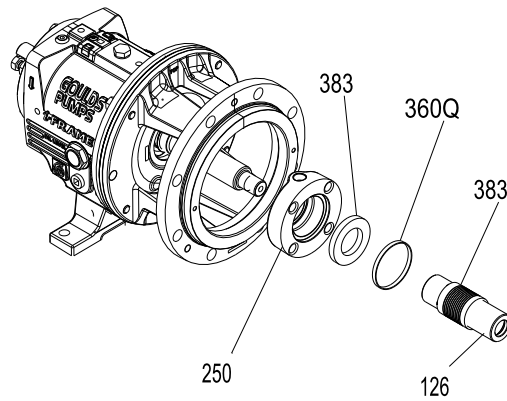


Figure 54: Gland removal

Remove the stuffing-box cover (3196, CV 3196, HT 3196, LF 3196, 3796)

1. Remove the gland nuts (355) and the gland (107).
2. Remove the stuffing-box-cover nuts (370H).
3. Remove the stuffing-box cover (184).

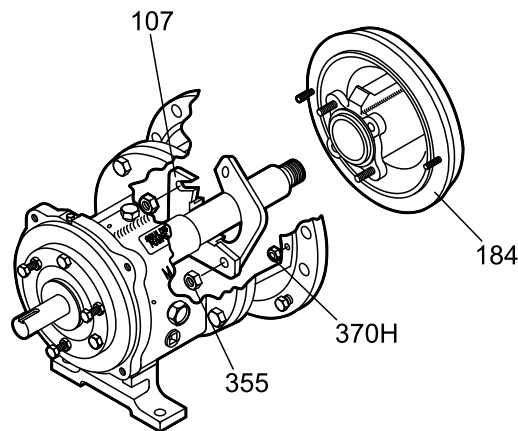


Figure 55: Stuffing box cover removal

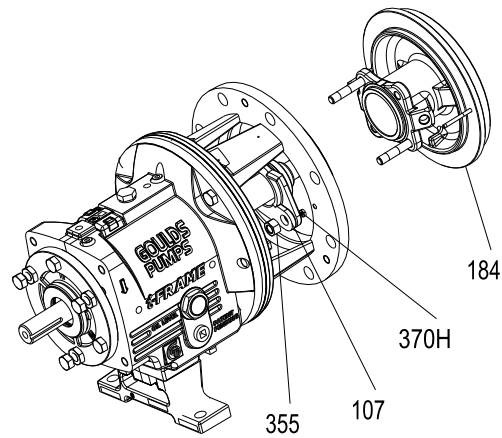


Figure 56: Stuffing box cover removal

4. Remove the shaft sleeve (126).

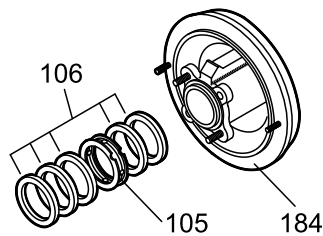


Figure 57: Remove the shaft sleeve

5. Remove the packing (106) and lantern ring (105) from the stuffing-box cover (184). A lantern ring does not come with self-lubricating graphite packing.

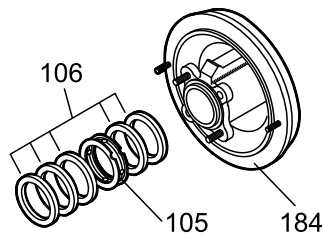


Figure 58: Packing and lantern ring removal

Remove the dynamic seal

1. Remove the stud nuts (370H).

2. Remove the dynamic-seal assembly.

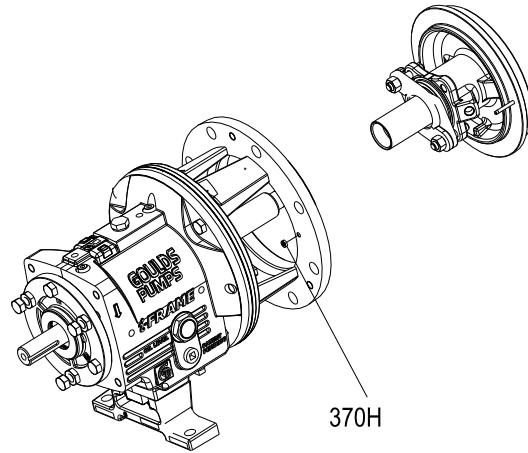


Figure 59: Dynamic seal removal

3. Remove the socket head cap screws (265).
4. Remove the packed stuffing box cover (184) and gasket (264).
5. Remove the repeller (262) from the backplate (444).

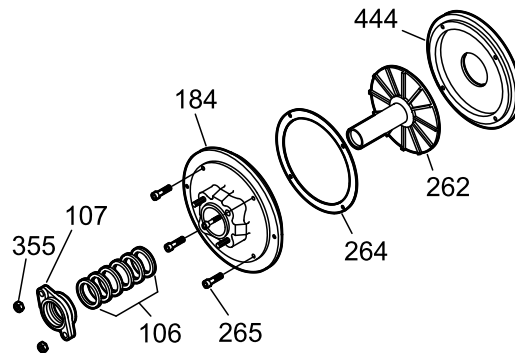



Figure 60: Repeller removal

Remove the frame adapter (MTi, LTi, XLT-i, i17)

The 3198 frame adapter is not interchangeable with the adapter of any other model.

1. Remove the dowel pins (469B) and the bolts (370B).
2. Remove the frame adapter (108).
3. Remove and discard the gasket (360D).

You will install a new gasket during reassembly.

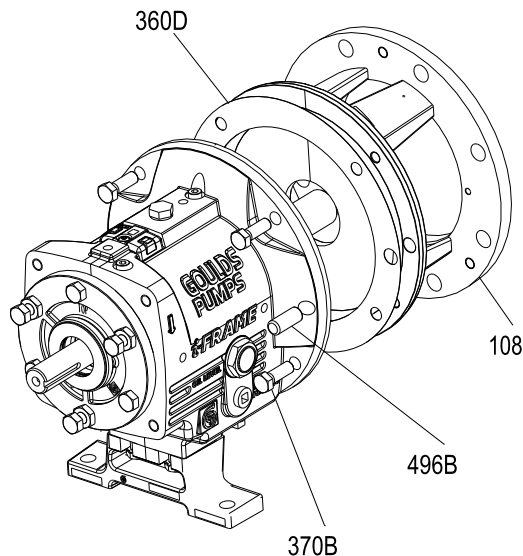

Remove the inboard labyrinth oil seal

Labyrinth oil-seal O-rings are part of the 3196 maintenance kits, and they are sold separately.

1. Determine the fit of your labyrinth oil seal.

Table 11: Labyrinth oil-seal fit

| Model | Type of fit |
|-------------------------|--|
| STi | O-ring fit into the bearing-frame adapter (228A) |
| MTi, LTi, XLT-i and i17 | O-ring fit into the frame adapter |

2. Remove the O-rings (497H and 497J) and the seal (333A).

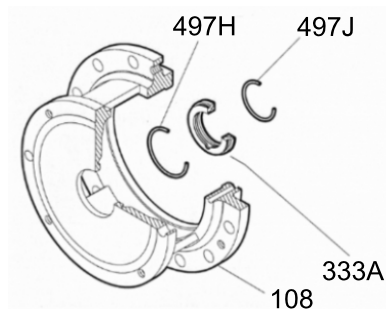


Figure 61: O-ring removal

Disassemble the power end (STi, MTi)

1. Remove the clamp screws (370C) and back off the jam nuts (423).
2. Tighten the jack screws (370D) evenly to move the bearing housing (134) out of the bearing frame (228A).

3. Remove the shaft assembly from the bearing frame (228A).

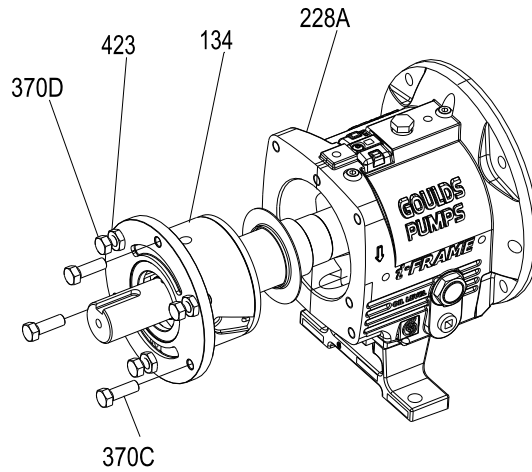


Figure 62: Shaft assembly removal

4. Remove the jack screws (370D) with nuts (423).
5. Remove the bearing housing O-ring (496) and the bearings.
6. Remove the outboard bearing retaining snap ring (361A).

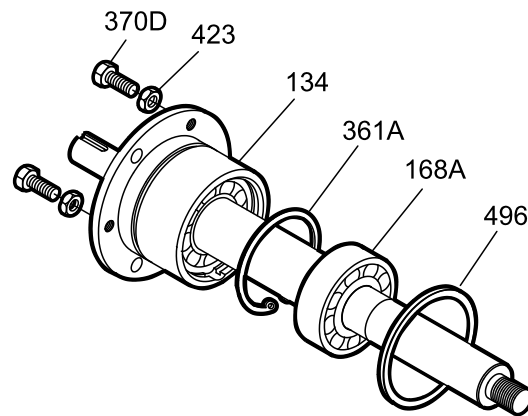


Figure 63: Outboard bearing retaining snap ring removal

7. Remove the bearing housing (134) and bearings (112A and 168A) from the shaft (122).

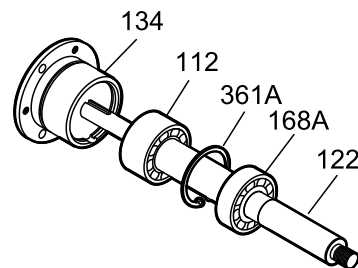


Figure 64: Bearing housing and bearings removal

8. Remove the bearing locknut (136) and bearing lock washer (382).
9. Remove the inboard bearing (168A).
10. Remove the outboard bearing (112A).

NOTICE:

Use force only on the inner race when pressing bearings from the shaft. Failure to do so may result in equipment damage.

NOTICE:

Do not reuse bearings if removed from shaft. Doing so may result in equipment damage. Replace the bearings before reassembly.

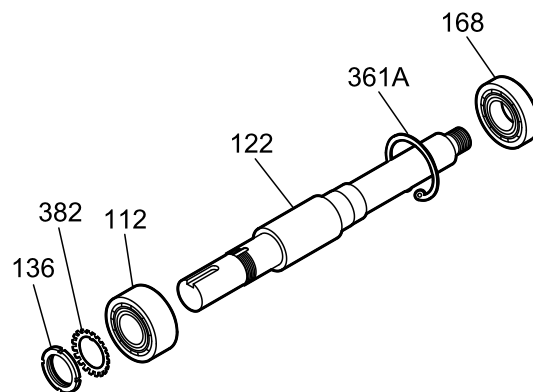


Figure 65: Outboard bearing removal

Disassemble the power end (STi and MTi with duplex bearings)

1. Remove the clamp screws (370C) and back off the jam nuts (423).
2. Tighten the jack screws (370D) evenly to move the bearing housing (134) out of the bearing frame (228A).
3. Remove the shaft assembly from the bearing frame (228A).

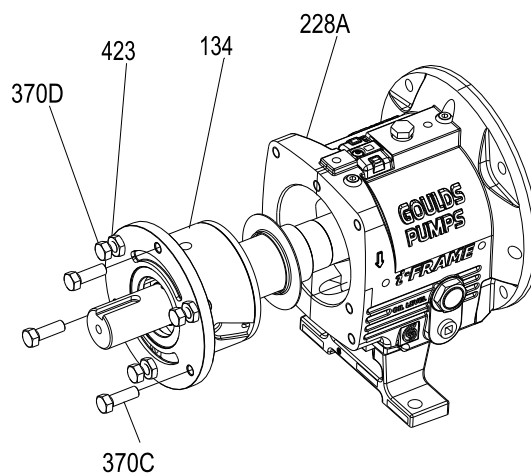


Figure 66: Shaft assembly removal

4. Remove the jack screws (370D) with the nuts (423).

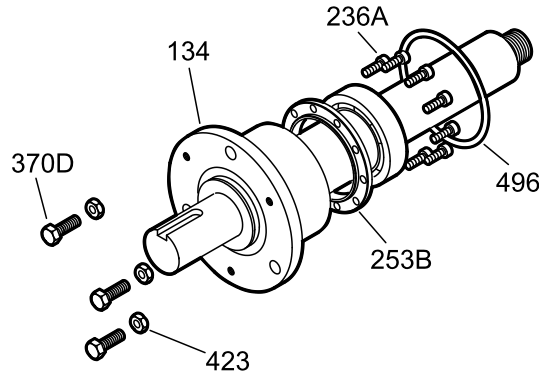


Figure 67: Jack screw removal

5. Remove the bearing housing O-ring (496).
6. Remove the clamp ring screws (236A) and separate the clamp ring (253B) from the bearing housing (134).
You must remove the bearings before you can remove the clamp ring from the shaft.
7. Remove the bearing housing (134) and the bearings (112A and 168A) from the shaft (122).

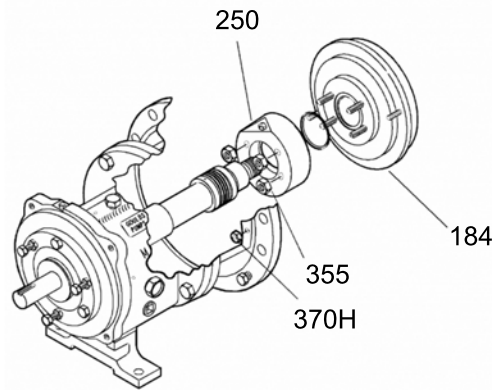


Figure 68: Bearing housing and bearing removal

8. Remove the inboard bearing (168A).

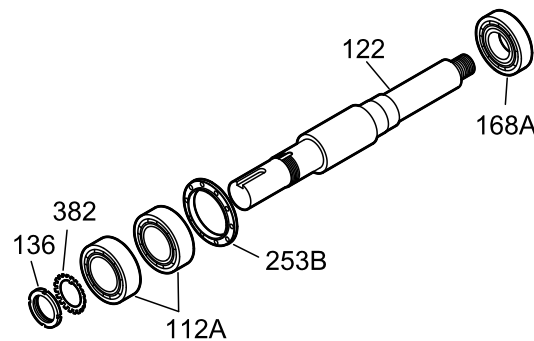


Figure 69: Inboard bearing removal

9. Remove the bearing locknut (136) and bearing lockwasher (382).
10. Remove the outboard bearings (112A).

NOTICE:

Use force only on the inner race when pressing bearings from the shaft. Failure to do so may result in equipment damage.

NOTICE:

Do not reuse bearings if removed from shaft. Doing so may result in equipment damage. Replace the bearings before reassembly.

11. Remove the outboard labyrinth oil seal (332A) from the bearing housing (134). Remove the O-rings (497F and 497G) if it is necessary. Labyrinth oil seal O-rings are part of the 3196 maintenance kits and they are sold separately.

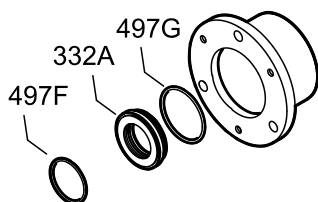


Figure 70: Outboard labyrinth oil seal removal

Disassemble the power end (LTi)

1. Remove the clamp screws (370C) and back off the jam nuts (423).
2. Evenly tighten the jack screws (370D) to move the bearing housing (134) out of the bearing frame (228A).
3. Remove the shaft assembly from the bearing frame (228A).

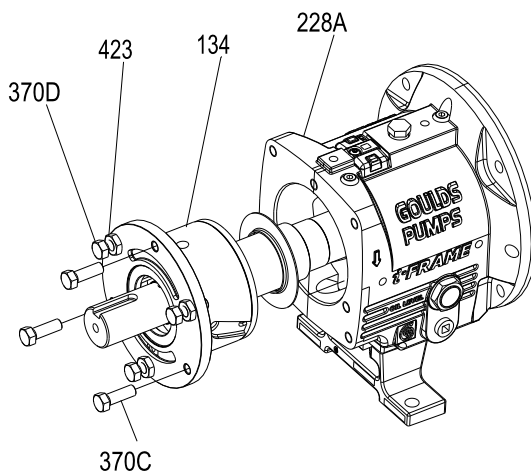


Figure 71: Shaft assembly removal

4. Remove the jack screws (370D) with the nuts (423).
5. Remove the clamp-ring screws (236A) and separate the clamp ring (253B) from the bearing housing (134).

You must remove the bearings before you can remove the clamp ring from the shaft.

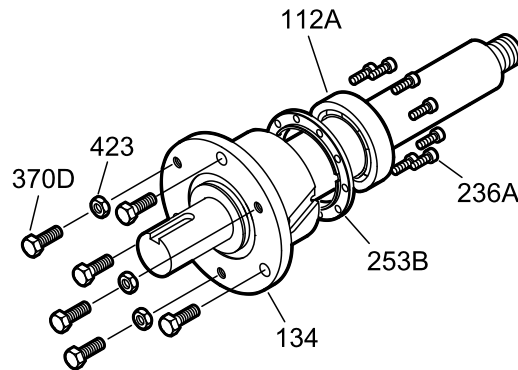


Figure 72: Clamp ring removal

6. Remove the bearing housing (134) and the bearings (112A and 168A) from the shaft (122).

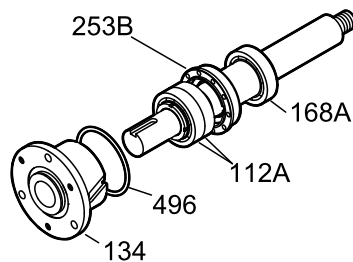


Figure 73: Bearing housing and bearing removal

7. Remove the bearing housing O-ring (496) and the inboard bearing (168A).

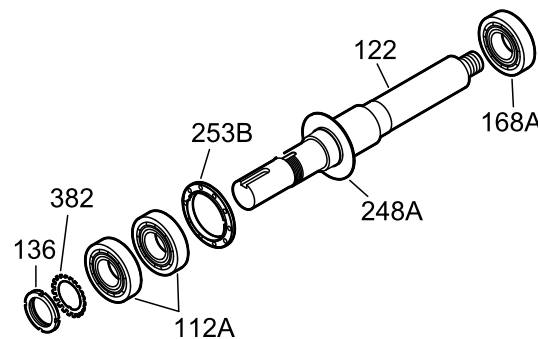


Figure 74: O-ring removal

8. Remove the flinger so that the flinger seating surface on the shaft can be cleaned.
9. Remove the bearing locknut (136) and the bearing lockwasher (382).
10. Remove the outboard bearings (112A) and the clamp ring (253B).

NOTICE:

Use force only on the inner race when pressing bearings from the shaft. Failure to do so may result in equipment damage.

NOTICE:

Do not reuse bearings if removed from shaft. Doing so may result in equipment damage. Replace the bearings before reassembly.

11. Remove the outboard labyrinth oil seal (332A) from the bearing housing (134).
12. Remove the O-rings (497F and 497G) if it is necessary.
Labyrinth oil-seal O-rings are part of the 3196 maintenance kits, and they are sold separately.


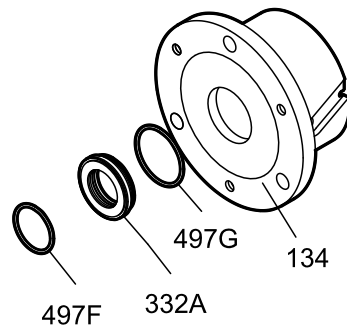


Figure 75: O-ring removal


Disassemble the power end (XLT-i and i17)

1. Remove the bearing frame from the frame foot (241) using the frame-foot bolts (370F).

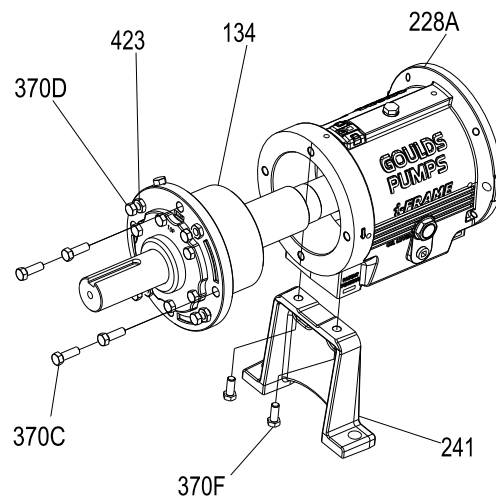


2. Remove the clamp screws (370C) and back off the jam nuts (423).
3. Tighten the jack screws (370D) evenly to move the bearing housing (134) out of the bearing frame (228A).
4. Remove the shaft assembly from the bearing frame (228A).
5. Remove the jack screws (370D), the nuts (423), and the bearing housing O-ring.


- Remove the inboard bearing (168A).

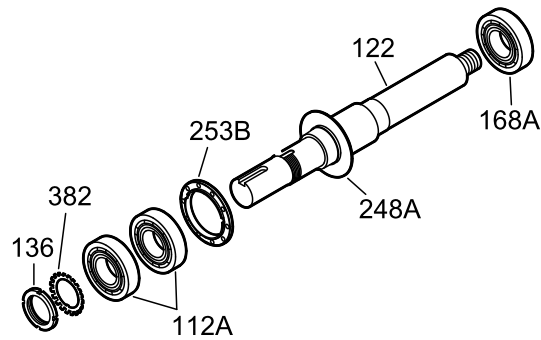

- Remove the bolts (371C), the bearing end cover (109A), and the gasket (360C).
- Remove the outboard labyrinth oil seal (332A) from the end cover (109A).
- Remove the O-rings (497F and 497G) if it is necessary.
Labyrinth oil-seal O-rings are part of the 3196 maintenance kits, and they are sold separately.

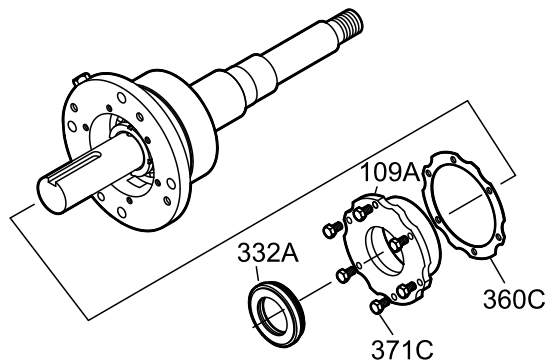

- Remove the bearing housing (134) and the bearing (112A) from the shaft (122).

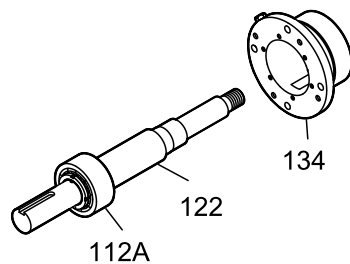


- Remove the bearing locknut (136), the bearing lockwasher (382), and the outboard bearing (112A).

NOTICE:

Use force only on the inner race when pressing bearings from the shaft. Failure to do so may result in equipment damage.


NOTICE:

Do not reuse bearings if removed from shaft. Doing so may result in equipment damage. Replace the bearings before reassembly.

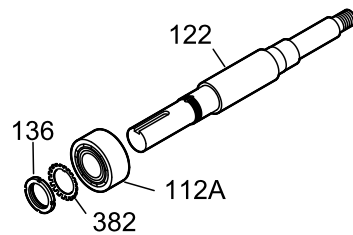


Disassemble the power end (XLT-i and i17 with duplex bearings)


1. Remove the bearing frame to frame foot (241) using the frame-foot bolts (370F).

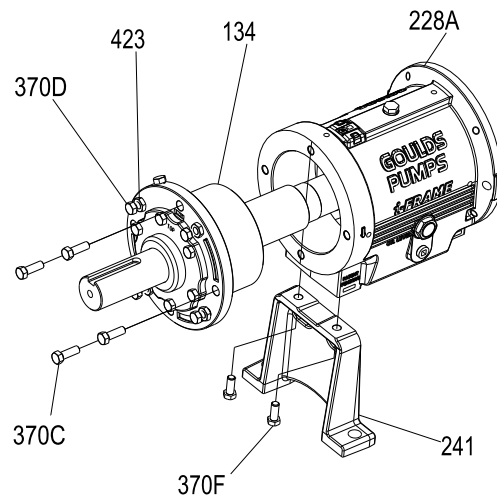


2. Remove the clamp screws (370C) and back off the jam nuts (423).
3. Tighten the jack screws (370D) evenly to move the bearing housing (134) out of the bearing frame (228A).
4. Remove the shaft assembly from the bearing frame (228A).
5. Remove the jack screws (370D) and the nuts (423).
6. Remove the bearing housing O-ring (496) and the inboard bearing (168A).

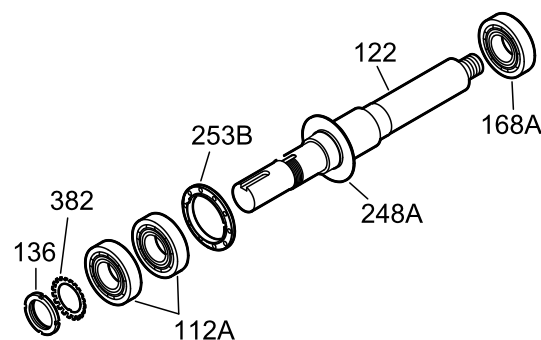

7. Remove the bolts (371C), the end cover (109A), and the gasket (360C).
8. If necessary, remove the outboard labyrinth oil seal (332A) from the end cover (109A) and remove the O-rings (497F and 497G).
Labyrinth oil-seal O-rings are part of the 3196 maintenance kits, or they are sold separately.

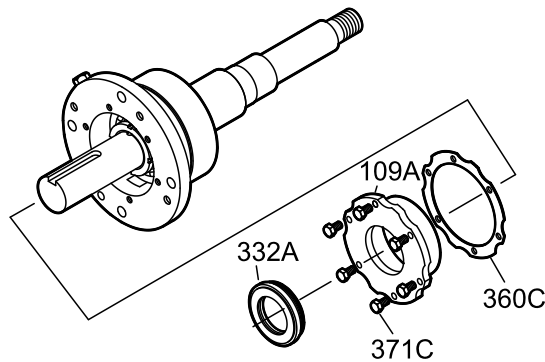

9. Remove the bearing housing (134) and bearings (112A) from the shaft (122) .

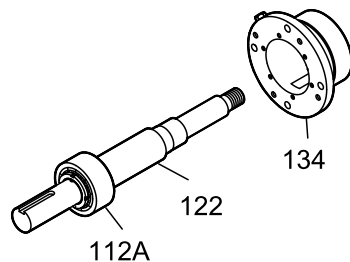


10. Remove the bearing locknut (136), the bearing lockwasher (382), and the outboard bearing (112A).

NOTICE:

Use force only on the inner race when pressing bearings from the shaft. Failure to do so may result in equipment damage.

NOTICE:

Do not reuse bearings if removed from shaft. Doing so may result in equipment damage. Replace the bearings before reassembly.

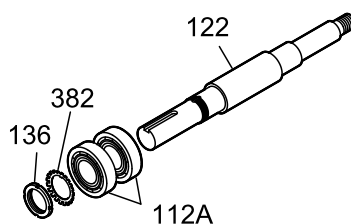

Disassemble the bearing frame

1. Remove these plugs from the bearing frame (228A).
 - oil-fill plug (113A)

- oil-drain plug (408A)
 - sight-oiler plug (408J)
 - four oil mist/grease connection plugs (408H)
 - oil-cooler inlet and outlet plugs (408L and 408M) or oil cooler
2. For the MTi and LTi models, remove the bearing frame foot-to-frame bolts (370F) and the frame foot (241).

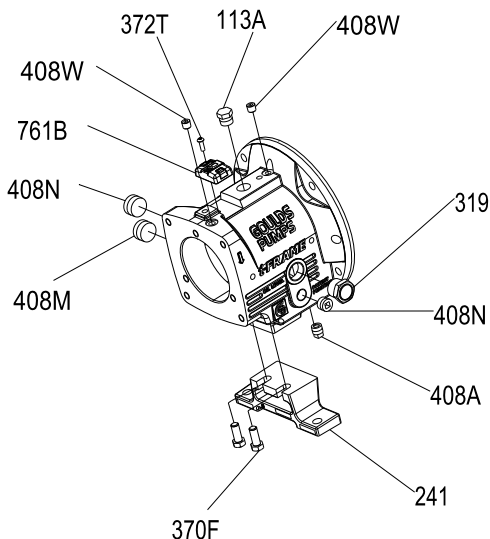


Figure 76: Plug removal

Guidelines for i-ALERT[®] Condition Monitor disposal

Precautions



WARNING:

- Explosive hazard and risk of personal injury. Heating to high temperatures could cause combustion of the condition monitor. Never heat the condition monitor to temperatures in excess of 149°C | 300°F or dispose of in a fire.

Guidelines

The battery contained in the condition monitor does not contain enough lithium to qualify as reactive hazardous waste. Use these guidelines when disposing of the condition monitor.

- The condition monitor is safe for disposal in the normal municipal waste stream.
- Adhere to local laws when you dispose of the condition monitor.

Disassemble the C-face adapter



WARNING:

Risk of personal injury and equipment damage from dropping or tipping motor. The motor must be properly supported with a clean, uncorroded eye bolt or a strap under both ends.

1. Loosen the motor-mounting bolts and remove the motor.

Table 12: Required number of motor-mounting bolts

This table shows the number of motor-mounting bolts.

| Pump frame | Motor frame | Number of bolts |
|------------|-------------|-----------------|
| STi | All | 4 |

| Pump frame | Motor frame | Number of bolts |
|-------------|-------------|-----------------|
| MTi and LTi | 143-286 | 4 |
| | 324-365 | 8 |

- Loosen the bolts attached to the bearing-frame flange and remove the C-face adapter from the bearing frame.

Pre-assembly inspections

Guidelines

Before you assemble the pump parts, make sure you follow these guidelines:

- Inspect the pump parts according to the information in these pre-assembly topics before you reassemble your pump. Replace any part that does not meet the required criteria.
- Make sure that the parts are clean. Clean the pump parts in solvent in order to remove oil, grease, and dirt.

NOTICE:

Protect machined surfaces while cleaning the parts. Failure to do so may result in equipment damage.

Replacement guidelines

Casing check and replacement



WARNING:

Risk of death or serious injury. Leaking fluid can cause fire and/or burns. Inspect and ensure gasket sealing surfaces are not damaged and repair or replace as necessary.

Inspect the casing for cracks and excessive wear or pitting. Thoroughly clean gasket surfaces and alignment fits in order to remove rust and debris.

Repair or replace the casing if you notice any of these conditions:

- Localized wear or grooving that is greater than 3.2 mm | 1/8 in. deep
- Pitting that is greater than 3.2 mm | 1/8 in. deep
- Irregularities in the casing-gasket seat surface

Casing areas to inspect

The arrows point to the areas to inspect for wear on the casing:

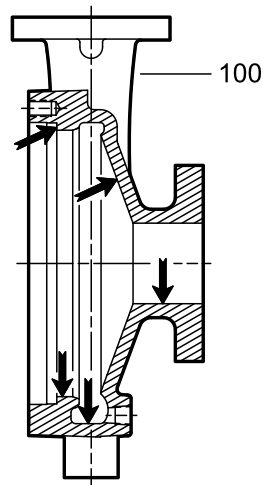


Figure 77: 3196, HT 3196, LF 3196, NM 3196, and 3198 casing

Impeller replacement

This table shows the criteria for replacing the impeller:

| Impeller parts | When to replace |
|----------------|--|
| Impeller vanes | <ul style="list-style-type: none"> When grooved deeper than 1.6 mm 1/16 in., or When worn evenly more than 0.8 mm 1/32 in. |
| Pumpout vanes | When worn or bent more than 0.8 mm 1/32 in. |
| Vane edges | When you see cracks, pitting, or corrosion damage |

Impeller areas to inspect

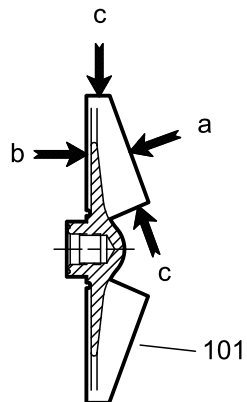


Figure 78: Areas to inspect for wear on the 3196 impeller.

Frame adapter check and replacement

- Replace the frame adapter if it has cracks or excessive corrosion damage.
- Make sure the gasket surface is clean.

Dynamic-seal repeller replacement

This table shows the criteria for replacing dynamic-seal repeller parts for the 3196, CV 3196, and LF 3196 pump models.

| Dynamic seal part | When to replace |
|----------------------------|---|
| Dynamic-seal repeller vane | The grooves are deeper than 1.6 mm 1/16 in. or are worn evenly more than 0.8 mm 1/32 in.. |
| Sleeve surface | The surface has grooves, pitting, or other damage. |

Labyrinth seal replacement

Replace the labyrinth-seal O-ring if it has cuts and cracks.

Gaskets, O-rings, and seats replacement



WARNING:

Risk of death or serious injury. Leaking fluid can cause fire and/or burns. Replace all gaskets and O-rings at each overhaul or disassembly.

- Replace all gaskets and O-rings at each overhaul and disassembly.
- Inspect the seats. They must be smooth and free of physical defects. In order to repair worn seats, skin cut them in a lathe while you maintain dimensional relationships with other surfaces.
- Replace parts if the seats are defective.

Shaft and sleeve replacement guidelines

Two types of sleeves

The 3198 is offered with either a metallic sleeve that uses the standard 3196 shaft or a PTFE sleeve. The PTFE sleeve requires a special shaft and a different inboard labyrinth oil seal.

Shaft measurements check

Replace the shaft (122) if any measurements exceed acceptable values. See Bearing fits and tolerances.

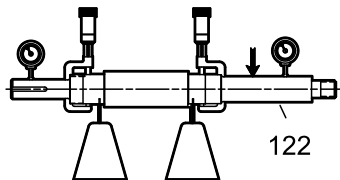


Figure 79: Shaft measurements check

Straightness check

Replace the shaft (122) if runout exceeds the values in this table:

Table 13: Shaft runout tolerances for sleeve fit and coupling fit

| | Sleeve fit in millimeters inches | Coupling fit in millimeters inches |
|----------------|------------------------------------|--------------------------------------|
| With sleeve | 0.025 0.001 | 0.025 0.001 |
| Without sleeve | 0.051 0.002 | 0.025 0.001 |

Shaft and sleeve check

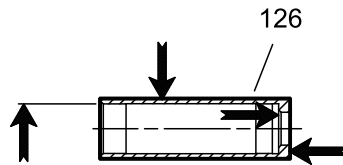


Figure 80: Shaft and sleeve check

- Check the shaft and sleeve (126) surface for grooves and pitting.
- Replace the shaft and sleeve if any grooves or pits are found.

Bearing-frame inspection

Checklist

Check the bearing frame for these conditions:

- Visually inspect the bearing frame and frame foot for cracks.
- Check the inside surfaces of the frame for rust, scale, or debris. Remove all loose and foreign material.
- Make sure that all lubrication passages are clear.
- If the frame has been exposed to pumped fluid, inspect the frame for corrosion or pitting.
- Inspect the inboard-bearing bores.
If any bores are outside the measurements in the Bearing fits and tolerances table, replace the bearing frame.

Surface inspection locations

This figure shows the areas to inspect for wear on the bearing frame outside surface.

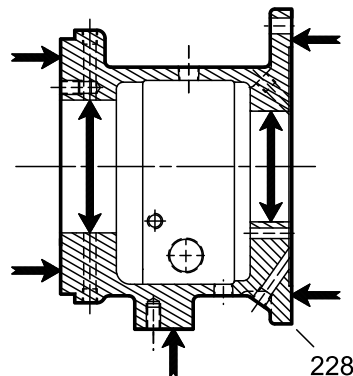


Figure 81: Outside surface inspection locations

This figure shows the areas to inspect for wear on the bearing frame inside surface.

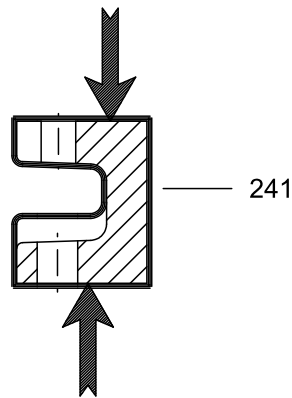


Figure 82: Inside surface inspection locations

C-face adapter inspection

Checklist

- Visually inspect the C-face adapter (340) for cracks.
- Check all surfaces for rust, scale, or debris and remove all loose and foreign material.
- Check for corrosion or pitting.

This figure shows the areas to inspect for cracks on the C-face adapter.

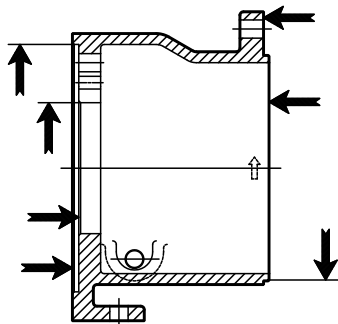


Figure 83: C-face adapter inspection locations

Seal chamber and stuffing box cover inspection

Checklist

Perform these checks when you inspect the seal chamber and stuffing box cover:

- Make sure that these surfaces are clean:
 - Seal chamber and stuffing box cover
 - Dynamic-seal backplate gasket
 - Mounting
- Make sure there is no pitting or wear greater than 3.2 mm | 1/8 in. deep. Replace the seal chamber and stuffing box cover if pitting or wear exceeds this measurement.
- Inspect the machined surfaces and mating faces noted in the figures.

These images point to the areas to inspect:

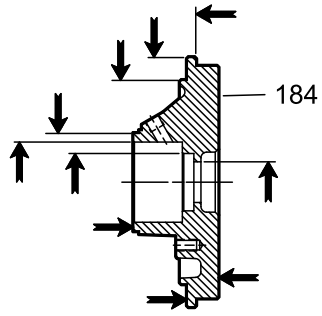


Figure 84: BigBore™ chamber

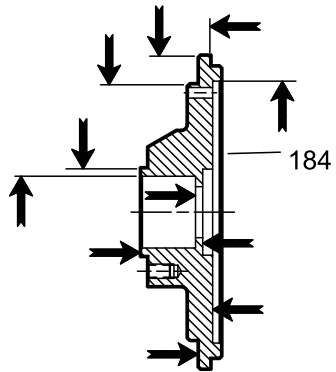


Figure 85: Stuffing box cover

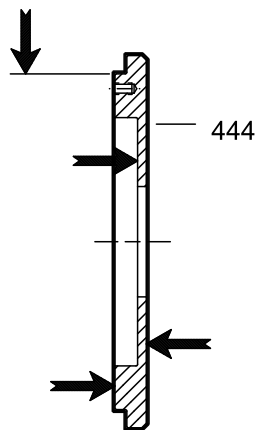


Figure 86: Dynamic-seal backplate

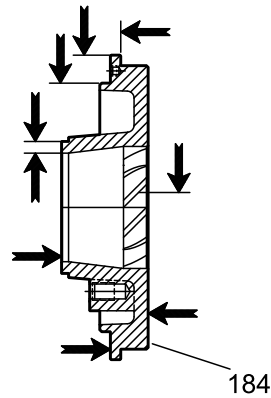


Figure 87: TaperBore™ Plus

Bearings inspection

Condition of bearings

Do not reuse bearings. The condition of the bearings provides useful information on operating conditions in the bearing frame.

Checklist

Perform these checks when you inspect the bearings:

- Inspect the bearings for contamination and damage.
- Note any lubricant condition and residue.
- Inspect the ball bearings to see if they are loose, rough, or noisy when you rotate them.
- Investigate any bearing damage to determine the cause. If the cause is not normal wear, correct the issue before you return the pump to service.

Bearing-housing inspection

Checklist

- Inspect the bearing-housing (134) bore according to the bearing fits and tolerances table.
- Replace the bearing housing if the dimensions exceed acceptable values. Reference: see Bearings fits and tolerances.
- Visually inspect the bearing housing for cracks and pits.

Checklist for specific models

This table shows bearing-housing checks that are required for specific models of pump.

| Frame | Bearing-housing check |
|---------------|--|
| STi and MTi | Ensure that the snap-ring groove is not cracked. |
| LTi | Clear all grooves and holes. |
| XLT-i and i17 | Clean the gasket surface. |

Inspection locations

The following images point to the areas to inspect on the bearing housing.

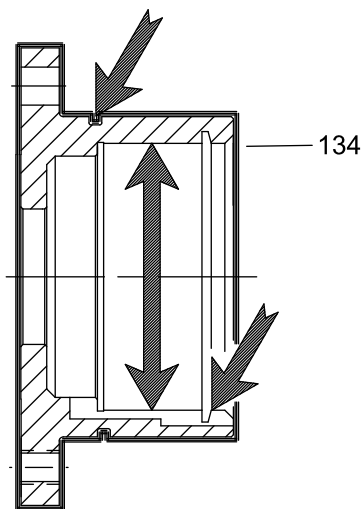


Figure 88: STi and MTi bearing housing

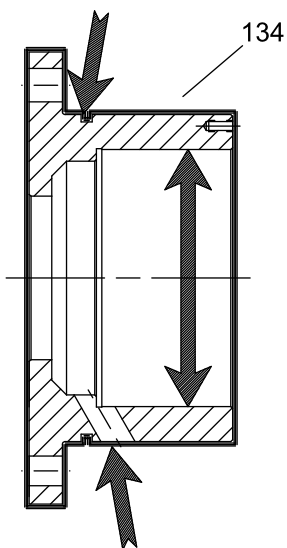


Figure 89: LTi bearing housing

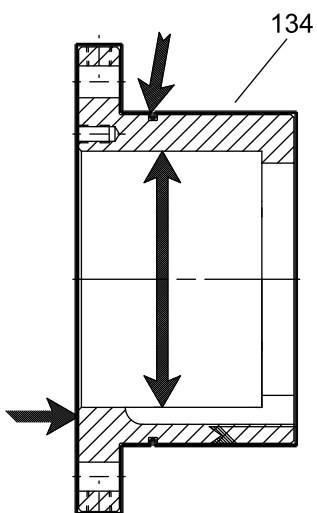


Figure 90: XLT-i and i17 bearing housing

Bearing fits and tolerances

Table 14: Bearing fits and tolerances table

This table references the bearing fits and tolerances according to the ABEC I standard.

| | STi millimeters inches | MTi millimeters inches | LTi millimeters inches | XLT-i, i-17 millimeters inches |
|---------------------|--|--|--|--|
| Shaft OD Inboard | 35.014 1.3785 35.004 1.3781 | 45.014 1.7722 45.004 1.7718 | 55.016 2.1660 55.004 2.1655 | 65.016 2.5597 65.004 2.5592 |
| Clearance | 0.025 0.0010 tight 0.003 0.0001 tight | 0.025 0.0010 tight 0.003 0.0001 tight | 0.030 0.0012 tight 0.003 0.0001 tight | 0.030 0.0012 tight 0.003 0.0001 tight |
| Bearing ID Inboard | 35.001 1.3780 34.989 1.3775 | 45.001 1.7717 44.988 1.7712 | 55.001 2.1654 54.986 2.1648 | 65.001 2.5591 64.986 2.5585 |
| Frame ID Inboard | 72.000 2.8346 72.017 2.8353 | 100.000 3.9370 100.023 3.9379 | 120.000 4.7244 120.023 4.7253 | 140.000 5.5118 140.025 5.5128 |
| Clearance | 0.031 0.0012 loose 0.000 0.0000 loose | 0.038 0.0015 loose 0.000 0.0000 loose | 0.038 0.0015 loose 0.000 0.0000 loose | 0.043 0.0017 loose 0.000 0.0000 loose |
| Bearing OD Inboard | 72.000 2.8346 71.986 2.8341 | 100.000 3.9370 99.985 3.9364 | 120.000 4.7244 119.985 4.7238 | 140.000 5.5118 139.982 5.5111 |
| Shaft OD Outboard | 30.010 1.1815 30.002 1.1812 | 45.014 1.7722 45.004 1.7718 | 50.013 1.9690 50.003 1.9686 | 65.016 2.5597 65.004 2.5592 |
| Clearance | 0.020 0.0008 tight 0.003 0.0001 tight | 0.025 0.0010 tight 0.003 0.0001 tight | 0.025 0.0010 tight 0.003 0.0001 tight | 0.030 0.0012 tight 0.003 0.0001 tight |
| Bearing OD Outboard | 30.000 1.1811 29.990 1.1807 | 45.001 1.7717 44.988 1.7712 | 50.000 1.9685 49.987 1.9680 | 65.001 2.5591 64.986 2.5585 |
| Housing OD Outboard | 72.000 2.8346 72.017 2.8353 | 100.000 3.9370 100.022 3.9379 | 110.000 4.3307 110.023 4.3316 | 140.000 5.5118 140.025 5.5128 |
| Clearance | 0.031 0.0012 loose 0.000 0.0000 loose | 0.038 0.0015 loose 0.000 0.0000 loose | 0.038 0.0015 loose 0.000 0.0000 loose | 0.043 0.0017 loose 0.000 0.0000 loose |
| Bearing OD Outboard | 72.000 2.8346 71.986 2.8341 | 100.000 3.9370 99.985 3.9364 | 110.000 4.3307 109.985 4.3301 | 140.000 5.5118 139.982 5.5111 |

Assemble the rotating element and the bearing frame (STi and MTi)



CAUTION:

Risk of physical injury from hot bearings. Wear insulated gloves when using a bearing heater.

NOTICE:

Ensure that the pipe threads are clean. Apply thread sealant to the plugs and fittings. Failure to do so may result in oil leaks and equipment damage.

NOTICE:

There are several methods used to install bearings. The recommended method is to use an induction heater that heats as well as demagnetizes the bearings. Failure to use this method may result in equipment damage.

1. Prepare the bearing frame (228) as follows (see the illustration):
 - a) Install the oil-fill plug (113A).
 - b) Install the oil-drain plug (408A).
 - c) Install the sight glass (319).
 - d) Install the sight oiler plug (408J).
 - e) Install the plug for the oil-cooler inlet (408L).
 - f) Install the plug for the oil-cooler outlet (408M).

- g) Install four oil-mist connection plugs (408H).
Or: Install two grease fittings (193) and two grease-relief plugs (113).
- h) Attach the bearing-frame foot (241) and fasten the bolts (370F) by hand.

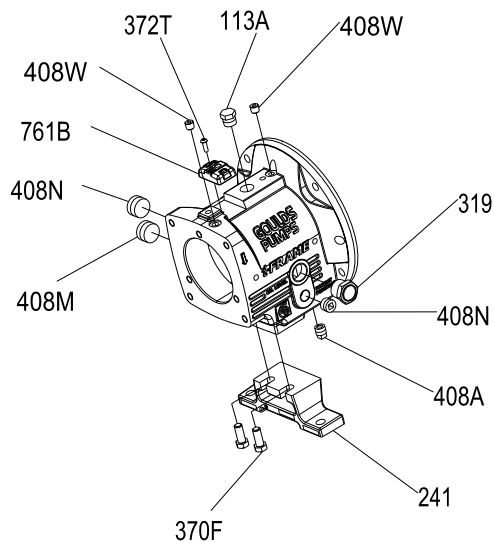


Figure 91: Oil mist connection plugs

2. Install the outboard bearing (112A) on the shaft (122).
The regreaseable bearing has a single shield. The outboard bearing is installed with the shield toward the impeller.
 - a) Inspect the shaft (122) to ensure that it is clean, dimensionally correct, and is free of nicks and burrs.
 - b) Lightly coat the bearing seating with a thin film of oil.
 - c) Remove the bearing (112) from its packaging.
 - d) Wipe the preservative from the bearing (112) bore and outer diameter.
 - e) Use an induction heater with a demagnetizing cycle to heat the bearing (112) to an inner ring temperature of 110 °C | 230 °F.
 - f) Position the bearing (112) on the shaft (122) against the shoulder and snug the locknut (136) against the bearing until it is cool.
The locknut prevents the bearing from moving away from the shaft shoulder as it cools.
 - g) Remove the bearing locknut (136) after the bearing (112) cools.
3. Put the lockwasher (382) onto the shaft (122).
4. Thread the locknut (136) onto the shaft (122) and tighten it until it is snug.
5. Bend the tangs of the lockwasher into the slots of the locknut.
6. Put the bearing-retaining ring (361A) onto the shaft (122).
Make sure that the flat side of the ring is towards the bearing.
7. Coat the inner surfaces of the bearings with lubricant.
8. Put the inboard bearing (168) onto the shaft (122).

The regreasable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.

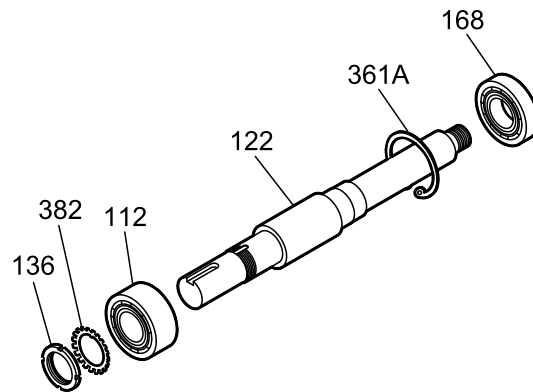


Figure 92: Inboard bearing reassembly

9. Prepare the shaft for assembly as follows (see the illustration):
 - a) Install a new O-ring (496).
 - b) Coat the outside of the outboard bearing (112A) with oil.
 - c) Coat the bore of the bearing housing (134) with oil.
 - d) Put the bearing housing (134) onto the shaft.
Do not use force.
 - e) Insert the bearing-retaining ring (361A) into the bore groove of the bearing housing (134).

NOTICE:

Ensure that the space between the ends of the retaining ring are located in the oil return groove. Failure to do so will cause oil-flow obstruction and result in equipment damage.

Make sure that the shaft rotates freely.

- f) Install the outboard labyrinth oil-seal (332A) into the bearing housing (134). Place the drain slots of the oil seal at the bottom position (6 o'clock).
Make sure that the edges of the keyway are free from burrs. To protect the O-ring, cover the keyway lengthwise with a piece of electrical tape before you install the oil seal.

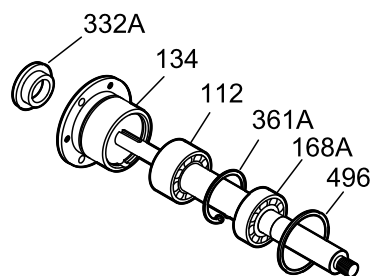


Figure 93: Outboard labyrinth oil-seal reassembly

10. Install the shaft assembly into the bearing frame as follows (see the illustration):
 - a) Coat the outside of the bearing housing (134) with oil.
 - b) Coat all the internal surfaces of the bearing frame (228) with oil.
 - c) Install the shaft assembly into the bearing frame (228).
Make sure that the shaft rotates freely.
 - d) Install the clamp bolts (370C) in the bearing housing (134) and tighten by hand.

- e) Install the jack bolts (370D) with the locknuts (423) in the bearing housing (134) and tighten by hand.

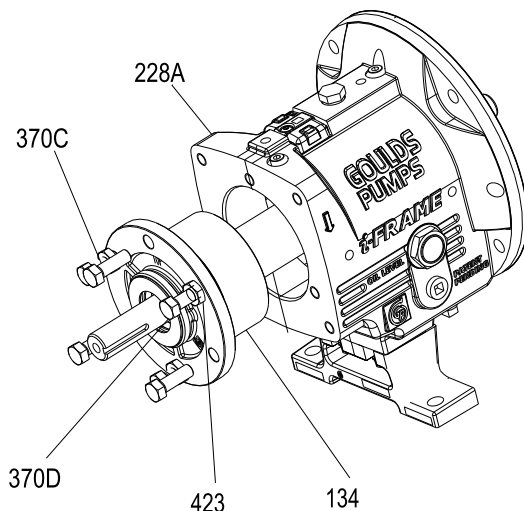


Figure 94: Jack bolt and locknut reassembly

Assemble the rotating element and the bearing frame (STi and MTi with duplex bearings)



WARNING:

Lifting and handling heavy equipment or components poses a crush hazard. Use caution during lifting and handling and wear appropriate Personal Protective Equipment (PPE, such as steel-toed shoes, gloves, etc.) at all times. Seek assistance if necessary.



CAUTION:

Risk of physical injury from hot bearings. Wear insulated gloves when using a bearing heater.

NOTICE:

There are several methods used to install bearings. The recommended method is to use an induction heater that heats as well as demagnetizes the bearings. Failure to use this method may result in equipment damage.

1. Prepare the bearing frame (228) as follows (see the illustration):
 - a) Install the oil-fill plug (113A).
 - b) Install the oil-drain plug (408A).
 - c) Install the sight glass (319).
 - d) Install the sight oiler plug (408J).
 - e) Install the plug for the oil-cooler inlet (408L).
 - f) Install the plug for the oil-cooler outlet (408M).
 - g) Install four oil-mist connection plugs (408H).
Or: Install two grease fittings (193) and two grease-relief plugs (113).

- h) Attach the bearing-frame foot (241) and fasten the bolts (370F) by hand.

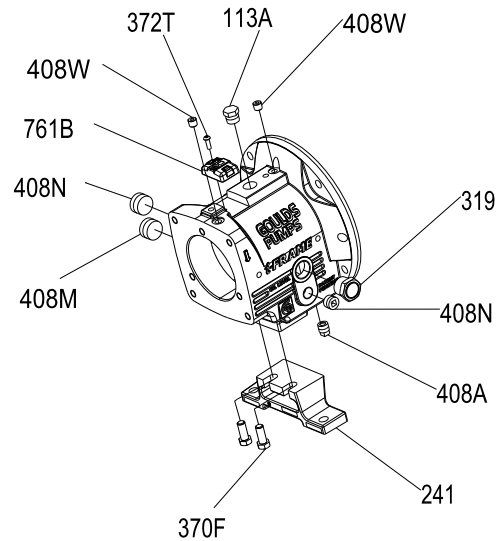


Figure 95: Bearing frame foot reassembly

2. Install the outboard bearings (112A) on the shaft (122).
The regreasable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.
The duplex bearings are mounted back-to-back. Make sure that the orientation of the bearings are correct.
 - a) Inspect the shaft (122) to ensure that it is clean, dimensionally correct, and is free of nicks and burrs.

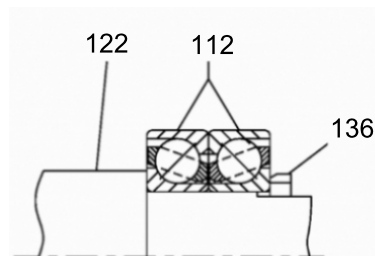


Figure 96: Shaft inspection

- b) Lightly coat the bearing seating with a thin film of oil.
 - c) Remove the bearings (112) from their packaging.
 - d) Wipe the preservative from the bearing (112) bore and outer diameter.
 - e) Use an induction heater with a demagnetizing cycle to heat both bearings (112) to an inner ring temperature of 110 °C | 230 °F.
 - f) Place both bearings (112) on the shaft (122) with the large outer races together (back-to-back).
 - g) Position the bearings (112) on the shaft (122) against the shoulder and snug the locknut (136) against the bearings until they are cool.
The locknut prevents the bearings from moving away from the shaft shoulder as they cool. Rotate the outer bearing rings relative to each other as they are placed on the shaft to assure good alignment.
 - h) Remove the bearing locknut (136) after the bearings (112) are cool.
3. Put the lockwasher (382) onto the shaft (122).
4. Thread the locknut (136) onto the shaft (122) and tighten it until it is snug.
5. Bend the tangs of the lockwasher into the slots of the locknut.
6. Place the bearing-clamp ring (253B) onto the shaft (122).

- Make sure that the orientation of the bearing-clamp ring is correct.
7. Coat the inner surfaces of the bearings with lubricant.
 8. Put the inboard bearing (168) onto the shaft (122).

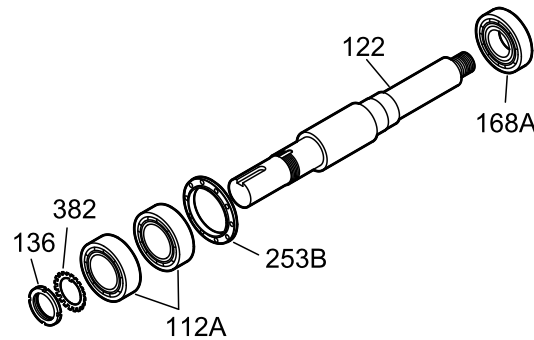


Figure 97: Inboard bearing reassembly

9. Install the bearing housing as follows (see the illustration):
 - a) Coat the outside of the outboard bearing (112A) with oil.
 - b) Coat the bore of the bearing housing (134) with oil.
 - c) Put the bearing housing (134) onto the shaft.

Do not use force.

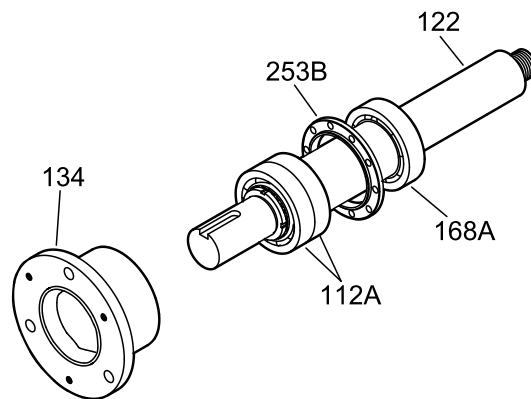


Figure 98: Bearing housing reassembly

10. Prepare the shaft for assembly as follows (see the illustration):
 - a) Place the bearing-clamp ring (253B) onto the shaft (122).
 - b) Fasten the clamp-ring bolts (236A) crosswise.

See the specified torque values.

Make sure that the shaft rotates freely.
 - c) Install a new O-ring (496).

- d) Install the outboard labyrinth oil-seal (332A) into the bearing housing (134). Place the drain slots of the oil seal at the bottom position (6 o'clock). Make sure that the edges of the keyway are free from burrs. To protect the O-ring, cover the keyway lengthwise with a piece of electrical tape before you install the oil seal.

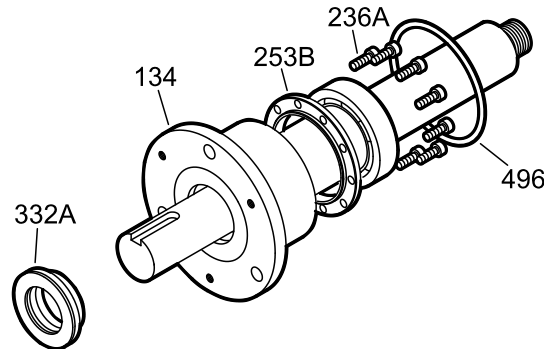


Figure 99: Outboard labyrinth oil seal reassembly

11. Install the shaft assembly into the bearing frame as follows (see the illustration):
- Coat the outside of the bearing housing (134) with oil.
 - Coat all the internal surfaces of the bearing frame (228) with oil.
 - Install the shaft assembly into the bearing frame (228). Make sure that the shaft rotates freely.
 - Install the clamp bolts (370C) in the bearing housing (134) and tighten by hand.
 - Install the jack bolts (370D) with the locknuts (423) in the bearing housing (134) and tighten by hand.

Assemble the rotating element and the bearing frame (LTi)



WARNING:

Lifting and handling heavy equipment poses a crush hazard. Use caution during lifting and handling and wear appropriate Personal Protective Equipment (PPE, such as steel-toed shoes, gloves, etc.) at all times. Seek assistance if necessary.



CAUTION:

Risk of physical injury from hot bearings. Wear insulated gloves when using a bearing heater.

NOTICE:

Ensure that the pipe threads are clean. Apply thread sealant to the plugs and fittings. Failure to do so may result in oil leaks and equipment damage.

NOTICE:

There are several methods used to install bearings. The recommended method is to use an induction heater that heats as well as demagnetizes the bearings. Failure to use this method may result in equipment damage.

- Prepare the bearing frame (228) as follows (see the illustration):
 - Install the oil-fill plug (113A).
 - Install the oil-drain plug (408A).

- c) Install the sight glass (319).
- d) Install the sight oiler plug (408J).
- e) Install the plug for the oil-cooler inlet (408L).
- f) Install the plug for the oil-cooler outlet (408M).
- g) Install four oil-mist connection plugs (408H).
Or: Install two grease fittings (193) and two grease-relief plugs (113).
- h) Attach the bearing-frame foot (241) and fasten the bolts (370F) by hand.

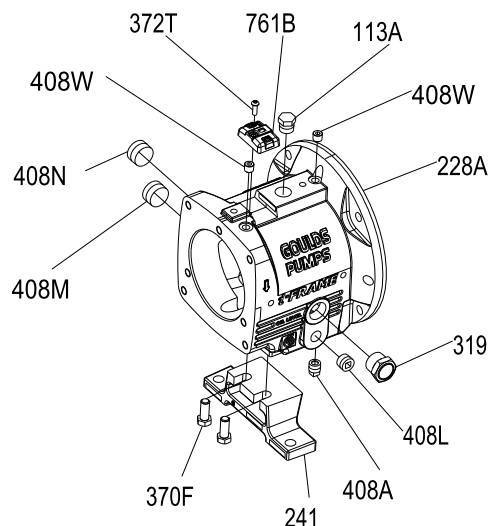


Figure 100: Attach the bearing-frame foot

2. Install the oil flinger (248A) onto the shaft (122).

NOTICE:

The oil flinger is press fitted onto the shaft. Use a properly sized driver. Failure to do so may result in damage to the oil flinger.

3. Place the bearing-clamp ring (253B) onto the shaft (122).
Make sure that the orientation of the bearing-clamp ring is correct.
4. Install outboard bearings (112A) on shaft (122).
The regreasable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.
The duplex bearings are mounted back-to-back. Make sure that the orientation of the bearings are correct.
 - a) Inspect the shaft (122) to ensure that it is clean, dimensionally correct, and is free of nicks and burrs.

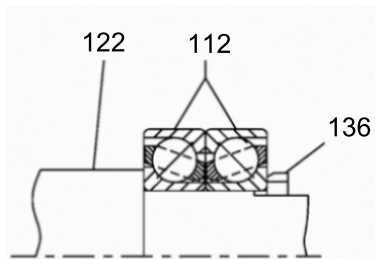


Figure 101: Shaft inspection

- b) Lightly coat the bearing seating with a thin film of oil.
- c) Remove the bearings (112) from their packaging.
- d) Wipe the preservative from the bearing (112) bore and outer diameter.

- e) Use an induction heater with a demagnetizing cycle to heat both bearings (112) to an inner ring temperature of 110 °C | 230 °F.
 - f) Place both bearings (112) on the shaft (122) with the large outer races together (back-to-back).
 - g) Position the bearings (112) on the shaft (122) against the shoulder and snug the locknut (136) against the bearings until they are cool.
The locknut prevents the bearings from moving away from the shaft shoulder as they cool. Rotate the outer bearing rings relative to each other as they are placed on the shaft to assure good alignment.
 - h) Remove the bearing locknut (136) after the bearings (112) are cool.
5. Put the lockwasher (382) onto the shaft (122).
 6. Thread the locknut (136) onto the shaft (122) and tighten it until it is snug.
 7. Bend the tangs of the lockwasher into the slots of the locknut.
 8. Coat the inner surfaces of the bearings with lubricant.
 9. Put the inboard bearing (168) onto the shaft (122).

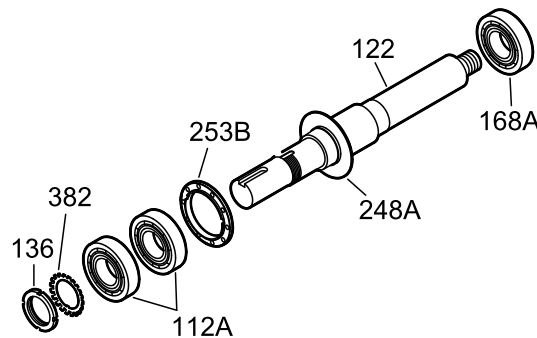


Figure 102: Inboard bearing reassembly

10. Install the bearing housing as follows (see the illustration):
 - a) Coat the outside of the outboard bearing (112A) with oil.
 - b) Coat the bore of the bearing housing (134) with oil.
 - c) Put the bearing housing (134) onto the shaft.
Do not use force.

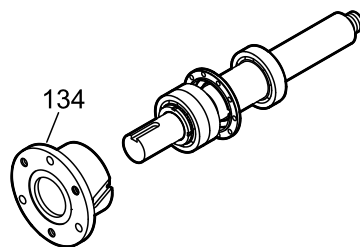


Figure 103: Bearing housing reassembly

11. Prepare the shaft for assembly as follows (see the illustration):
 - a) Fasten the clamp-ring bolts (236A) crosswise.
See the specified torque values.
Make sure that the shaft rotates freely.
 - b) Install a new O-ring (496).

- c) Install the outboard labyrinth oil-seal (332A) into the bearing housing (134). Place the drain slots of the oil seal at the bottom position (6 o'clock). Make sure that the edges of the keyway are free from burrs. To protect the O-ring, cover the keyway lengthwise with a piece of electrical tape before you install the oil seal.

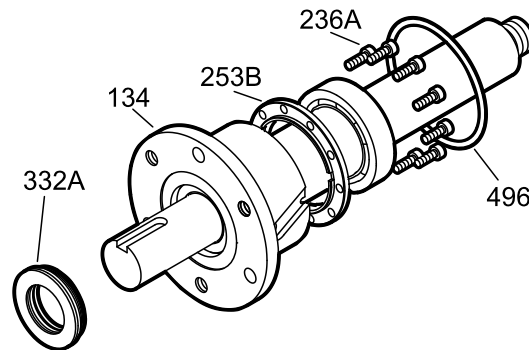


Figure 104: Outboard labyrinth oil-seal reassembly

12. Install the shaft assembly into the bearing frame as follows (see the illustration):
- Coat the outside of the bearing housing (134) with oil.
 - Coat all the internal surfaces of the bearing frame (228) with oil.
 - Install the shaft assembly into the bearing frame (228). Make sure that the shaft rotates freely.
 - Install the clamp bolts (370C) in the bearing housing (134) and tighten by hand.
 - Install the jack bolts (370D) with the locknuts (423) in the bearing housing (134) and tighten by hand.

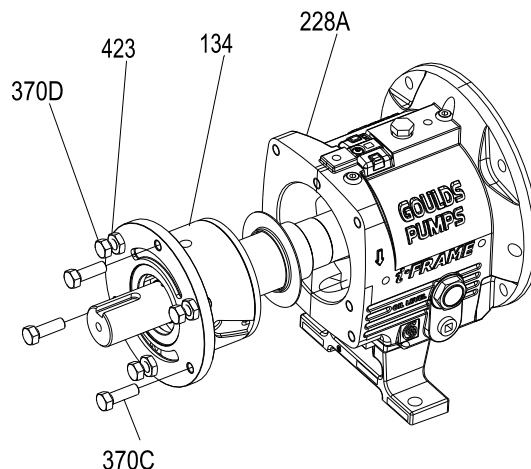


Figure 105: Jack bolt and locknut installation

Assemble the rotating element and the bearing frame (XLT-i and i17)



WARNING:

Lifting and handling heavy equipment or components poses a crush hazard. Use caution during lifting and handling and wear appropriate Personal Protective Equipment (PPE, such as steel-toed shoes, gloves, etc.) at all times. Seek assistance if necessary.


**CAUTION:**

Risk of physical injury from hot bearings. Wear insulated gloves when using a bearing heater.

NOTICE:


There are several methods used to install bearings. The recommended method is to use an induction heater that heats as well as demagnetizes the bearings. Failure to use this method may result in equipment damage.

1. Prepare the bearing frame (228) as follows (see the illustration):
 - a) Install the oil-fill plug (113A).
 - b) Install the oil-drain plug (408A).
 - c) Install the sight glass (319).
 - d) Install the sight oiler plug (408J).
 - e) Install the plug for the oil-cooler inlet (408L).
 - f) Install the plug for the oil-cooler outlet (408M).
 - g) Install four oil-mist connection plugs (408H).
 - Or: Install two grease fittings (193) and two grease-relief plugs (113).

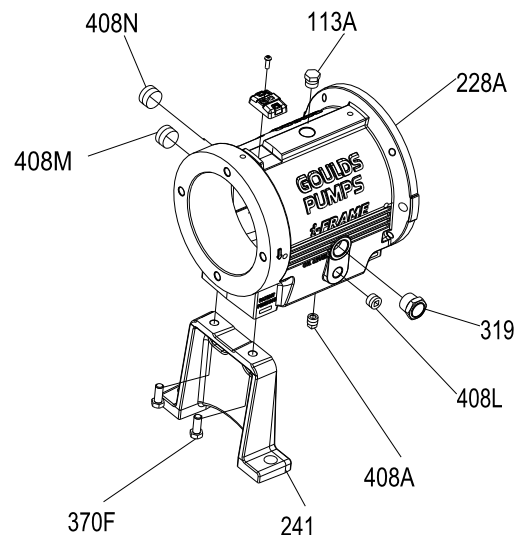


2. Install the outboard bearings (112A) on the shaft (122).
The regreaseable bearing has a single shield. The outboard bearing is installed with the shield toward the impeller.
 - a) Inspect the shaft (122) to ensure that it is clean, dimensionally correct, and is free of nicks and burrs.
 - b) Lightly coat the bearing seating with a thin film of oil.
 - c) Remove the bearing (112) from its packaging.
 - d) Wipe the preservative from the bearing (112) bore and outer diameter.
 - e) Use an induction heater with a demagnetizing cycle to heat the bearing (112) to an inner ring temperature of 110 °C | 230 °F.
 - f) Position the bearing (112) on the shaft (122) against the shoulder and snug the locknut (136) against the bearing until it is cool.
The locknut prevents the bearing from moving away from the shaft shoulder as it cools.
 - g) Remove the bearing locknut (136) after the bearing (112) cools.
3. Put the lockwasher (382) onto the shaft (122).
4. Thread the locknut (136) onto the shaft (122) and tighten it until it is snug.


5. Bend the tangs of the lockwasher into the slots of the locknut.

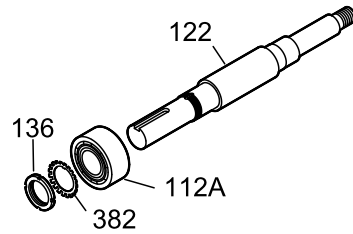


6. Install the bearing housing as follows (see the illustration):
 - a) Coat the outside of the outboard bearing (112A) with oil.
 - b) Coat the bore of the bearing housing (134) with oil.
 - c) Put the bearing housing (134) onto the shaft.Do not use force.

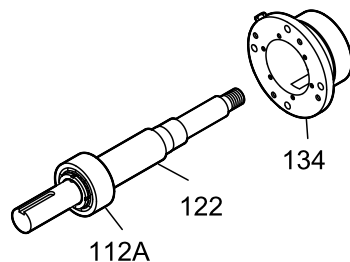


7. Fasten the gasket (360C) and the end cover (109A) with the bolts (371C). See the specified torque values. Make sure that the shaft rotates freely.

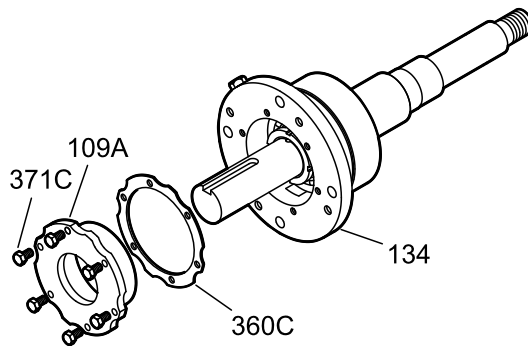


8. Install the inboard bearing as follows (see the illustration):
 - a) Coat the inner surfaces of the bearings with lubricant.
 - b) Put the inboard bearing (168) onto the shaft (122). The regreasable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.

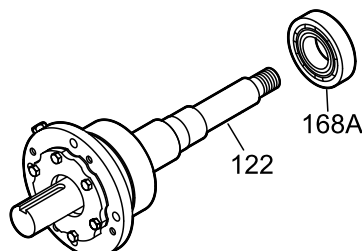

9. Install the remaining parts onto the bearing shaft as follows (see the illustration):
 - a) Install a new O-ring (496).
 - b) Install the outboard labyrinth oil-seal (332A) into the end cover (109A).
Place the drain slots of the oil seal at the bottom position (6 o'clock).
Make sure that the edges of the keyway are free from burrs. To protect the O-ring, cover the keyway lengthwise with a piece of electrical tape before you install the oil seal.

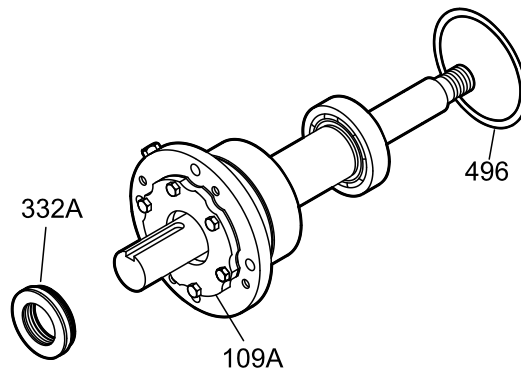

10. Install the shaft assembly into the bearing frame as follows (see the illustration):
 - a) Coat the outside of the bearing housing (134) with oil.
 - b) Coat all the internal surfaces of the bearing frame (228) with oil.
 - c) Install the shaft assembly into the bearing frame (228).
Make sure that the shaft rotates freely.
 - d) Install the clamp bolts (370C) in the bearing housing (134) and tighten by hand.
 - e) Install the jack bolts (370D) with the locknuts (423) in the bearing housing (134) and tighten by hand.
 - f) Attach the bearing-frame foot (241) and fasten the bolts (370F) by hand.

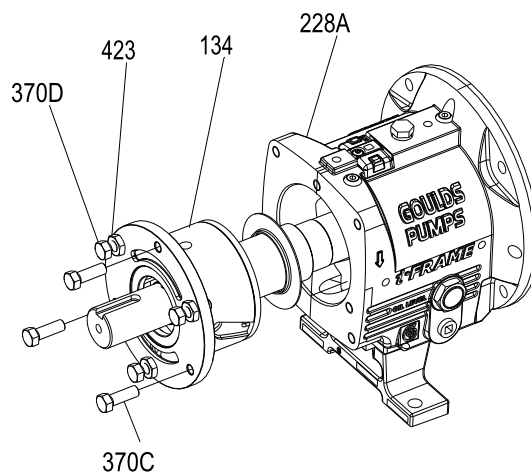

Assemble the rotating element and the bearing frame (XLT-i and i17 with duplex bearings)



WARNING:

Lifting and handling heavy equipment or components poses a crush hazard. Use caution during lifting and handling and wear appropriate Personal Protective Equipment (PPE, such as steel-toed shoes, gloves, etc.) at all times. Seek assistance if necessary.

**CAUTION:**


Risk of physical injury from hot bearings. Wear insulated gloves when using a bearing heater.

NOTICE:

There are several methods used to install bearings. The recommended method is to use an induction heater that heats as well as demagnetizes the bearings. Failure to use this method may result in equipment damage.

1. Prepare the bearing frame (228) as follows (see the illustration):
 - a) Install the oil-fill plug (113A).
 - b) Install the oil-drain plug (408A).
 - c) Install the sight glass (319).
 - d) Install the sight oiler plug (408J).
 - e) Install the plug for the oil-cooler inlet (408L).
 - f) Install the plug for the oil-cooler outlet (408M).
 - g) Install four oil-mist connection plugs (408H).

Or: Install two grease fittings (193) and two grease-relief plugs (113).

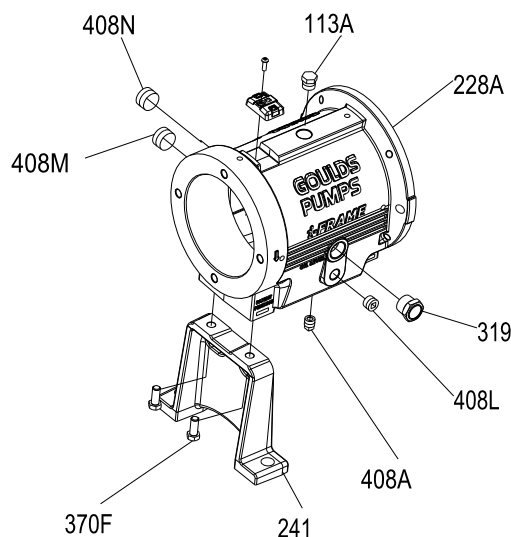

2. Install the outboard bearings (112A) on the shaft (122).

The regreasable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.

The duplex bearings are mounted back-to-back. Make sure that the orientation of the bearings are correct.

 - a) Inspect the shaft (122) to ensure that it is clean, dimensionally correct, and is free of nicks and burrs.



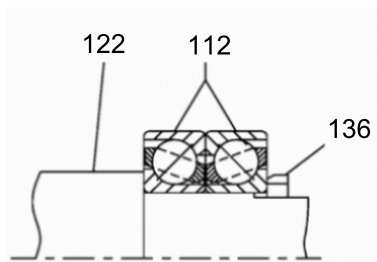


Figure 106: Shaft inspection


- b) Lightly coat the bearing seating with a thin film of oil.
 - c) Remove the bearings (112) from their packaging.
 - d) Wipe the preservative from the bearing (112) bore and outer diameter.
 - e) Use an induction heater with a demagnetizing cycle to heat both bearings (112) to an inner ring temperature of 110 °C | 230 °F.
 - f) Place both bearings (112) on the shaft (122) with the large outer races together (back-to-back).
 - g) Position the bearings (112) on the shaft (122) against the shoulder and snug the locknut (136) against the bearings until they are cool.
The locknut prevents the bearings from moving away from the shaft shoulder as they cool. Rotate the outer bearing rings relative to each other as they are placed on the shaft to assure good alignment.
 - h) Remove the bearing locknut (136) after the bearings (112) are cool.
3. Put the lockwasher (382) onto the shaft (122).
 4. Thread the locknut (136) onto the shaft (122) and tighten it until it is snug.
 5. Bend the tangs of the lockwasher into the slots of the locknut.

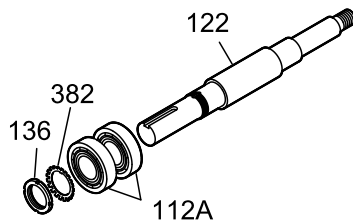


6. Install the bearing housing as follows (see the illustration):
 - a) Coat the outside of the outboard bearing (112A) with oil.
 - b) Coat the bore of the bearing housing (134) with oil.
 - c) Put the bearing housing (134) onto the shaft.
 Do not use force.

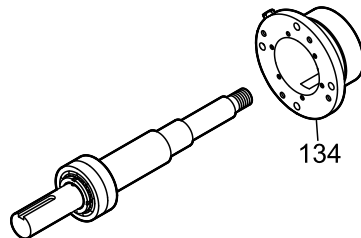


7. Fasten the gasket (360C) and the end cover (109A) with the bolts (371C).
See the specified torque values.
Make sure that the shaft rotates freely.

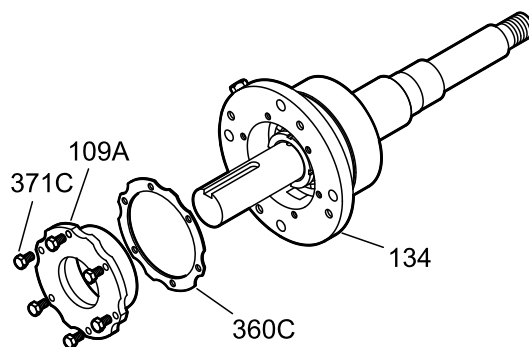

8. Install the inboard bearing as follows (see the illustration):
 - a) Coat the inner surfaces of the bearings with lubricant.
 - b) Put the inboard bearing (168) onto the shaft (122).
The regreasable bearing has a single shield. Make sure that the bearing is installed with the shield away from the impeller.

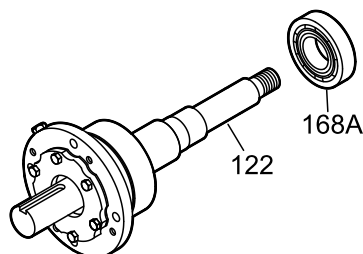


9. Install the remaining parts onto the bearing shaft as follows (see the illustration):
 - a) Install a new O-ring (496).
 - b) Install the outboard labyrinth oil-seal (332A) into the end cover (109A).
Place the drain slots of the oil seal at the bottom position (6 o'clock).
Make sure that the edges of the keyway are free from burrs. To protect the O-ring, cover the keyway lengthwise with a piece of electrical tape before you install the oil seal.

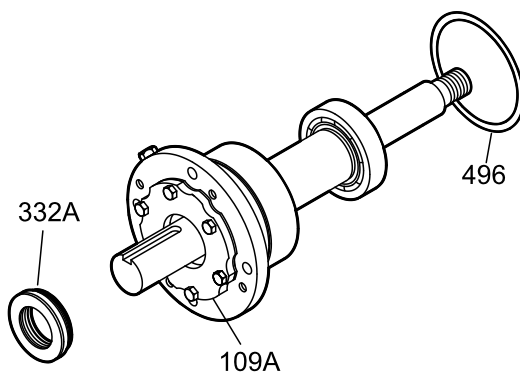

10. Install the shaft assembly into the bearing frame as follows (see the illustration):
 - a) Coat the outside of the bearing housing (134) with oil.
 - b) Coat all the internal surfaces of the bearing frame (228) with oil.
 - c) Install the shaft assembly into the bearing frame (228).
Make sure that the shaft rotates freely.
 - d) Install the clamp bolts (370C) in the bearing housing (134) and tighten by hand.
 - e) Install the jack bolts (370D) with the locknuts (423) in the bearing housing (134) and tighten by hand.

- f) Attach the bearing-frame foot (241) and fasten the bolts (370F) by hand.

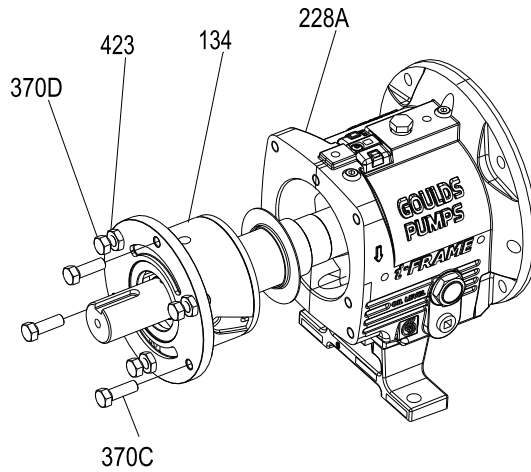

Assemble the frame

1. Support the frame assembly in a horizontal position.
2. Check the shaft-end play by moving the shaft forward and backward by hand, and note any indicator movement.


If the total indicator reading is greater than the values in this table, then disassemble the shaft and determine the cause.

Table 15: Shaft-end play

Use this table as a reference for shaft-end play values.

| Frame | Double row bearing | Duplex bearing |
|--------------------------|----------------------------------|----------------------------------|
| STi millimeters inches | 0.028 0.0011 0.048 0.0019 | 0.018 0.0007 0.025 0.0010 |
| MTi millimeters inches | 0.033 0.0013 0.053 0.0021 | 0.023 0.0009 0.030 0.0012 |
| LTi millimeters inches | Not applicable | 0.025 0.0010 0.038 0.0015 |

| Frame | Double row bearing | Duplex bearing |
|----------------------------|--------------------|----------------|
| XLT-i millimeters inches | 0.036 0.0014 | 0.025 0.0010 |
| | 0.058 0.0023 | 0.038 0.0015 |

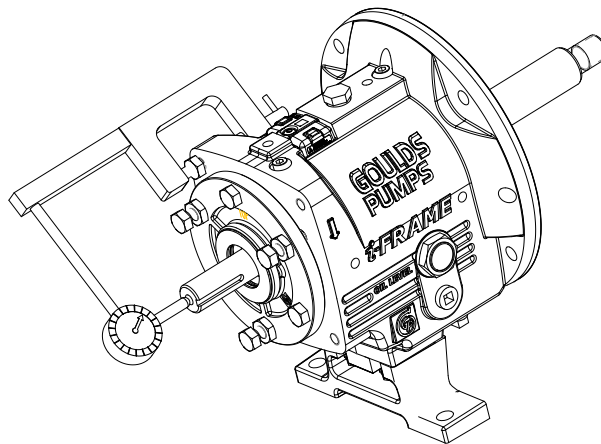

1. **Figure 107: Check shaft end play**
3. Check the shaft-sleeve (126) runout.
 - a) Install the shaft sleeve.
 - b) Thread the impeller on the shaft until hand tight.
 - c) Rotate the shaft 360°.
 - d) If the total indicator reading is greater than 0.051 mm | 0.002 in., then disassemble the shaft sleeve and determine the cause.
 - e) Remove the impeller and shaft sleeve.

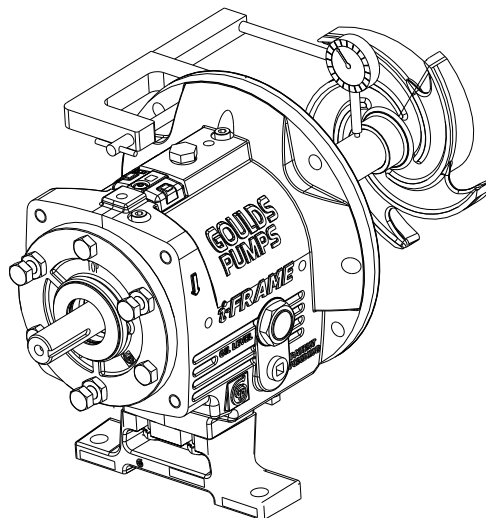


Figure 108: Remove impeller and shaft sleeve

4. Check the frame-face run-out by rotating the shaft so that the indicator measures the fit for 360°.

If the total indicator reading is greater than 0.025 mm | 0.001 in., then disassemble and determine the cause.

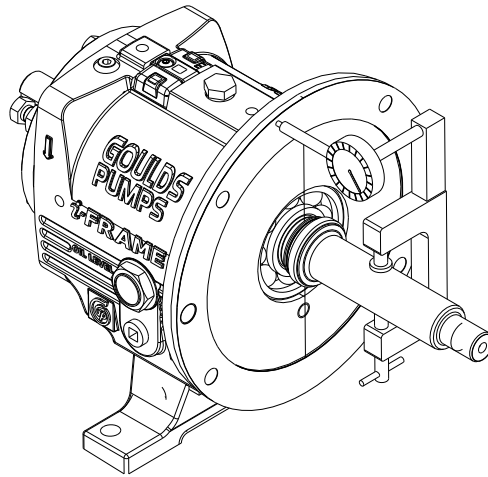


Figure 109: Check frame-face run-out

5. Place the manila gasket (360D) on the frame (228), and hold the gasket in place by inserting the dowel pins (469B) in their holes. The gasket is designed to fit only one way.
6. Install the frame adapter.
 - a) Place the frame adapter (108) onto the frame assembly.
 - b) Align the bolt holes and dowel locations on the frame adapter with the bolt holes and dowel locations on the frame.

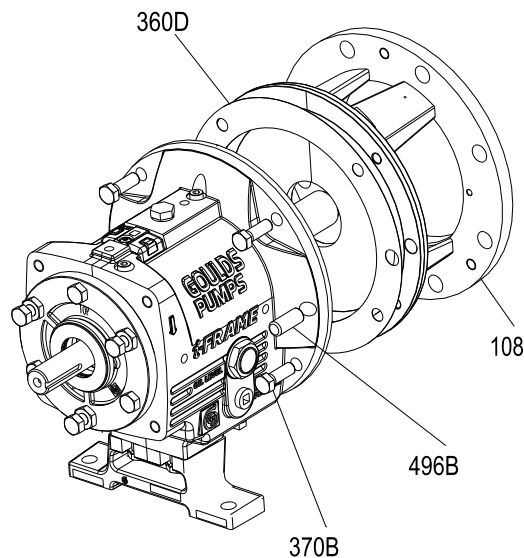


Figure 110: Align bolt holes and dowel locations

- c) Install the dowel pins (469B) and bolts (370B). Tighten the bolts in a criss-cross pattern according to the specifications in the bolt torque values table.

- d) Rotate the shaft 360° to check the adapter fit.
If the total indicator reading is greater than 0.13 mm | 0.005 in., then determine the cause and correct it before you proceed.

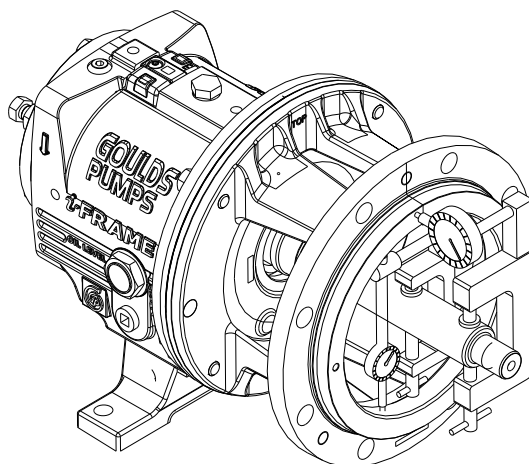


Figure 111: Check adapter fit

7. Install the labyrinth oil-seal (333A) into the adapter (108) and the bearing frame (228). The labyrinth oil seal is an O-ring fit.
8. Position the labyrinth oil-seal drain slots at the bottom (6 o'clock) position. Refer to Assemble the INPRO labyrinth oil-seal for more information on the labyrinth oil-seal installation.

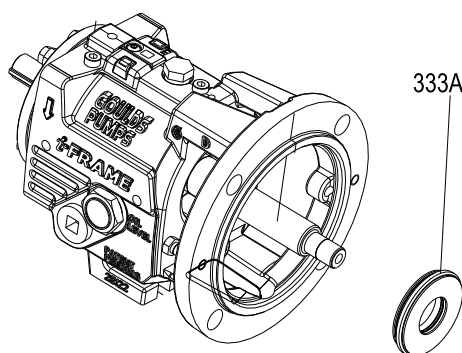


Figure 112: Position labyrinth oil-seal drain slots


INPRO labyrinth oil seal description

Description

The INPRO VBXX-D Labyrinth Oil Seal consists of the rotor (1), the stator (2), and the VBX Ring (3). The rotor (1) fits over the shaft and is held in place by an elastomeric drive ring (4). The drive ring causes the rotor to turn with the shaft and provides a positive, static seal against the shaft. Since there is no metal-to-metal contact, there are no friction or wear concerns.

NOTICE:

The labyrinth seal is a one-piece design. Do not attempt to separate the rotor from the stator. Doing so will damage the seal.

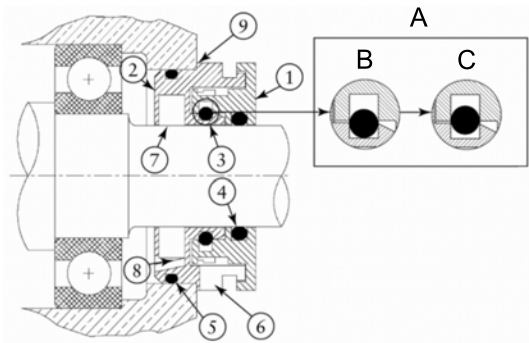

| | |
|---|---------------------|
| A | "VBX" O-ring action |
| B | Static |
| C | Dynamic |
| 1 | Rotor |
| 2 | Stator |
| 3 | "VBX" ring |
| 4 | Rotor drive ring |
| 5 | Stator gasket |
| 6 | Expulsion port |
| 7 | D groove |
| 8 | Lube return |
| 9 | Location shoulder |

Figure 113: INPRO labyrinth oil seal

Assemble the INPRO labyrinth oil seal

1. Wrap electrical tape around the coupling end of the shaft to cover the keyway.

NOTICE:

The edges of the keyway can be sharp. Cover the keyway with tape. Failure to do so may result in damaging the o-ring and/or labyrinth seal.

2. Lightly lube the shaft and the drive ring (4) with lubricant. Lubricant helps in the installation process. Be sure that the lubricant is compatible with the O-ring material and the pump-system standards.
3. Use an arbor press to install the outboard INPRO VBXX-D into the bearing cover with the expulsion port (6) at the 6 o'clock position. Press the outboard INPRO VBXX-D down to where the stator location ramp (9) starts to avoid angular misalignment. There is a nominal 0.051 mm | 0.002 in. interference fit.
4. Discard any residual material from the stator gasket (5).
5. Complete the applicable step in this table depending on the model of your pump.

| Pump model | Action |
|------------------|---|
| STi | Press the inboard seal along the shaft into the bearing frame. |
| All other models | After you install the frame adapter on the bearing frame, press the inboard seal over the shaft and into the adapter. |

Assemble the C-face adapter

1. Mount the pump and the motor-coupling hubs if they are not already mounted.
2. Slide the C-face adapter over the pump shaft and mount it against the bearing-frame flange using four bolts.

- Mount the motor to the C-face adapter using either four or eight motor bolts.

Table 16: Motor-bolt torque values for C-face adapter to frame

This table contains the motor-bolt torque values for assembling the C-face adapter to a frame.

| Frame | Lubricated threads | Dry threads |
|-------|--------------------|------------------|
| STi | 27 Nm 20 ft-lb | 41 Nm 30 ft-lb |
| MTi | 27 Nm 20 ft-lb | 41 Nm 30 ft-lb |
| LTi | 27 Nm 20 ft-lb | 41 Nm 30 ft-lb |

Table 17: Motor-bolt torque values for C-face adapter to motor

This table contains the motor-bolt torque values for assembling the C-face adapter to a motor.

| Frame | Lubricated threads | Dry threads |
|-------------|--------------------|------------------|
| 143TC-145TC | 11 Nm 8 ft-lb | 16 Nm 12 ft-lb |
| 182TC-286TC | 20 ft-lb (27 Nm) | 41 Nm 30 ft-lb |
| 324TC-365TC | 39 ft-lb (53 Nm) | 80 Nm 59 ft-lb |

Shaft sealing

**WARNING:**

 The mechanical seal used in an Ex-classified environment must be properly certified.

**CAUTION:**

Running a mechanical seal dry, even for a few seconds, can cause seal failure and physical injury. Never operate the pump without liquid supplied to the mechanical seal.


Methods for sealing the shaft

These sections discuss the methods that you can use to seal the shaft.

- Seal the shaft with a dynamic seal.
- Seal the shaft with a cartridge-mechanical seal.
- Seal the shaft with a conventional inside-component mechanical seal.
- Seal the shaft with a conventional outside-component mechanical seal.
- Seal the shaft with a packed stuffing box.

Seal the shaft with a dynamic seal

- Place the backplate (444) with the flat side down on the bench.

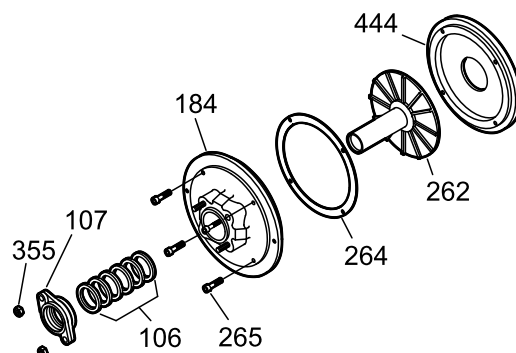**Figure 114: Backplate placement**

- Place the repeller (262) in the backplate (444) with the sleeve side up.
- Place a gasket (264) on the backplate (444) and align the holes in the gasket with the holes in the backplate.

4. Place a stuffing-box cover (184) on the backplate (444) and align the holes in the gasket with the holes in the backplate.
5. Install four socket-head capscrews (265) and tighten them securely.
6. Install a new sealing element into the gland.
7. Install a gasket (360Q) and gland (107) on the stuffing-box cover (184).
8. Install the nuts (355).
9. Install a dynamic-seal assembly and nuts (370H).

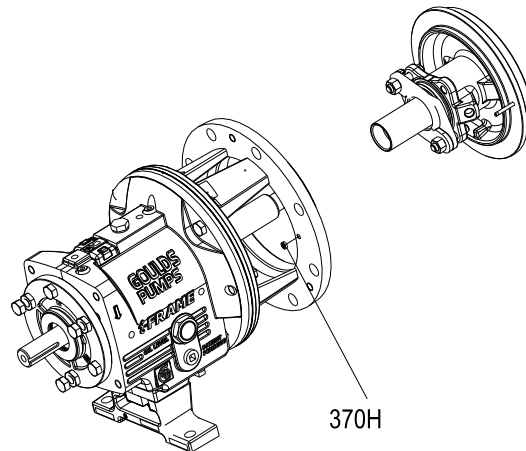


Figure 115: Dynamic seal installation

10. Check the stuffing-box-cover runout and rotate the indicator through 360 degrees. An indicator reading that is greater than 0.013 mm | 0.005 in. indicates a problem.

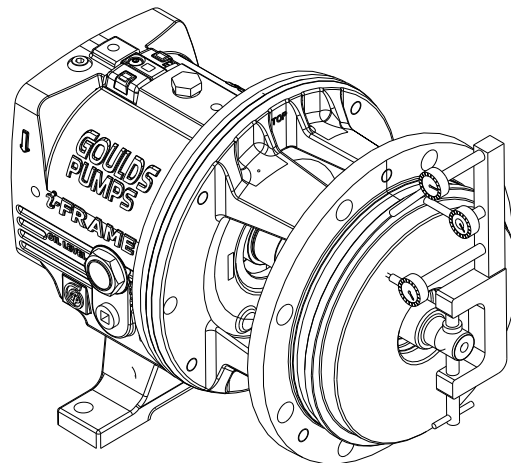


Figure 116: Checking for stuffing-box-cover runout

Seal the shaft with a packed stuffing box



WARNING:

 Packed stuffing boxes are not allowed in an ATEX-classified environment.

Pumps are shipped without the packing, lantern ring, or split gland installed. These parts are included with the box of fittings shipped with each pump and must be installed before startup.

1. Carefully clean the stuffing-box bore.

2. Twist the packing enough to get it around the shaft.

Packing Rings

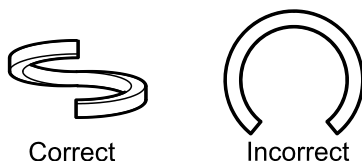


Figure 117: Packing rings

Lantern Rings

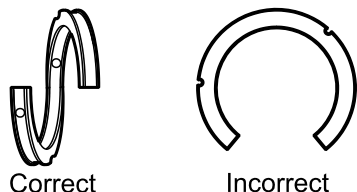


Figure 118: Lantern rings

3. Insert the packing and stagger the joints in each ring by 90°. Install the stuffing-box parts in this order:
 - a) Two packing rings
 - b) One lantern ring (two-piece)
 - c) Three packing rings

NOTICE:

Make sure that the lantern ring is located at the flushing connection to ensure that flush is obtained. Failure to do so may result in decreased performance.

4. Install the gland halves and evenly hand-tighten the nuts.

Seal the shaft with a cartridge mechanical seal

**WARNING:**

 The mechanical seal used in an Ex-classified environment must be properly certified.

**CAUTION:**

Running a mechanical seal dry, even for a few seconds, can cause seal failure and physical injury. Never operate the pump without liquid supplied to the mechanical seal.

1. Slide the cartridge seal onto the shaft or sleeve until it contacts the inboard labyrinth oil seal.
2. Assemble the seal chamber.
3. Slide the cartridge seal into the seal chamber and secure using the four studs and nuts.
4. Continue with the pump reassembly.
5. Set the impeller clearance.
Refer to the Impeller clearance setting topic for more information.
6. Tighten the setscrews in the seal locking ring in order to secure the seal to the shaft.
7. Remove the centering clips from the seal.

Seal the shaft with a conventional inside-component mechanical seal



WARNING:

 The mechanical seal used in an Ex-classified environment must be properly certified.



CAUTION:

Running a mechanical seal dry, even for a few seconds, can cause seal failure and physical injury. Never operate the pump without liquid supplied to the mechanical seal.

1. Assemble the seal chamber:
 - a) Install a seal-chamber cover or a backplate (184) and fasten with nuts (370H) with .

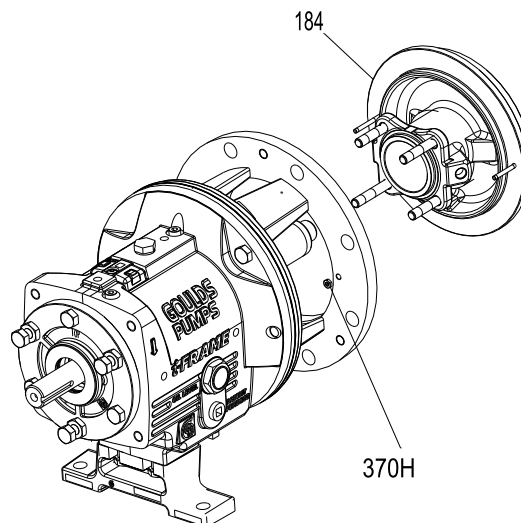


Figure 119: Assemble seal-chamber

- b) Check the seal-chamber cover runout.

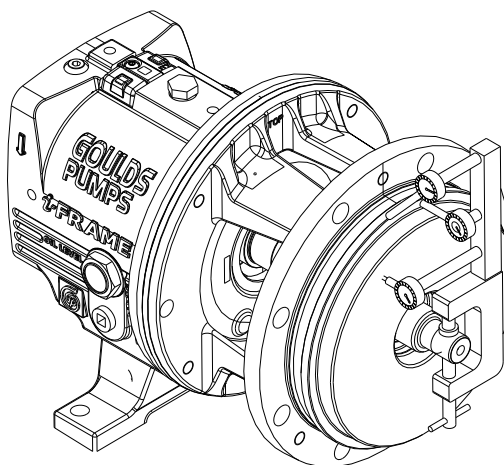


Figure 120: Check seal-chamber cover runout

Rotate the indicator through 360°. If the total indicator reading is greater than 0.13 mm | 0.005 inches, determine the cause and correct the issue before you proceed.

- c) Install the shaft sleeve (126).

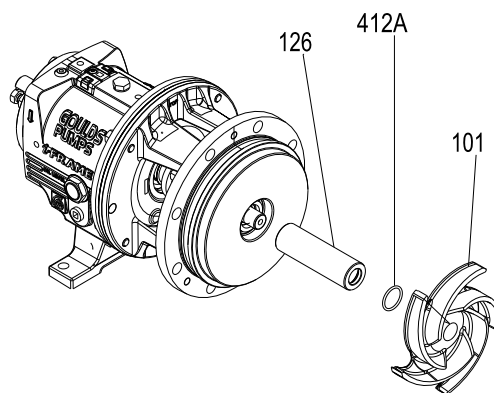


Figure 121: Install shaft sleeve

2. Mark the shaft and sleeve at the face of the seal chamber.
3. Continue the complete reassembly of the pump, except for the mechanical seal.
4. Set the impeller clearance.
Refer to the Impeller Clearance Setting section for more information.
5. Scribe a line on the marked shaft and sleeve at the face of the seal chamber.
6. Remove the casing, the impeller, and the seal chamber.
7. If applicable, slide the gland, with the stationary seat and gland gasket installed, onto the shaft until it contacts the inboard labyrinth oil seal.
8. Install the mechanical-seal rotary unit according to the manufacturer's instructions.
Use the scribed line and the seal-reference dimension.
9. Reinstall the seal chamber.
10. Slide the gland on the seal-chamber studs and secure them with the gland nuts.
Tighten the nuts evenly so that the gland is seated on the seal-chamber pilot and is perpendicular to the shaft.
11. Complete the reassembly of the pump.

Seal the shaft with a conventional outside-component mechanical seal



WARNING:

 The mechanical seal used in an Ex-classified environment must be properly certified.



CAUTION:

Running a mechanical seal dry, even for a few seconds, can cause seal failure and physical injury. Never operate the pump without liquid supplied to the mechanical seal.

1. Assemble the seal chamber.

- a) Install the seal-chamber cover or backplate (184) and fasten with nuts (370H).

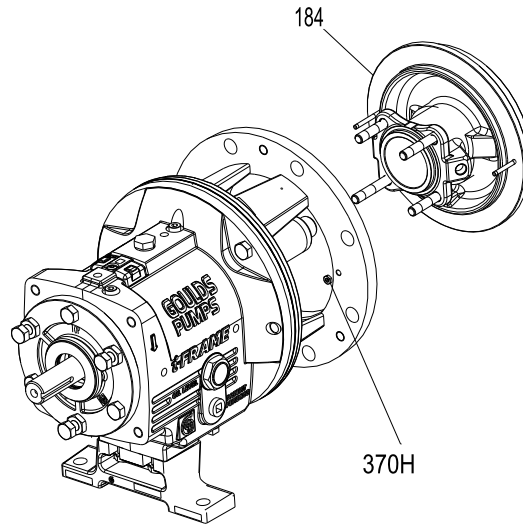


Figure 122: Seal-chamber cover or backplate installation

- b) Check the seal-chamber cover runout.

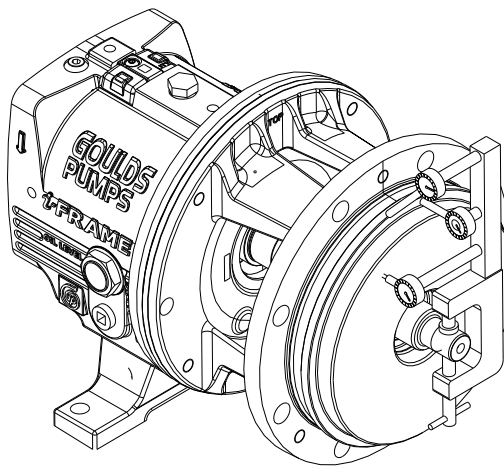


Figure 123: Check seal-chamber cover runout

Rotate the indicator through 360 degrees. If the total indicator reading is greater than 0.13 mm | 0.005 in., determine the cause and correct the issue before you proceed.

- c) Install the shaft sleeve (126).

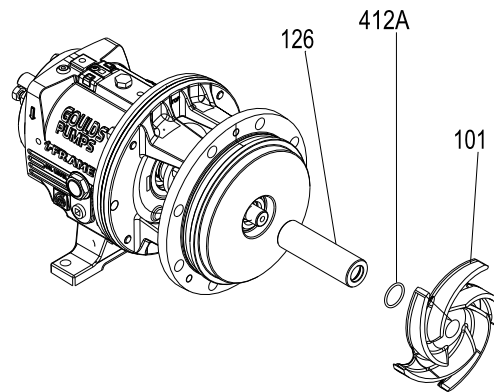


Figure 124: Install shaft sleeve

2. Mark the shaft and sleeve at the face of the seal chamber.
3. Continue the complete reassembly of the pump, except for the mechanical seal.
4. Set the impeller clearance.
Refer to the Impeller clearance setting section for more information.
5. Scribe a line on the marked shaft and sleeve at the face of the seal chamber.
6. Remove the casing, the impeller, and the seal chamber.
7. Install the mechanical-seal rotary unit per the manufacturer's instructions.
Use the scribed line as the seal-reference dimension. Be sure to secure the rotary unit in place using the set screws in the locking ring.
8. Install the gland, with the stationary seat and gland gaskets installed, on the seal chamber.
9. Reinstall the seal chamber.
10. Complete the reassembly of the pump.

Install the impeller



CAUTION:

Risk of physical injury from sharp edges. Wear heavy work gloves when handling impellers.

1. Install the impeller.

| Pump size | Action |
|-------------------|---|
| STi, MTi, and LTi | Install the impeller (101). Use a new impeller O-ring (412A). |
| XLT-i and i17 | Install the impeller (101) and a PTFE washer (428D) on the plug (458Y). Use a new impeller O-ring (412A). |

2. Attach a shaft wrench and a coupling key on the shaft.
 - a) When the impeller (101) makes firm contact with the sleeve (126), raise the shaft wrench (counterclockwise, viewed from the impeller end of the shaft) off of the bench and slam it down (clockwise, viewed from the impeller end of shaft).
 - b) Apply a few sharp raps to tighten the impeller (101).

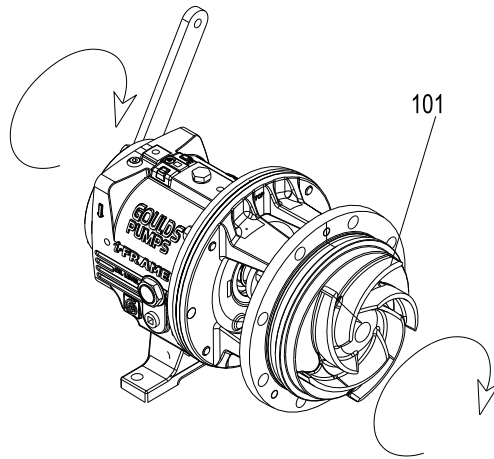


Figure 125: Tighten the impeller

3. Loosen the clamp bolts (370C) and the jack bolts (370D).

4. Measure the gap between the impeller (101) and the seal chamber and stuffing-box cover (184) with a feeler gauge.

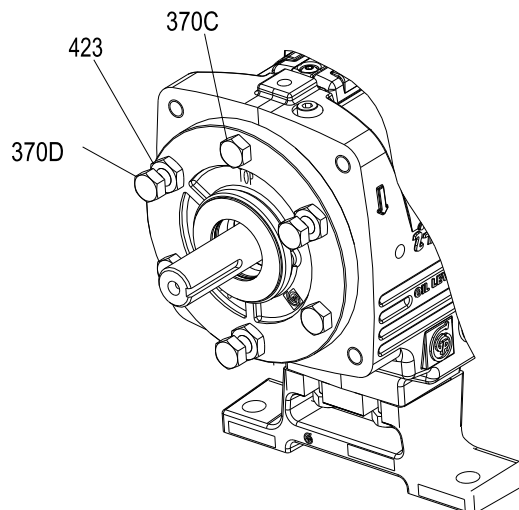


Figure 126: Loosen clamp bolts

5. When you reach a 0.76 mm | 0.030 in. clearance, tighten the clamp bolts (370C), jack bolts (370D), and lock nuts (423).
This approximates the impeller position when it is set to 0.38 mm | 0.015 in. from the casing. Perform a final impeller adjustment after you install the impeller into the casing.
6. Check the impeller (101) runout.
Check vane tip to vane tip. If the total indicator reading is greater than 0.13 mm | 0.005 in., determine the cause and correct the issue before you proceed.

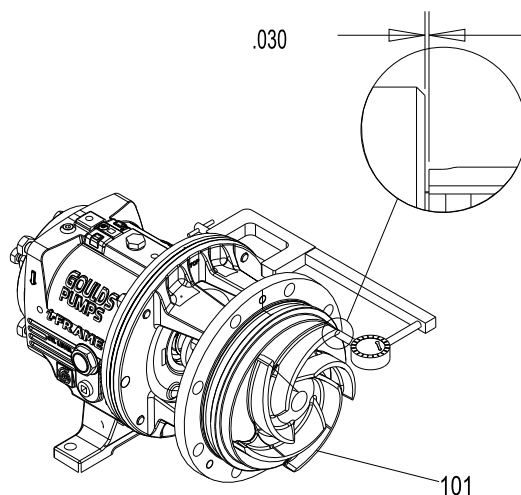


Figure 127: Check impeller run out

For more information on how to set the impeller clearances, refer to the Impeller-clearance checks and Impeller-clearance setting sections in Commissioning, Startup, Operation, and Shutdown.

Attach the i-ALERT[®] Condition Monitor to the pump

Tools required:

- 5/32 inch hex wrench

1. Attach the condition monitor (761B) to the bearing frame (228A) using the hex-head screw (372T) provided.

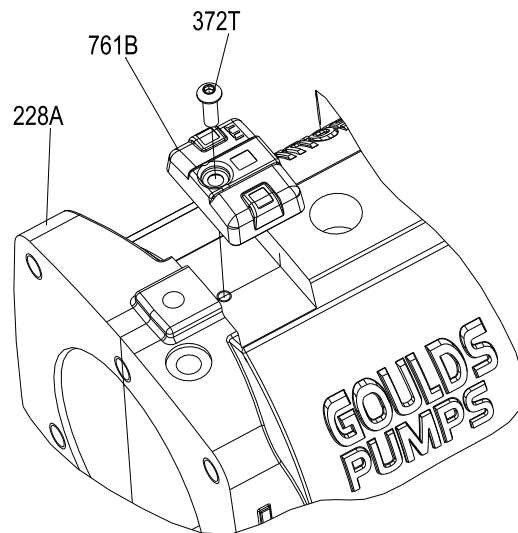


Figure 128: Attach condition monitor to bearing frame

2. Tighten the hex-head screw with a 5/32 inch hex wrench to 8 Nm | 6 ft-lbs.

Post-assembly checks

Perform these checks after you assemble the pump, then continue with pump startup:

- Rotate the shaft by hand in order to make sure that it rotates easily and smoothly and that there is no rubbing.
- Open the isolation valves and check the pump for leaks.

Install the back pull-out assembly (except HT 3196)



WARNING:

Lifting and handling heavy equipment poses a crush hazard. Use caution during lifting and handling and wear appropriate Personal Protective Equipment (PPE, such as steel-toed shoes, gloves, etc.) at all times. Seek assistance if necessary.

1. Clean the casing fit and install the casing gasket (351) on the seal chamber and stuffing-box cover.

2. Loosen the clamping bolts (370C) and jack bolts (370D) on the bearing housing.

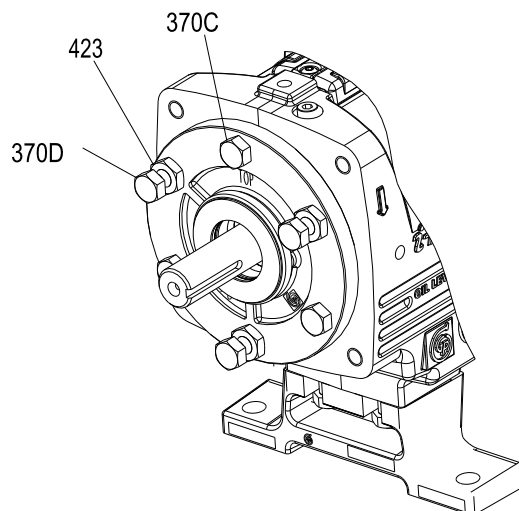


Figure 129: Loosen clamp bolts and jack bolts on bearing housing

3. Install the back pull-out assembly in the casing.

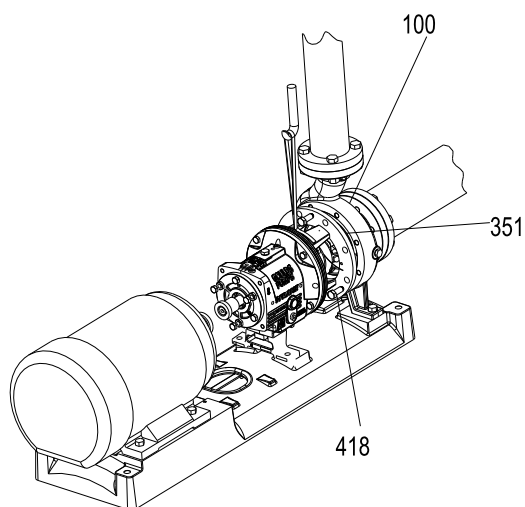


Figure 130: Install back pull-out assembly

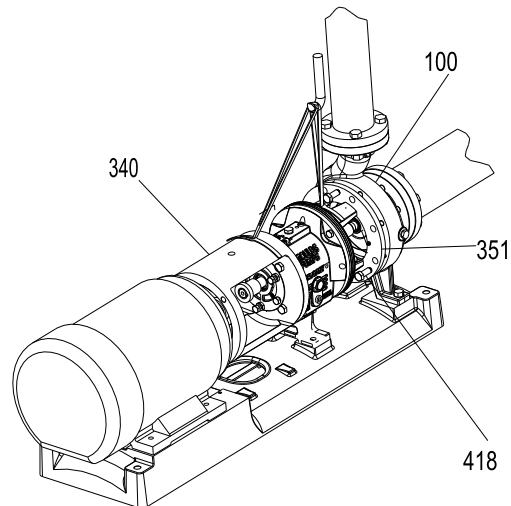


Figure 131: Install back pull-out assembly

4. Install and then hand-tighten the casing bolts (370).
Refer to the bolt torque values for information on how to tighten the casing bolts.
5. Install and tighten the casing jackscrews (418).

NOTICE:

Do not overtighten the casing jackscrews. Doing so may result in equipment damage.

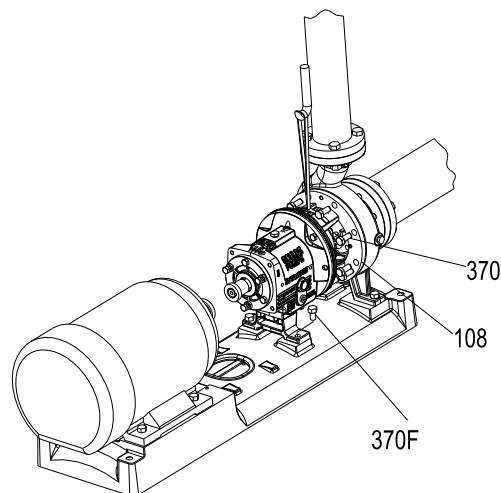


Figure 132: Install and tighten casing jackscrews

6. Reinstall the shims under the frame foot and tighten the frame foot to the baseplate.
Make sure that you use the proper shim. Mount a dial indicator in order to measure the distance between the top of the frame and the baseplate. Make sure that the distance does not change as you tighten the frame-foot bolts.
7. Check the total clearance of the impeller in the casing.
With new parts, an acceptable range is 0.76 mm | 0.030 in. to 1.65 mm | 0.065 in. If the impeller clearance is outside of this range, you either have the incorrect parts, an improper installation, or too much pipe strain. Determine the cause and correct the problem before you proceed.
8. Adjust the impeller clearance.
Refer to the Impeller clearance setting section for more information.
9. Replace the auxiliary piping.

10. Fill the pump with the proper lubricant. See Lubricating-oil requirements.
11. Reinstall the coupling guard.
See Install the coupling guard for more information.

NOTICE:

When a cartridge mechanical seal is used, ensure that the set screws in the seal locking ring are tightened and that the centering clips have been removed prior to startup. This prevents seal or shaft sleeve damage by ensuring that the seal is properly installed and centered on the sleeve.

Bolt torque values

Table 18: Bolt torque, Nm | lb-ft

This table provides the bolt torque values.

| Location | Frame | 3196, CV 3196, LF 3196, 3796 | | NM 3196 | | 3198 | |
|---|---------------|--|-----------|-----------|-----------|-----------|-----------|
| | | Lube | Dry | Lube | Dry | Lube | Dry |
| Casing bolts (370) or casing nuts (425) | 6-in. STi | Refer to the maximum torque values in Nm lb-ft for casing bolts table. | | 36 27 | 53 40 | N/A | N/A |
| | 8-in. STi | | | 27 20 | 40 30 | 47 35 | 71 53 |
| | MTi, LTi | | | 36 27 | 53 40 | 47 35 | 71 53 |
| | XLT-i, i17 | | | N/A | N/A | N/A | N/A |
| Frame-to-adapter bolts | All | 27 20 | 40 30 | 27 20 | 40 30 | 27 20 | 40 30 |
| Bearing-clamp ring bolts (236A) - duplex bearing only | STi, MTi | 1.1* 10 | 1.9* 17 | 1.1* 10 | 1.9* 17 | 1.1* 10 | 1.9* 17 |
| | LTi | 6.2* 55 | 9.4* 83 | 6.2* 55 | 9.4* 83 | 6.2* 55 | 9.4* 83 |
| Bearing end cover bolts (371C) | XLT-i, i17 | 12 9 | 16 12 | N/A | N/A | N/A | N/A |
| Dynamic seal cap-screws (265) | STi, MTi, LTi | 6.2* 55 | 9.4* 83 | N/A | N/A | N/A | N/A |
| | XLT-i, i17 | 12 9 | 16 12 | N/A | N/A | N/A | N/A |
| * Values are in Nm lb-in. | | | | | | | |

Table 19: Maximum torque values in Nm | lb-ft for casing bolts

This table provides the maximum torque values for casing bolts.

| | | Models 3196, CV 3196 LF 3196, 3796 with 68 kg 150 lb casing flanges | | | | Model HT 3196 and all models with 136 kg 300 lb casing flanges | |
|-----------|----------------------------|---|-----------|---|-----------|--|-----------|
| | | Material specification | | | | | |
| | | Ductile iron casing with A307 Grade B casing bolts | | Alloy casing with (304SS) F593 Grade 1 or (316SS F593) Grade 2 casing bolts | | Ductile iron and alloy casings with A193 grade B7 casing bolts | |
| Frame | Casing bolt diameter (in.) | Lube | Dry | Lube | Dry | Lube | Dry |
| 8 in. STi | 0.50 | 27 20 | 41 30 | 47 35 | 73 54 | 79 58 | 118 87 |
| 6 in. STi | 0.625 | 53 39 | 80 59 | 96 71 | 145 107 | 156 115 | 235 173 |
| | 0.625 | 53 39 | 80 59 | 96 71 | 145 107 | 156 115 | 235 173 |
| | 0.625 | 53 39 | 80 59 | 96 71 | 145 107 | 156 115 | 235 173 |
| | 0.625 | 53 39 | 80 59 | 96 71 | 145 107 | 156 115 | 235 173 |
| i17 | 7/8 | 153 113 | 230 170 | 191 141 | 287 212 | 447 330 | 671 495 |

Shaft-end play

Table 20: Shaft-end play

Use this table as a reference for shaft-end play values.

| Frame | Double row bearing | Duplex bearing |
|----------------------------|--------------------|----------------|
| STi millimeters inches | 0.028 0.0011 | 0.018 0.0007 |
| | 0.048 0.0019 | 0.025 0.0010 |
| MTi millimeters inches | 0.033 0.0013 | 0.023 0.0009 |
| | 0.053 0.0021 | 0.030 0.0012 |
| LTi millimeters inches | Not applicable | 0.025 0.0010 |
| | | 0.038 0.0015 |
| XLT-i millimeters inches | 0.036 0.0014 | 0.025 0.0010 |
| | 0.058 0.0023 | 0.038 0.0015 |

Bearing types

Table 21: Bearing types

| Frame | Inboard bearing | Outboard bearing | |
|------------|-----------------|------------------|--------|
| | | Double row | Duplex |
| STi | 6207 | 3306 | 7306 |
| MTi | 6309 | 3309 | 7309 |
| LTi | 6311 | Not applicable | 7310 |
| XLT-i, i17 | 6313 | 3313 | 7313 |

Spare parts

Always state the serial number and indicate the part name and item number from the relevant sectional drawing when you order spare parts. It is imperative for service reliability to have a sufficient stock of readily available spare parts.

- Impeller (101)
- Shaft (122A)
- Shaft sleeve (126)
- Outboard bearing (112A)
- Inboard bearing (168A)
- Casing gasket (351)
- Frame-to-adapter gasket (360D)
- Bearing-housing retaining ring (361A)
- Bearing lockwasher (382)
- Bearing locknut (136)
- Impeller O-ring (412A)
- Bearing-housing O-ring (496)
- Outboard labyrinth-seal rotary O-ring (497F)
- Outboard labyrinth-seal stationary O-ring (497G)
- Inboard labyrinth-seal rotary O-ring (497H)
- Inboard labyrinth-seal stationary O-ring (497J)
- Lantern ring half (105) (packed stuffing box)
- Stuffing box packing (106) (packed stuffing box)
- Packing gland (107) (packed stuffing box)
- Impeller gasket (428D) (XLT-i and i17 only)

3196 interchangeability

Table 22: 3196 interchangeability drawing

| Description | Shaft and Bearing Frame Assembly | Adapter | Seal Chamber | Impeller | Casing | Size |
|---|----------------------------------|---------|--------------|----------|--------|---|
| Model 3196 STi 1-3/8 in. Shaft Dia. Max BHP-40 HP | | | | | | 1x1.5-6 AA 1.5x3-6 AB 2x3-6 AC 1X1.5-8 AA 1.5X3-8 AB |
| Model 3196 MTi 1-3/4 in. Shaft Dia. Max BHP-122 HP | | | | | | 3X4-7 A70 2X3-8 A60 3X4-8 A70 3X4-8G A70 1X2-10 A05 1.5X3-10 A50 2X3-10 A60 3X4-10 A70 3X4-10H A40 4X6-10 A80 4X6-10H A80 1.5X3-13 A20 2X3-13 A30 3X4-13 A40 4X6-13 A80 |
| Model 3196 LTi 2-1/8 in. Shaft Dia. Max BHP-200 HP | | | | | | 1X2-10 A05 1.5X3-10 A50 2X3-10 A60 3X4-10 A70 3X4-10H A40 4X6-10G A80 4X6-10H A80 1.5X3-13 A20 2X3-13 A30 3X4-13 A40 4X6-13 A80 |
| Model 3196 XLT-i 2-1/2 in. Shaft Dia. Max BHP-250 HP 17 in. XLT-i has 2-3/4 in. Shaft Dia. Max BHP-350 HP | | | | | | 6X8-13 A90 8X10-13 A100 6X8-15 A110 8X10-15 A120 8X10-15G A120 8X10-15H A120 4X6-17 A105 6X8-17 A110 8X10-17 A120 |

Frame lubrication conversion

NOTICE:

- Avoid equipment damage or decreased performance. Never mix greases of different consistencies (NLGI 1 or 3 with NLGI 2) or with different thickeners. For example, never mix a lithium-based grease with a polyurea based grease. If it is necessary to change the grease type or consistency, remove the rotor and old grease from the housing before regreasing.

Use a grease that is suitable for high temperatures when you have frame pumpage temperatures greater than 177°C | 350°F. Ensure that mineral-oil greases have oxidation stabilizers and a consistency of NLGI 3.

Table 23: Lubricating-grease requirements

Most pumps use Sunoco 2EP grease. High temperature units with a pumpage temperature greater than 177°C | 350° F use Mobil SCH32.

This table shows which brand of grease to use when lubricating the pump.

| | Pumpage temperature less than 177°C 350°F | Pumpage temperature greater than 177°C 350°F |
|------------------|---|--|
| NGLI consistency | 2 | 3 |
| Mobil | Mobilux EP2 | SCH32 |
| Exxon | Unirex N2 | Unirex N3 |
| Sunoco | Multipurpose 2EP | N/A |
| SKF | LGMT 2 | LGMT 3 |

Convert from greased-for-life or regreaseable to oil-lubricated bearings

1. Remove the plug from the oil-return slot in the frame located under the radial bearing. Use this table as a guide.

| Pump model | Action |
|---------------------------|--|
| STi | Remove the epoxy from the return slot. |
| MTi, LTi, XLT-i, and i-17 | Remove the set screw installed in the oil-return hole. |

2. Remove the plug from the oil-return hole in the bearing housing (134).

NOTICE:

For the LTi, the bearing housing (134) and clamp ring (253B) require replacement with alternate parts. Failure to do so will cause oil-flow obstruction and result in equipment damage.

3. Replace both bearings with unshielded, oil-lubricated bearings.

Table 24: Bearing types

| Frame | Inboard bearing | Outboard bearing | |
|------------|-----------------|------------------|--------|
| | | Double row | Duplex |
| STi | 6207 | 3306 | 7306 |
| MTi | 6309 | 3309 | 7309 |
| LTi | 6311 | Not applicable | 7310 |
| XLT-i, i17 | 6313 | 3313 | 7313 |

4. Remove the grease fittings (193) to prevent accidental greasing. Two plugs (408H) are required to replace the two grease fittings.

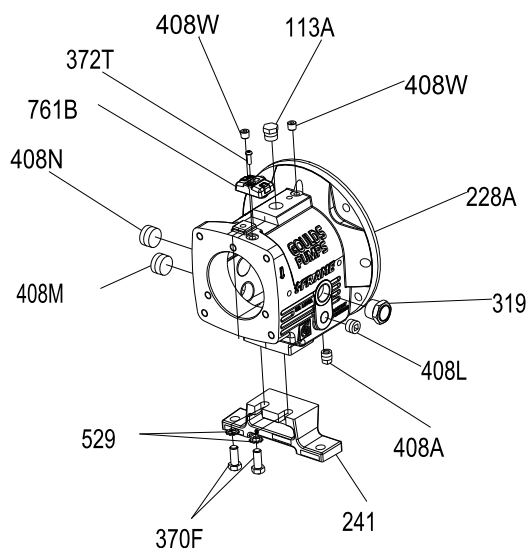


Figure 133: Replace two grease fittings with two plugs

| Item Number | Size | Description | Quantity |
|-------------|----------------|---|----------|
| 113 | 1/4"-18 NPT | External hex/square head pipe plug | 2 |
| 113A | 1/2"-14 NPT | External hex/square head pipe plug | 1 |
| 193 | 1/4"-18 NPT | Grease fitting | 2 |
| 228 | ---- | Bearing frame | 1 |
| 241 | ---- | Frame foot | 1 |
| 370F | 1/2" | Hex cap screw | 2 |
| 408A | 3/8"-18 NPT | External square head pipe plug (magnetic) | 1 |
| 408J | 1/4"-18 NPT | External hex/square head pipe plug | 1 |
| 408L | 1/2"-14 NPT | Square countersunk headless pipe plug | 1 |
| 408M | 1" 11-1/2" NPT | Square countersunk headless pipe plug | 1 |
| 529 | 1/2" | Light helical spring lock washer | 2 |

Conversion from flood-oil to pure-oil mist

Consult your local ITT representative for further information on this topic.

Convert from flood oil to regreaseable

Consult your local ITT representative for further information on this topic.

Troubleshooting

Operation troubleshooting

| Symptom | Cause | Remedy |
|---|--|--|
| The pump is not delivering liquid. | The pump is not primed. | Re-prime the pump and check that the pump and suction line are full of liquid. |
| | The suction line is clogged. | Remove the obstructions. |
| | The impeller is clogged. | Back-flush the pump in order to clean the impeller. |
| | The shaft is rotating in the wrong direction. | Change the rotation. The rotation must match the arrow on the bearing housing or pump casing. |
| | The foot valve or suction pipe opening is not submerged enough. | Consult an ITT representative for the proper submersion depth. Use a baffle in order to eliminate vortices. |
| | The suction lift is too high. | Shorten the suction pipe. |
| The pump is not producing the rated flow or head. | The gasket or O-ring has an air leak. | Replace the gasket or O-ring. |
| | The stuffing box has an air leak. | Replace or readjust the mechanical seal. |
| | The impeller is partly clogged. | Back-flush the pump in order to clean the impeller. |
| | The clearance between the impeller and the pump casing is excessive. | Adjust the impeller clearance. |
| | The suction head is not sufficient. | Make sure that the suction-line shutoff valve is fully open and that the line is unobstructed. |
| | The impeller is worn or broken. | Inspect and replace the impeller if necessary. |
| The pump starts and then stops pumping. | The pump is not primed. | Re-prime the pump and check that the pump and suction line are full of liquid. |
| | The suction line has air or vapor pockets. | Rearrange the piping in order to eliminate air pockets. |
| | The suction line has an air leak. | Repair the leak. |
| The bearings are running hot. | The pump and driver are not aligned properly. | Realign the pump and driver. |
| | There is not sufficient lubrication. | Check the lubricant for suitability and level. |
| | The lubrication was not cooled properly. | Check the cooling system. |
| The pump is noisy or vibrates. | The pump and driver are not aligned properly. | Realign the pump and driver. |
| | The impeller is partly clogged. | Back-flush the pump in order to clean the impeller. |
| | The impeller or shaft is broken or bent. | Replace the impeller or shaft as necessary. |
| | The foundation is not rigid. | Tighten the hold-down bolts of the pump and motor. Make sure the baseplate is properly grouted without voids or air pockets. |
| | The bearings are worn. | Replace the bearings. |
| | The suction or discharge piping is not anchored or properly supported. | Anchor the suction or discharge piping as necessary according to recommendations in the Hydraulic Institute Standards Manual. |
| | The pump is cavitating. | Locate and correct the system problem. |
| The mechanical seal is leaking excessively. | The packing gland is not adjusted properly. | Tighten the gland nuts. |
| | The stuffing box is not packed properly. | Check the packing and repack the box. |
| | The mechanical seal parts are worn. | Replace the worn parts. |
| | The mechanical seal is overheating. | Check the lubrication and cooling lines. |
| | The shaft or shaft sleeve is scored. | Machine or replace the shaft sleeve as necessary. |
| The motor requires excessive power. | The discharge head has dropped below the rated point and is pumping too much liquid. | Install a throttle valve. If this does not help, then trim the impeller diameter. If this does not help, then contact your ITT representative. |
| | The liquid is heavier than expected. | Check the specific gravity and viscosity. |
| | The stuffing-box packing is too tight. | Readjust the packing. If the packing is worn, then replace the packing. |
| | Rotating parts are rubbing against each other. | Check the parts that are wearing for proper clearances. |
| | The impeller clearance is too tight. | Adjust the impeller clearance. |

Alignment troubleshooting

| Symptom | Cause | Remedy |
|---|--|--|
| Horizontal (side-to-side) alignment cannot be obtained (angular or parallel). | The driver feet are bolt-bound. | Loosen the pump's hold-down bolts, and slide the pump and driver until you achieve horizontal alignment. |
| | The baseplate is not leveled properly and is probably twisted. | <ol style="list-style-type: none"> Determine which corners of the baseplate are high or low. Remove or add shims at the appropriate corners. Realign the pump and driver. |

Assembly troubleshooting

| Symptom | Cause | Remedy |
|---|---|--|
| There is excessive shaft end play. | The internal clearance of the bearings exceeds the recommended amount. | Replace the bearings with a bearing of the correct type. |
| | The snap ring is loose in the bearing-housing groove. | Re-seat the snap ring. |
| There is excessive shaft and sleeve runout. | The sleeve is worn. | Replace the sleeve. |
| | The shaft is bent. | Replace the shaft. |
| There is excessive bearing-frame flange runout. | The shaft is bent. | Replace the shaft. |
| | The flange of the bearing frame is distorted. | Replace the bearing-frame flange. |
| There is excessive frame-adapter runout. | There is corrosion on the frame adapter. | Replace the frame adapter. |
| | The adapter-to-frame gasket is not seated properly. | Re-seat the frame adapter and make sure that the adapter-to-frame gasket is seated properly. |
| There is excessive seal chamber or stuffing-box cover runout. | The seal chamber or the stuffing-box cover is not properly seated in the frame adapter. | Re-seat the seal chamber or stuffing-box cover. |
| | There is corrosion or wear on the seal chamber or stuffing-box cover. | Replace the seal chamber or stuffing-box cover. |
| There is excessive vane-tip runout of the impeller. | The vane is bent. | Replace the impeller. |

i-ALERT[®] Condition Monitor troubleshooting

To troubleshoot the i-ALERT[®]2 monitor, please refer to the i-ALERT[®]2 IOM or i-ALERT2.com.

| Symptom | Cause | Remedy |
|--|-----------------------------|---|
| There are no green or red flashing LEDs. | The battery is dead. | Replace the condition monitor. |
| | The unit is deactivated. | Activate the condition monitor. |
| | The unit is malfunctioning. | Consult your ITT representative for a warranty replacement. |
| The red LEDs are flashing, but the temperature and vibration are at acceptable levels. | The baseline is bad. | Check the temperature and vibration levels and reset the condition monitor. |
| | The unit is malfunctioning. | Consult your ITT representative for a warranty replacement. |

Parts Listings and Cross-Sectionals

Parts list

Table 25: Construction material and quantity

| Item | Quantity | Part name | Pump Material | | | | |
|------|----------|--|--|---------------------------|-----------|------------|--------------|
| | | | All D.I. | D.I. With 316 SS impeller | All 316SS | All CD4MCu | All Alloy 20 |
| 100 | 1 | Casing | 1012 | 1012 | 1203 | 1216 | 1204 |
| 101 | 1 | Impeller | 1013 | 1203 | 1203 | 1216 | 1204 |
| 105 | 1 | Lantern Ring | PTFE | | | | |
| 106 | 1 set | Stuffing Box Packing | Non-asbestos braid | | | | |
| 107 | 1 | Gland—Packed Box | 1203 | | | | 1204 |
| 108 | 1 | Frame Adapter | 1013 | | | | |
| 109C | 1*** | Outboard Bearing End Cover | 1001 | | | | |
| 112A | 1 | Outboard Bearing | Double row angular contact (duplex pair for LTI) | | | | |
| 113 | 2 | Plug—Grease Relief | 2210 | | | | |
| 113B | 1 | Plug—Oil Fill | 2210 | | | | |
| 122 | 1 | Shaft—Without Sleeve | 2229 | | | | 2230 |
| 122 | 1 | Shaft—With Sleeve | 2238 | | | | |
| 126 | 1 | Shaft Sleeve | 2229 | | | | 2230 |
| 134 | 1 | Bearing Housing | 1001 | | | | |
| 136 | 1 | Bearing Locknut | Steel | | | | |
| 168A | 1 | Radial Bearing | Single row ball | | | | |
| 184 | 1 | Seal Chamber/Stuffing Box Cover | 1012 | 1012 | 1203 | 1216 | 1204 |
| 193 | 2 | Grease Fitting | Steel | | | | |
| 228 | 1 | Bearing Frame | STi 1013, All others - 1001 | | | | |
| 236A | 10 | Cap Screw—Bearing Clamp Ring | 2210 | | | | |
| 239 | 1 | Support, Casing | – | – | 2201* | 2201* | 2201* |
| 241 | 1 | Frame Foot | 1001 | | | | |
| 248 | 1 | Oil Thrower | 2210 | | | | |
| 250 | 1 | Gland—Mechanical Seal | Material varies | | | | |
| 253B | 1 | Bearing Clamp Ring | 2210 | | | | |
| 319 | 1 | Sight Glass | Glass/steel | | | | |
| 332A | 1 | Outboard Labyrinth Seal w/O-rings | Brass ASTM B505-96 | | | | |
| 333A | 1 | Inboard Labyrinth Seal w/O-rings | Brass ASTM B505-96 | | | | |
| 351 | 1 | Casing Gasket | Aramid fiber w/EPDM | | | | |
| 353 | 4 | Gland Stud | 2228 | | | | |
| 355 | 4 | Gland Stud Nut | 2228 | | | | |
| 358 | 1 | Plug—Casing Drain | 2210 | | | 2229 | 2230 |
| 358Y | 1 *** | Plug, Impeller | 2229 | | | 2230 | |
| 360C | 1 *** | Gasket—Thrust End Cover | Buna | | | | |
| 360D | 1 | Gasket—Frame-to-Adapter | Buna | | | | |
| 360Q | 1 | Gasket—Gland-to-Stuffing Box Cover | Material varies | | | | |
| 361A | 1 | Retaining Ring | Steel | | | | |
| 370 | **** | Bolt—Adapter to Case | 2210 | | | 2228 | |
| 370B | 4 | Bolt—Frame-to-Adapter | 2210 | | | | |
| 370C | ** | Clamp Bolt —Bearing Housing | 2210 | | | | |
| 370D | ** | Jack Bolt—Bearing Housing | 2210 | | | | |
| 370F | 2 | Bolt—Frame Foot to Frame | 2210 | | | | |
| 370H | 2 | Stud—Stuffing Box Cover-to-Adapter | 2228 | | | | |
| 370Y | 2 | Bolt—Cap Casing to Support | – | – | 2210* | | |
| 371C | 6 *** | Cap Screw-End Cover to Bearing Housing | 2210 | | | | |
| 382 | 1 | Bearing Lockwasher | Steel | | | | |
| 383 | 1 | Mechanical Seal | Material varies | | | | |
| 400 | 1 | Coupling Key | 2210 | | | | |

| Item | Quantity | Part name | Pump Material | | | | |
|------|----------|---|-----------------------|---------------------------|-----------|------------|--------------|
| | | | All D.I. | D.I. With 316 SS impeller | All 316SS | All CD4MCu | All Alloy 20 |
| 408A | 1 | Plug—Oil Drane | 2210 | | | | |
| 408H | 4 | Plug—Oil Mist Connection | 2210 | | | | |
| 408J | 1 | Plug—Oiler | 2210 | | | | |
| 408L | 1 | Plug—Oil Cooler Inlet | 2210 | | | | |
| 408M | 1 | Plug—Oil Cooler Outlet | 2210 | | | | |
| 408N | 1 | Plug—Sight Glass | 2210 | | | | |
| 412A | 1 | O-Ring, Graphoil Impeller | — | — | * | | |
| 418 | 3 | Jack Bolt—Adapter-to-Case | 2228 | | | | |
| 423 | 3 | Jam Nut—Bearing Housing Jack Bolt | 2210 | | | | |
| 423B | 2 | Hex Nut—Stuffing Box Cover to Adapter | 2228 | | | | |
| 428 | 1 | Gasket, Plug | PTFE | | | | |
| 437 | 1 | Lockwasher, Casing to Support | — | — | 2210* | | |
| 458Y | 1 *** | Plug, Impeller | 2229 | | | 2230 | |
| 469B | 2 | Dowel Pin—Frame-to-Adapter | Steel | | | | |
| 494 | 1 | Tube Element, Finned Cooled | 304SS / Copper | | | | |
| 496 | 1 | O-Ring Bearing Housing | Buna N | | | | |
| 412A | 1 | O-Ring—Impeller | Viton | | | | |
| 497F | 1 | O-Ring—Outboard Labyrinth Rotor | Viton | | | | |
| 497G | 1 | O-Ring—Outboard Labyrinth Stator | Viton | | | | |
| 497H | 1 | O-Ring—Inboard Labyrinth Rotor | Viton | | | | |
| 497J | 1 | O-Ring—Inboard Labyrinth Stator | Viton | | | | |
| 497L | 1 | O-Ring Internal (inboard) | Viton | | | | |
| 497N | 1 | O-Ring Internal (outboard) | Viton | | | | |
| 503 | 1 | Adapter Ring | 1013 | | | | |
| 529 | 1 | Lockwasher—Frame Foot-to-Bearing Frame | Steel | | | | |
| 555 | 1 | Tube, Finned Cooling Assembly | 304AA / Copper | | | | |
| 555A | 1 | Tube, Ftg Male (Frame Cooling) | Brass | | | | |
| 555B | 2 | Connector, Thermocouple (Frame Cooling) | Brass | | | | |
| 555C | 2 | Elbow, Female (Frame Cooling) | Brass | | | | |
| 555D | 1 | Conn TC Sealed PWR | Cast iron | | | | |
| 761B | 1 | i-ALERT® Condition Monitor | Stainless steel/epoxy | | | | |

Table 26: Construction material and quantity (continued)

| Item | Quantity | Part name | Pump Material | | | | |
|------|----------|---------------------------------|--|-----------|------------|-----------------|-----------------|
| | | | All 317SS | All Monel | All Nickel | All Hastelloy C | All Hastelloy B |
| 100 | 1 | Casing | 1209 | 1119 | 1601 | 1215 | 1217 |
| 101 | 1 | Impeller | 1209 | 1119 | 1601 | 1215 | 1217 |
| 105 | 1 | Lantern Ring | PTFE | | | | |
| 106 | 1 set | Stuffing Box Packing | Non-asbestos braid | | | | |
| 107 | 1 | Gland—Packed Box | 1209 | 1119 | 1601 | 1215 | 1217 |
| 108 | 1 | Frame Adapter | 1013 | | | | |
| 109C | 1*** | Outboard Bearing End Cover | 1001 | | | | |
| 112A | 1 | Outboard Bearing | Double row angular contact (duplex pair for LTI) | | | | |
| 113 | 2 | Plug—Grease Relief | 2210 | | | | |
| 113B | 1 | Plug—Oil Fill | 2210 | | | | |
| 122 | 1 | Shaft—Less Sleeve | 2232 | 2150 | 2155 | 2248 | 2247 |
| 122 | 1 | Shaft—With Sleeve | 2229 | | | | |
| 126 | 1 | Shaft Sleeve | 2232 | 2150 | 2155 | 2248 | 2247 |
| 134 | 1 | Bearing Housing | 1001 | | | | |
| 136 | 1 | Bearing Locknut | Steel | | | | |
| 168A | 1 | Radial Bearing | Single row ball | | | | |
| 184 | 1 | Seal Chamber/Stuffing Box Cover | 1209 | 1119 | 1601 | 1215 | 1217 |
| 193 | 2 | Grease Fitting | Steel | | | | |

| Item | Quantity | Part name | Pump Material | | | | |
|------|----------|--|-----------------------------|-----------|------------|-----------------|-----------------|
| | | | All 317SS | All Monel | All Nickel | All Hastelloy C | All Hastelloy B |
| 228 | 1 | Bearing Frame | STi-1013, All others - 1001 | | | | |
| 236A | 10 | Cap Screw—Bearing Clamp Ring | 2210 | | | | |
| 239 | 1 | Support, Casing | — | — | — | 2201* | — |
| 241 | 1 | Frame Foot | 1001 | | | | |
| 248 | 1 | Oil Thrower | 2210 | | | | |
| 250 | 1 | Gland—Mechanical Seal | Material varies | | | | |
| 253B | 1 | Bearing Clamp Ring | 2210 | | | | |
| 319 | 1 | Sight Glass | Glass/steel | | | | |
| 332A | 1 | Outboard Labyrinth Seal w/O-rings | Brass ASTM B505-96 | | | | |
| 333A | 1 | Inboard Labyrinth Seal w/O-rings | Brass ASTM B505-96 | | | | |
| 351 | 1 | Casing Gasket | Aramid fiber w/EPDM | | | | |
| 353 | 4 | Gland Stud | 2232 | 2150 | 2155 | 2248 | 2247 |
| 355 | 4 | Gland Stud Nut | 2232 | 2150 | 2155 | 2248 | 2247 |
| 358 | 1 | Plug—Casing Drain | 2232 | 2150 | 2156 | 2248 | 2247 |
| 358Y | 1 *** | Plug, Impeller | 2232 | 2150 | 2156 | 2248 | 2156 |
| 360C | 1 *** | Gasket—Thrust End Cover | Buna | | | | |
| 360D | 1 | Gasket—Frame-to-Adapter | Buna | | | | |
| 360Q | 1 | Gasket—Gland-to-Stuffing Box Cover | Material varies | | | | |
| 361A | 1 | Retaining Ring | Steel | | | | |
| 370 | **** | Bolt—Adapter to Case | 2228 | | | | |
| 370B | 4 | Bolt—Frame-to-Adapter | 2210 | | | | |
| 370C | ** | Clamp Bolt —Bearing Housing | 2210 | | | | |
| 370D | ** | Jack Bolt—Bearing Housing | 2210 | | | | |
| 370F | 2 | Bolt—Frame Foot to Frame | 2210 | | | | |
| 370H | 2 | Stud—Stuffing Box Cover-to-Adapter | 2228 | | | | |
| 370H | 2 | Bolt—Cap Casing to Support | — | — | — | 2210* | — |
| 371C | 6 *** | Cap Screw-End Cover to Bearing Housing | 2210 | | | | |
| 382 | 1 | Bearing Lockwasher | Steel | | | | |
| 383 | 1 | Mechanical Seal | Material varies | | | | |
| 400 | 1 | Coupling Key | 2210 | | | | |
| 408A | 1 | Plug—Oil Drane | 2210 | | | | |
| 408H | 4 | Plug—Oil Mist Connection | 2210 | | | | |
| 408J | 1 | Plug—Oiler | 2210 | | | | |
| 408L | 1 | Plug—Oil Cooler Inlet | 2210 | | | | |
| 408M | 1 | Plug—Oil Cooler Outlet | 2210 | | | | |
| 408N | 1 | Plug—Sight Glass | 2210 | | | | |
| 412A | 1 | O-Ring, Graphoil Impeller | — | — | — | * | — |
| 418 | 3 | Jack Bolt—Adapter-to-Case | 2228 | | | | |
| 423 | 3 | Jam Nut—Bearing Housing Jack Bolt | 2210 | | | | |
| 423B | 2 | Hex Nut—Stuffing Box Cover to Adapter | 2228 | | | | |
| 428 | 1 | Gasket, Plug | PTFE | | | | |
| 437 | 1 | Lockwasher, Casing to Support | — | — | — | 2210* | — |
| 458Y | 1*** | Plug, Impeller | 2232 | 2150 | 2155 | 2248 | 2247 |
| 469B | 2 | Dowel Pin—Frame-to-Adapter | Steel | | | | |
| 494 | 1 | Tube Element, Finned Cooled | 304SS / Copper | | | | |
| 496 | 1 | O-Ring Bearing Housing | Buna N | | | | |
| 412A | 1 | O-Ring—Impeller | Viton | | | | |
| 497F | 1 | O-Ring—Outboard Labyrinth Rotor | Viton | | | | |
| 497G | 1 | O-Ring—Outboard Labyrinth Stator | Viton | | | | |
| 497H | 1 | O-Ring—Inboard Labyrinth Rotor | Viton | | | | |
| 497J | 1 | O-Ring—Inboard Labyrinth Stator | Viton | | | | |
| 497L | 1 | O-Ring Internal (inboard) | Viton | | | | |
| 497N | 1 | O-Ring Internal (outboard) | Viton | | | | |
| 503 | 1 | Adapter Ring | 1013 | | | | |

| Item | Quantity | Part name | Pump Material | | | | |
|------|----------|---|-----------------------|-----------|------------|-----------------|-----------------|
| | | | All 317SS | All Monel | All Nickel | All Hastelloy C | All Hastelloy B |
| 529 | 1 | Lockwasher—Frame Foot-to-Bearing Frame | Steel | | | | |
| 555 | 1 | Tube, Finned Cooling Assembly | 304AA / Copper | | | | |
| 555A | 1 | Tube, Ftg Male (Frame Cooling) | Brass | | | | |
| 555B | 2 | Connector, Thermocouple (Frame Cooling) | Brass | | | | |
| 555C | 2 | Elbow, Female (Frame Cooling) | Brass | | | | |
| 555D | 1 | Conn TC Sealed PWR | Cast iron | | | | |
| 761B | 1 | i-ALERT® Condition Monitor | Stainless steel/epoxy | | | | |

Table 27: Construction material and quantity (continued)

| Item | Quantity | Part name | Pump Material (3196, HT 3196, CV 3196, 3796) | Pump Material (NM 3196) | Pump Material (3198) |
|------|----------|------------------------------------|--|-------------------------|----------------------|
| | | | All Titanium | Vinylester | D.I./PFA |
| 100 | 1 | Casing | 1220 | 6929 | 9639 |
| 101 | 1 | Impeller | 1220 | 6929 | 6944 |
| 105 | 1 | Lantern Ring | PTFE | — | — |
| 106 | 1 set | Stuffing Box Packing | Non-asbestos braid | — | — |
| 107 | 1 | Gland—Packed Box | 1220 | — | — |
| 108 | 1 | Frame Adapter | 1013 | | |
| 109C | 1*** | Outboard Bearing End Cover | 1001 | | |
| 112A | 1 | Outboard Bearing | Double row angluar contact (duplex pair for LTi) | | |
| 113 | 2 | Plug—Grease Relief | 2210 | | |
| 113B | 1 | Plug—Oil Fill | 2210 | | |
| 122 | 1 | Shaft—Less Sleeve | 2156 | 2229 | — |
| 122 | 1 | Shaft—With Sleeve | 2229 | | 6947 |
| 126 | 1 | Shaft Sleeve | 2156 | 2229 | — |
| 134 | 1 | Bearing Housing | 1001 | | |
| 136 | 1 | Bearing Locknut | Steel | | |
| 168A | 1 | Radial Bearing | Single row ball | | |
| 184 | 1 | Seal Chamber/Stuffing Box Cover | 1220 | 6929 | 9639 |
| 193 | 2 | Grease Fitting | Steel | | |
| 228 | 1 | Bearing Frame | STi - 1013, All others - 1001 | | |
| 236A | 10 | Cap Screw—Bearing Clamp Ring | 2210 | | |
| 239 | 1 | Support, Casing | — | — | — |
| 241 | 1 | Frame Foot | 1001 | | |
| 248 | 1 | Oil Thrower | 2210 | | |
| 250 | 1 | Gland—Mechanical Seal | Material varies | | |
| 253B | 1 | Bearing Clamp Ring | 2210 | | |
| 319 | 1 | Sight Glass | Glass/steel | | |
| 332A | 1 | Outboard Labyrinth Seal w/O-rings | Brass ASTM B505-96 | | |
| 333A | 1 | Inboard Labyrinth Seal w/O-rings | Brass ASTM B505-96 | | |
| 351 | 1 | Casing Gasket | Aramid fiber w/EPDM | | |
| 353 | 4 | Gland Stud | 2156 | 2229 | 2229 |
| 355 | 4 | Gland Stud Nut | 2156 | 2229 | 2229 |
| 358 | 1 | Plug—Casing Drain | 2156 | — | — |
| 358Y | 1*** | Plug, Impeller | 2156 | — | — |
| 360C | 1*** | Gasket—Thrust End Cover | Buna | | |
| 360D | 1 | Gasket—Frame-to-Adapter | Buna | | |
| 360Q | 1 | Gasket—Gland-to-Stuffing Box Cover | Material varies | | |
| 361A | 1 | Retaining Ring | Steel | | |
| 370 | **** | Bolt—Adapter to Case | 2228 | | |
| 370B | 4 | Bolt—Frame-to-Adapter | 2210 | | |
| 370C | ** | Clamp Bolt —Bearing Housing | 2210 | | |
| 370D | **I | Jack Bolt—Bearing Housing | 2210 | | |
| 370F | 2 | Bolt—Frame Foot to Frame | 2210 | | |

| Item | Quantity | Part name | Pump Material (3196, HT 3196, CV 3196, 3796) | Pump Material (NM 3196) | Pump Material (3198) |
|------|----------|---|--|-------------------------|----------------------|
| | | | All Titanium | Vinylester | D.I./PFA |
| 370H | 2 | Stud—Stuffing Box Cover-to-Adapter | 2228 | | |
| 370Y | 2 | Bolt—Cap Casing to Support | — | — | — |
| 371C | 6 *** | Cap Screw—End Cover to Bearing Housing | 2210 | | |
| 382 | 1 | Bearing Lockwasher | Steel | | |
| 383 | 1 | Mechanical Seal | Material varies | | |
| 400 | 1 | Coupling Key | 2210 | | |
| 408A | 1 | Plug—Oil Drane | 2210 | | |
| 408H | 4 | Plug—Oil Mist Connection | 2210 | | |
| 408J | 1 | Plug—Oiler | 2210 | | |
| 408L | 1 | Plug—Oil Cooler Inlet | 2210 | | |
| 408M | 1 | Plug—Oil Cooler Outlet | 2210 | | |
| 408N | 1 | Plug—Sight Glass | 2210 | | |
| 412A | 1 | O-Ring, Graphoil Impeller | — | — | — |
| 418 | 3 | Jack Bolt—Adapter-to-Case | 2228 | | |
| 423 | 3 | Jam Nut—Bearing Housing Jack Bolt | 2210 | | |
| 423B | 2 | Hex Nut—Stuffing Box Cover to Adapter | 2228 | | |
| 428 | 1 | Gasket, Plug | PTFE | | |
| 437 | 1 | Lockwasher, Casing to Support | — | — | — |
| 458Y | 1 *** | Plug, Impeller | 2156 | — | — |
| 469B | 2 | Dowel Pin—Frame-to-Adapter | Steel | | |
| 494 | 1 | Tube Element, Finned Cooled | 304SS / Copper | | |
| 496 | 1 | O-Ring Bearing Housing | Buna N | | |
| 412A | 1 | O-Ring—Impeller | Viton | | |
| 497F | 1 | O-Ring—Outboard Labyrinth Rotor | Viton | | |
| 497G | 1 | O-Ring—Outboard Labyrinth Stator | Viton | | |
| 497H | 1 | O-Ring—Inboard Labyrinth Rotor | Viton | | |
| 497J | 1 | O-Ring—Inboard Laybrinth Stator | Viton | | |
| 497L | 1 | O-Ring Internal (inboard) | Viton | | |
| 497N | 1 | O-Ring Internal (outboard) | Viton | | |
| 503 | 1 | Adapter Ring | 1013 | | |
| 529 | 1 | Lockwasher—Frame Foot-to-Bearing Frame | Steel | | |
| 555 | 1 | Tube, Finned Cooling Assembly | 304AA / Copper | | |
| 555A | 1 | Tube, Ftg Male (Frame Cooling) | Brass | | |
| 555B | 2 | Connector, Thermocouple (Frame Cooling) | Brass | | |
| 555C | 2 | Elbow, Female (Frame Cooling) | Brass | | |
| 555D | 1 | Conn TC Sealed PWR | Cast iron | | |
| 761B | 1 | i-ALERT® Condition Monitor | Stainless steel/epoxy | | |

Table 28: Key to table symbols

| | |
|------|---|
| — | Not applicable |
| * | Only applicable for HT 3196 |
| ** | 3 for STi, MTi, LTi 4 for XLT-i, i17 |
| *** | XLT-I and i17 only |
| **** | 4 for 6 in. STi 8 for 8 in. STi and MTi 16 for 13 in. MTi, LTi, XLT-I 24 for 15 in. XLT-I 12 for 10 in. MTi, LTi, i17 |

Table 29: Material-code reference

| Material | Goulds material code | ASTM | Din | ISO | JIS |
|------------------------|----------------------|------------------------|--------|-----|---------------|
| Cast Iron | 1001 | A48 CLASS 20 | | | |
| Ductile Iron | 1012 | A395 Gr60-40-18 | | | |
| Ductile Iron | 1013 | A536 Gr60-42-10 | | | |
| CD4MCu | 1041 | A744 CD4MCU | | | |
| Monel | 1119 | A494 GrM-35-1 | | | |
| 316SS | 1203 | A744 CF-8M | 1.4408 | | G5121 (SC514) |
| Alloy 20 | 1204 | A744CN-7M | 1.4500 | | |
| 317SS | 1209 | A744CG-8M | 1.4448 | | |
| Hastelloy C | 1215 | A494 CW-6M | | | |
| CD4MCu | 1216 | A744CD4MCU | 9.4460 | | |
| Hastelloy B | 1217 | A494 N-7M | | | |
| Titanium | 1220 | B367 GrC-3 | | | |
| Nickel | 1601 | A494 GrCZ100 | | | |
| Monel | 2150 | B164 UNS N04400 | | | |
| Nickel | 2155 | B160 UNS N02200 | | | |
| Titanium | 2156 | B348 Gr2 | | | |
| Carbon Steel | 2201 | A576 Gr. 1018 and 1020 | | | |
| Carbon Steel | 2210 | A108Gr1211 | | | |
| 304SS | 2228 | A276 Type 304 | | | |
| 316SS | 2229 | A276 Type 316 | | | |
| Alloy 20 | 2230 | B473 (N08020) | | | |
| 317SS | 2232 | A276 | | | |
| 4150 Steel | 2237 | A322Gr4150 | | | |
| 4140 Steel | 2238 | A434Gr4140 | | | |
| 4140 Steel | 2239 | A193 Gr. B7 | | | |
| Alloy B-2 | 2247 | B335 (N10665) | | | |
| Alloy C-276 | 2248 | B574 (N10276) | | | |
| GMP-2000 | 6929 | N/A | | | |
| PFA Lined Steel | 6944 | N/A | | | |
| PFA Lined 316SS | 6947 | N/A | | | |
| PFA Lined Ductile Iron | 9639 | N/A | | | |

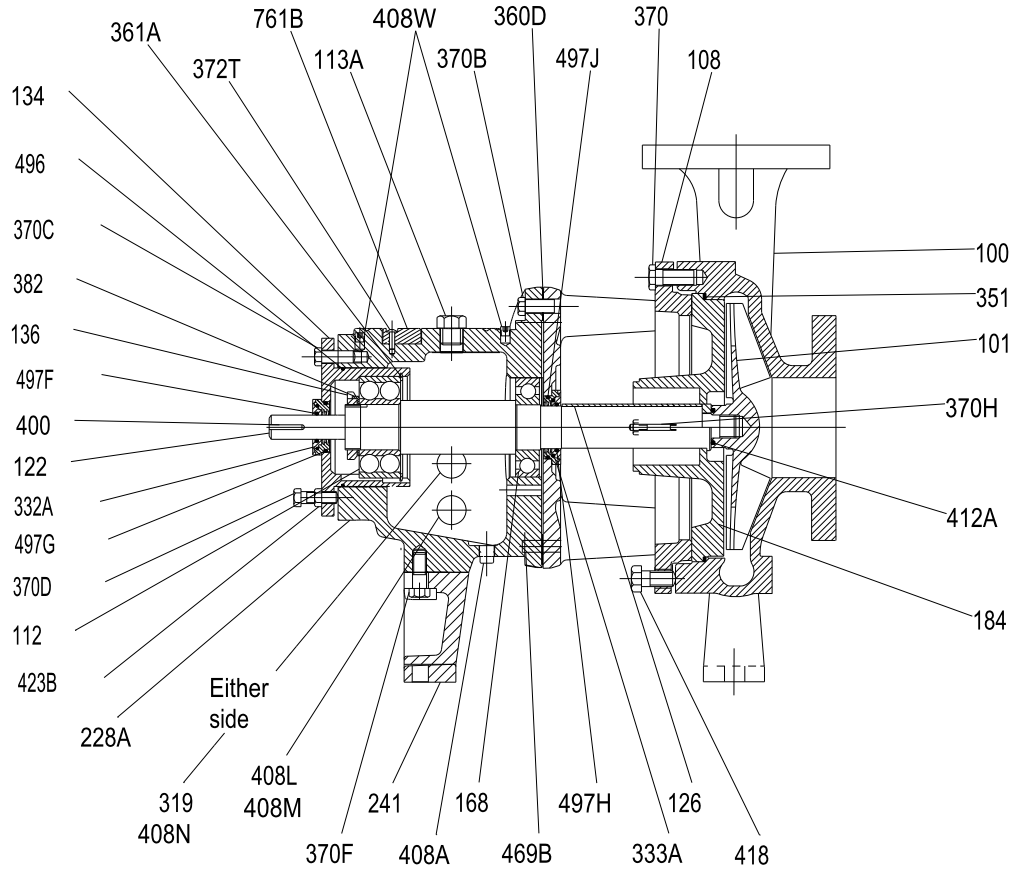


Figure 134: 3196 cross-sectional drawing

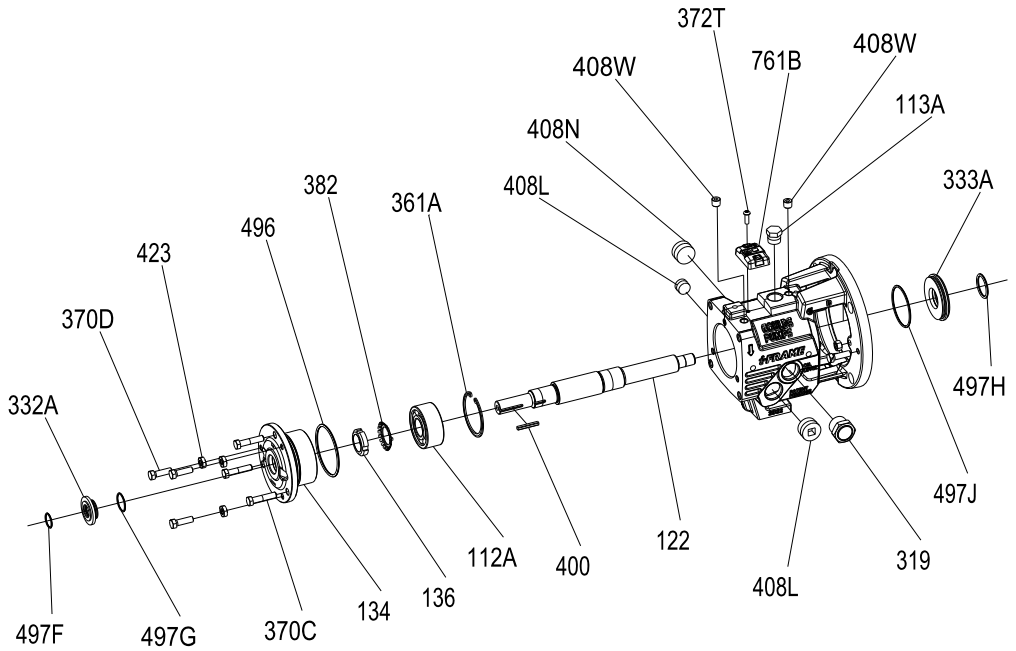


Figure 135: STi bearing-frame exploded view

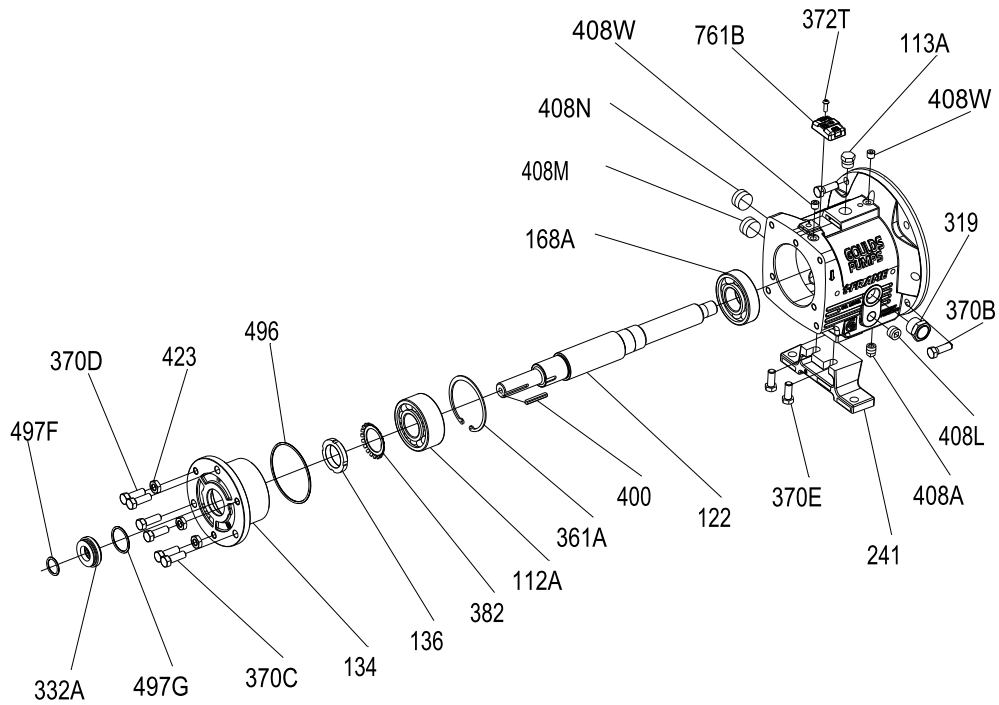


Figure 136: MTi bearing-frame exploded view

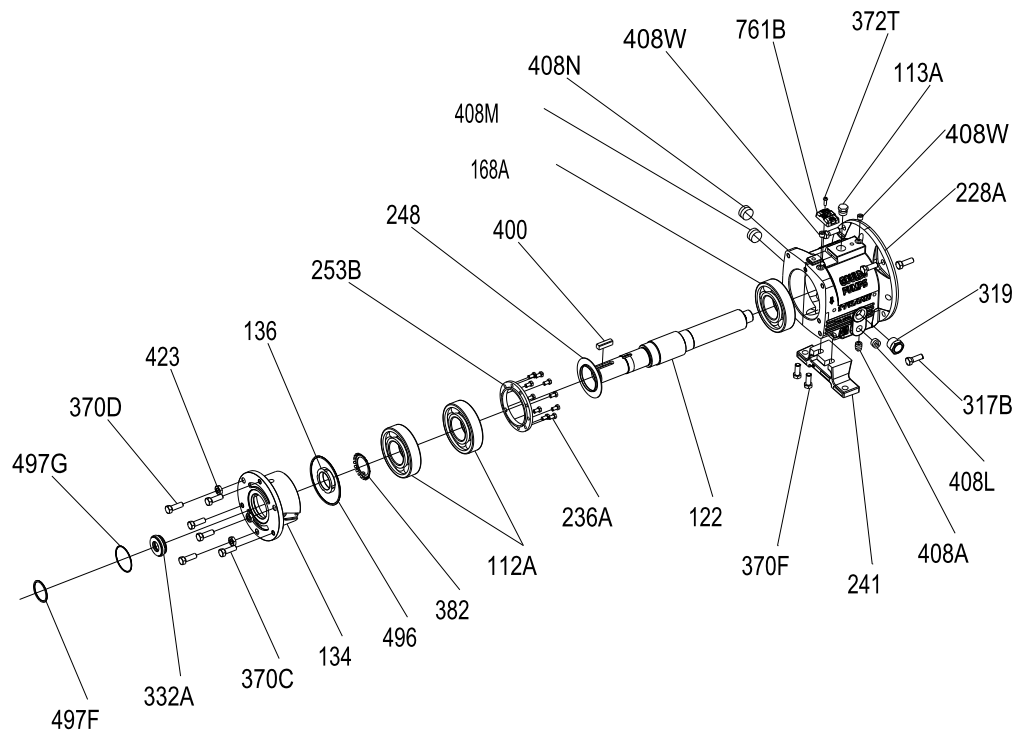


Figure 137: LTi bearing-frame exploded view

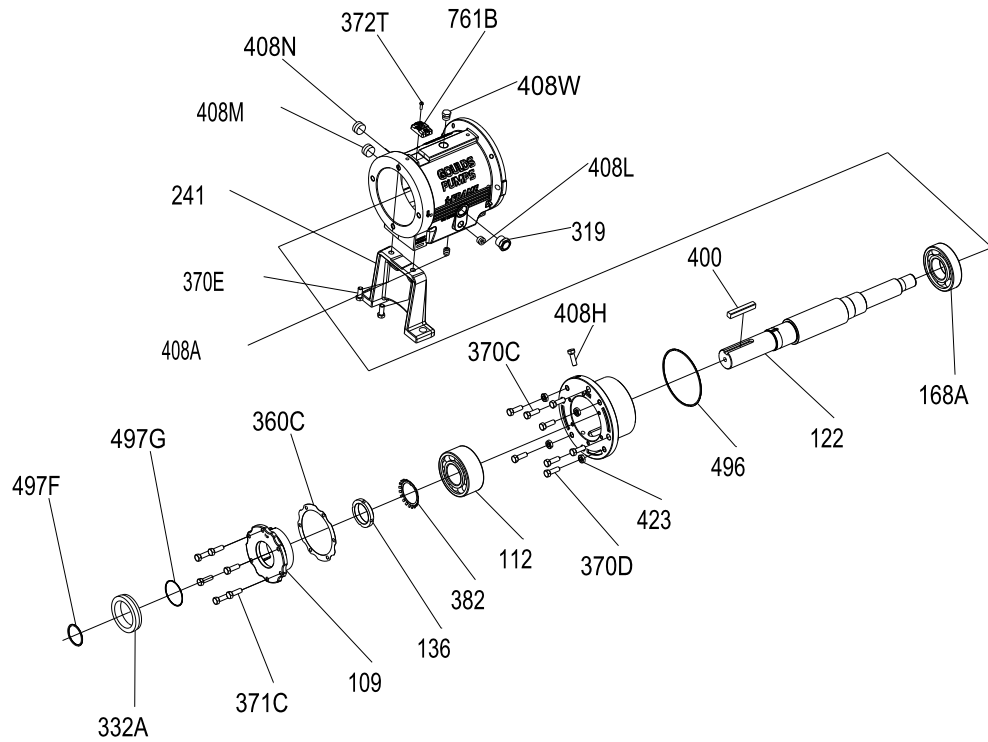


Figure 138: XLT-i bearing-frame exploded view

The finned-tube oil cooler is standard on HT 3196 and optional on all other models.

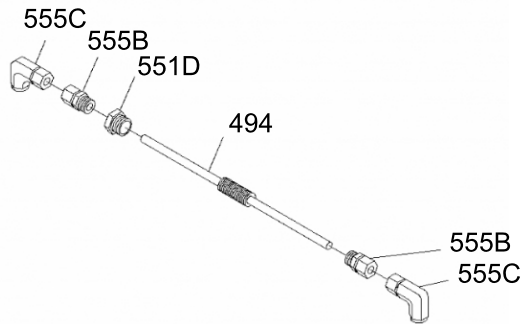


Figure 139: Finned-tube oil cooler exploded view

Certification: CE or CE ATEX

Certificates of conformance

CSA Certificate



CSA INTERNATIONAL

Certificate of Compliance

| | | | |
|--------------|---|------------------|------------|
| Certificate: | 1992885 | Master Contract: | 216924 |
| Project: | 2254252 | Date Issued: | 2009/12/16 |
| Issued to: | ITT Corporation 240 Fall St Seneca Falls, NY 13148 USA Attention: Anthony Starale | | |

The products listed below are eligible to bear the CSA Mark shown with adjacent indicators 'C' and 'US' for Canada and US or with adjacent indicator 'US' for US only or without either indicator for Canada only.



D. Simpson, Certifier
 Issued by: D. Simpson, Certifier

PRODUCTS

CLASS 2258 03 - PROCESS CONTROL EQUIPMENT - Intrinsically Safe and Non-Incendive Systems - For Hazardous Locations
CLASS 2258 83 - PROCESS CONTROL EQUIPMENT-Intrinsically Safe and Non-Incendive - Systems-For Hazardous Locations-Certified to U.S. Standards


Class I, Division 1, Group A, B, C and D, Class II, Group E, F and G, Class III

- Condition Monitor, Model LCCM, p/n C07667A, battery operated (non-replaceable, non-rechargeable), intrinsically safe, temperature code T4 (at max ambient of 100C).



APPLICABLE REQUIREMENTS

CAN/CSA-C22.2 No. 0-M91 - General Requirements - Canadian Electrical Code, Part II
 CAN/CSA-C22.2 No. 157-02 - Intrinsically Safe and Non-Incendive Equipment for Use in Hazardous Locations
 UL Std No 913, Ed. 7 - Intrinsically Safe Apparatus and Associated Apparatus for Use in Class I, II and III, Division 1, Hazardous Locations

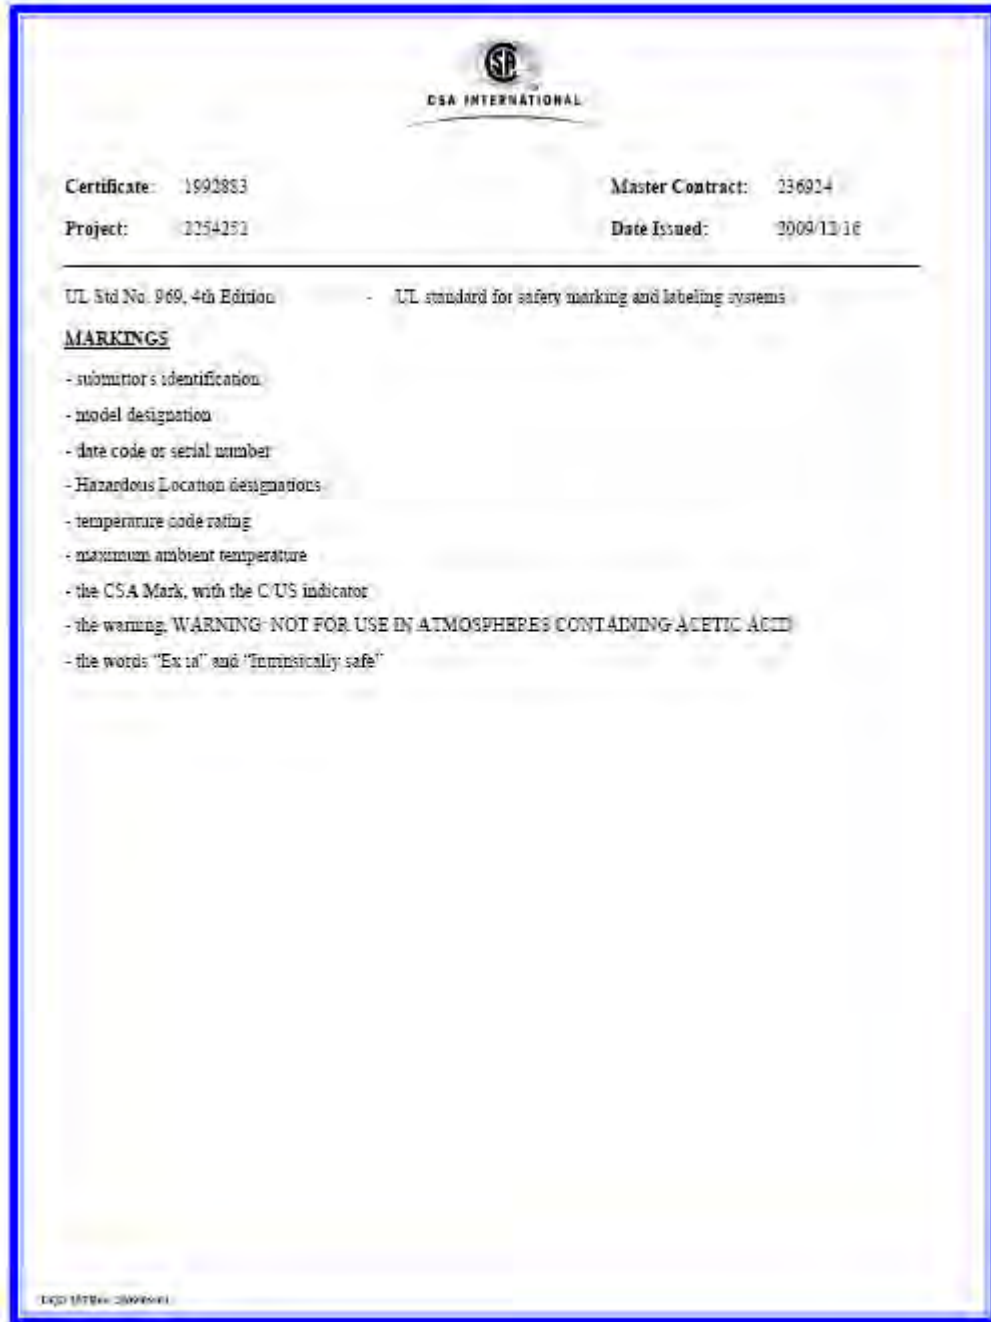EQD 517 Rev. 0209-06-01



ATEX notification

DET NORSKE VERITAS

PRODUCTION QUALITY ASSURANCE NOTIFICATION

[2] **EQUIPMENT OR PROTECTED SYSTEM INTENDED FOR USE IN POTENTIALLY EXPLOSIVE ATMOSPHERES DIRECTIVE 94/9/EC**

[3] Notification Number: **DNV-2008-OSL-ATEX-30303Q** Rev. 1

[4] Equipment or Protective Systems or components as listed: **Intrinsically safe equipment.**
 (The EC-Type Examination Certificates based on this notification are listed by the notified body)

[5] Applicant—Manufacturer or Authorized Representative in the Community: **ITT Industries, Goulds Pumps
 204 Fall St.,
 Seneca Falls, New York 13148 USA**

[6] Manufacturer: **ITT Industries, Goulds Pumps**


[7] DNV, notified body number 0575 for Annex IV in accordance with Article 9 of the Council Directive 94/9/EC of 23 March 1994, notifies to the applicant that the actual manufacturer has a production quality system which complies to Annex IV of the Directive.


[8] This notification is based on audit report: **2008-3354**
 This notification can be withdrawn if the manufacturer no longer satisfies the requirements of Annex IV
Results of periodical re-assessment of the manufacturing process is a part of this notification.


[9] This notification is valid until **2011-06-25** and can be withdrawn if the manufacturer does not satisfy the production quality re-assessment.

[10] According to article 10[1] of the Directive 94/9/EC the CE marking shall be followed by the identification Number 0575 identifying the notified body involved in the production control stage.

Høvik, 2008-09-05
 for Det Norske Veritas Certification AS


Marianne Spæren
Certification Manager


NOTIFIED BODY
 ACCREDITED TO EN ISO 9001


Bjørn Spongsveen
Technical Reviewer

Notice: This notification may only be reproduced in its entirety and without any change.

If any person desires a copy of this notification or wishes to have a copy of this notification for any other purpose, they should contact the notified body. The notified body shall provide a copy of this notification for a fee. The notified body shall not be responsible for any loss or damage to the original notification. The responsibility for the accuracy of the information provided for the purpose of this notification shall remain with the applicant. The notified body shall make the information available to the public in its publications, brochures, websites, and any other means available to the public.

IECEx Certificate of Conformity

|  | | <h2 style="margin: 0;">IECEx Certificate of Conformity</h2> | |
|--|---|---|---|
| <p>INTERNATIONAL ELECTROTECHNICAL COMMISSION IEC Certification Scheme for Explosive Atmospheres <small>for rules and details of the IECEx Scheme visit www.iecex.com</small></p> | | | |
| Certificate No.: | IECEx LCI 08.0038 | Issue No.: | 0 |
| Status: | Current | | |
| Date of Issue: | 2008-09-16 | Page 1 of 3 | |
| Applicant: | ITT Corp. Goulds pumps 240 Fall Street Seneca Falls, NY 13148 United States of America | | |
| Electrical Apparatus: Optional accessory: | Condition Monitor | | |
| Type of Protection: | ia | | |
| Marking: | ITT Corp. Goulds pumps 240 Fall Street Seneca Falls, NY 13148 U.S.A. Condition Monitor Type : LCCM, p/n C07667A Ex ia IIC T4 Tamb : -40°C à 100°C | | |
| Approved for issue on behalf of the IECEx Certification Body: | Marc Giliaux Ex Certification Manager | | |
| Signature: (for printed version) |  | | |
| Date: | Le 16 Septembre 2008 | | |
| <p>1. This certificate and schedule may only be reproduced in full. 2. This certificate is not transferable and remains the property of the issuing body. 3. The Status and authenticity of this certificate may be verified by visiting the Official IECEx Website.</p> | | | |
| Certificate issued by: | |  | |
| Laboratoire Central des Industries Electriques (LCIE) 33 Avenue du General Leclerc FR-92260 Fontenay-aux-Roses France | |  | |

| | | | |
|--|---|---|---|
|  | | <h2 style="margin: 0;">IECEX Certificate of Conformity</h2> | |
| Certificate No.: | IECEX LC# 08.0038 | Issue No.: | 0 |
| Date of Issue: | 2008-09-16 | Page 2 of 3 | |
| Manufacturer: | ITT Corp. Goulds pumps 240 Fall Street Seneca Falls, NY 13148 United States of America | | |
| Manufacturing location(s): | | | |
| <p>This certificate is issued as verification that a sample(s), representative of production, was assessed and tested and found to comply with the IEC Standard (set below) and that the manufacturer's quality system, relating to the Ex products covered by this certificate, was assessed and found to comply with the IECEx Quality system requirements. This certificate is granted subject to the conditions as set out in IECEx Scheme Rules, IECEx CP and Operational Documents as amended.</p> | | | |
| <p>STANDARDS: The electrical apparatus and any acceptable variations to it specified in the schedule of this certificate and the identified documents, was found to comply with the following standards:</p> | | | |
| IEC 60079-0 : 2004 | Electrical apparatus for explosive gas atmospheres - Part 0: General requirements. | | |
| Edition: 4.0 | | | |
| IEC 60079-11 : 2006 | Explosive atmospheres - Part 11: Equipment protection by intrinsic safety "I" | | |
| Edition: 5 | | | |
| <p><i>This Certificate does not indicate compliance with electrical safety and performance requirements other than those expressly included in the Standards listed above.</i></p> | | | |
| <p>TEST & ASSESSMENT REPORTS: A sample(s) of the equipment listed has successfully met the examination and test requirements as recorded in:</p> | | | |
| <p><u>Test Report:</u> FPLCPEX (PRO) 004300</p> | | | |
| <p><u>Quality Assessment Report:</u> NQENVCAR08.000900</p> | | | |

Chinese Certificate of Conformity


CONFORMITY CERTIFICATE OF EXPLOSION-PROOF

 Certificate No.: **CE082171**

Name of Product: Condition Monitor
Type of Product: LCCM, p/n C07667A
Marking: **Exia II CT4**
Technical Documents: /
Drawing No.: C07667A
Note (s): 1. The power is supplied by PANASONIC battery.
The battery type is BR2477A 3V.
2. The manufacturer address: Goulds pumps, 240
Fall Street, Seneca Falls, NY 13148, U.S.A.

By verifying the drawings and technical documents and checking samples, the product complies with the following standards currently valid in P.R.China:
GB3836.1-2000 GB3836.4-2000

Issued to: ITT Corp.
Date of Expire: 2013-12-22
Date of Issue: 2008-12-22

 Director 
Xu Gang

Supervision & Test Center of Ex- products of China
Petroleum & Chemical Industry

PCEC has been approved by


注: 本证书只对送检样品一致的产品有效。
Note: This certificate is only valid for the products that are in accord with sample(s) tested and verified.
中心地址-中国天津市丁字路二号路85号 邮政编码: 300131 电话/传真: 022-26651066/26689116
Center Addr: No.85 No.2 Road DingZiGuo Tianjin China Post code: 300131 Tel/ Fax: 022-26651066/26689116
E-mail: ccc@pcec.com.cn http://www.pcec.com.cn

Other Relevant Documentation or Manuals

For additional documentation

For any other relevant documentation or manuals, contact your ITT representative.

Local ITT Contacts

Regional offices

| Region | Address | Telephone | Fax |
|------------------------------|--|------------------|------------------|
| North America (Headquarters) | ITT - Goulds Pumps 240 Fall Street Seneca Falls, NY 13148 USA | +1 315-568-2811 | +1 315-568-2418 |
| Asia Pacific | ITT Industrial Process 10 Jalan Kilang #06-01 Singapore 159410 | +65 627-63693 | +65 627-63685 |
| Europe | ITT - Goulds Pumps Millwey Rise Industrial Estate Axminster, Devon, England EX13 5HU | +44 1297-630250 | +44 1297-630256 |
| Latin America | ITT - Goulds Pumps Camino La Colina # 1448 Condominio Industrial El Rosal Huechuraba Santiago 8580000 Chile | +562 544-7000 | +562 544-7001 |
| Middle East and Africa | ITT - Goulds Pumps Achileos Kyrou 4 Neo Psychiko 115 25 Athens Greece | +30 210-677-0770 | +30 210-677-5642 |

Visit our website for the latest version of this document and more information:
<http://www.gouldspumps.com>



ENGINEERED FOR LIFE

240 Fall Street
Seneca Falls, NY 13148
USA